 


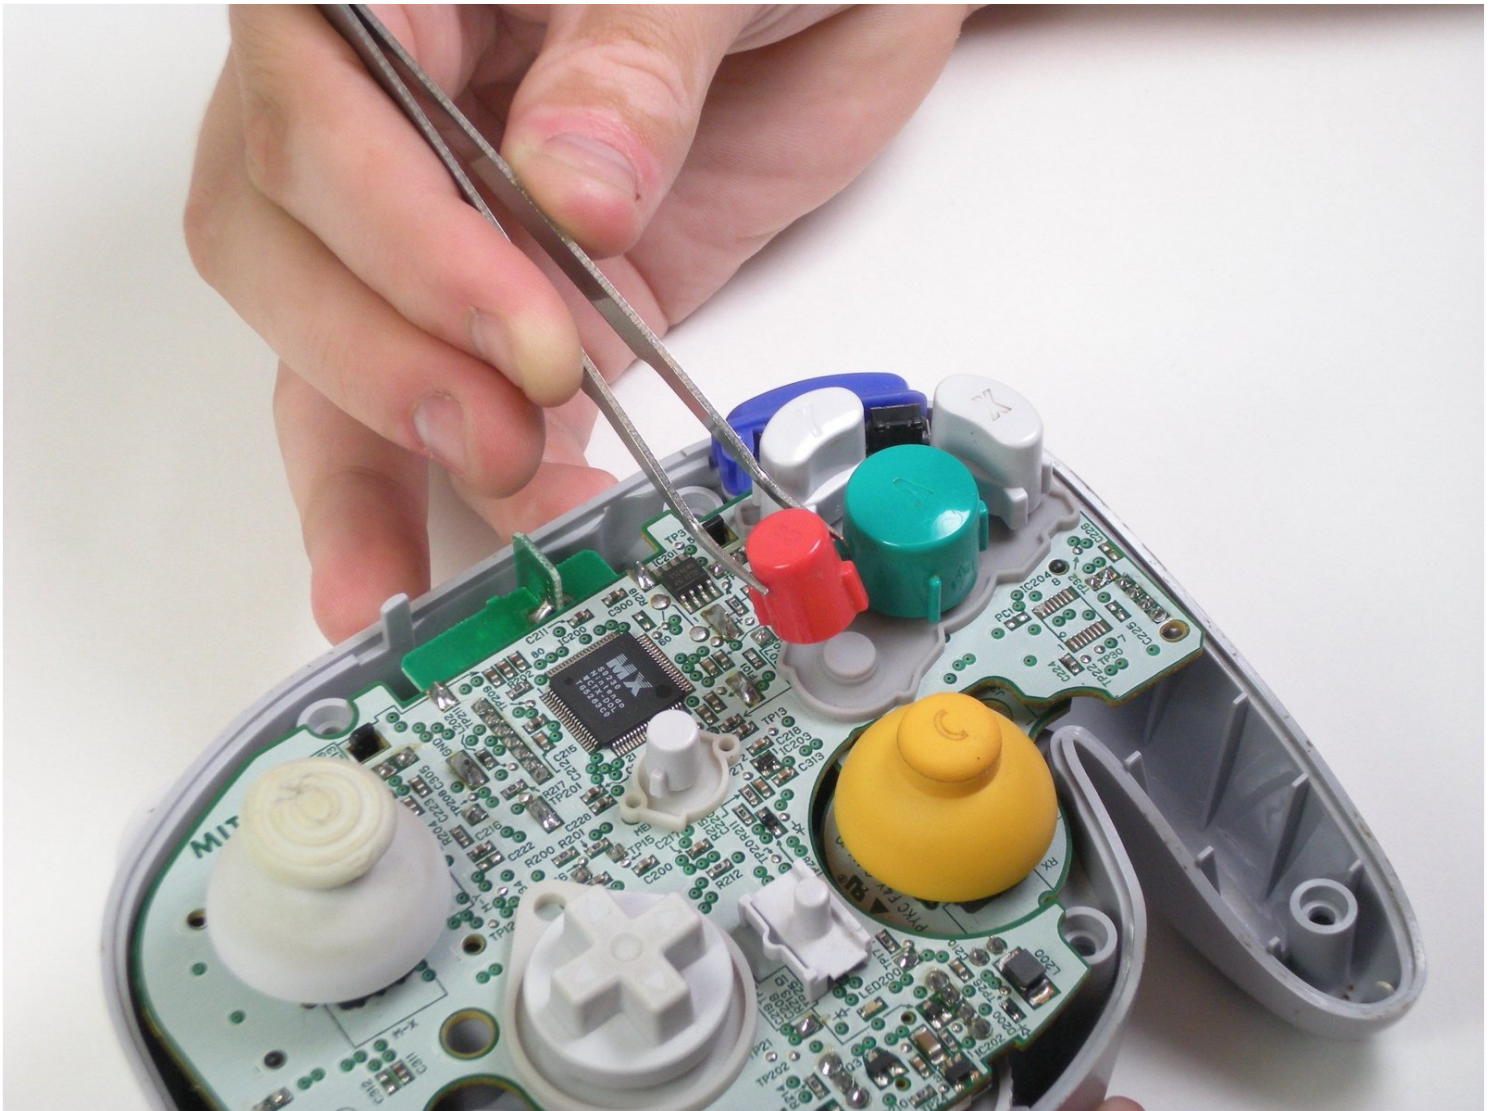

Nintendo WaveBird Wireless Controller Buttons Replacement

This guide will teach you how to replace...

Written By: Douglas



INTRODUCTION

This guide will teach you how to replace defective buttons. You may need to clean under the buttons if you have [sticky buttons](#).

TOOLS:

[Y1 Tri-point Screwdriver](#) (1)

[Tweezers](#) (1)

Import tools from prerequisite guide.

Step 1 — Batteries



- Pull down on the battery cover release lever and pull back to remove the cover.

Step 2



- Remove both batteries from the device.

Step 3 — Front Panel



 
- Remove the eight 9 mm screws from the back panel using the Tri-point Y1 screwdriver.
- ☒ During reassembly, firmly hold the panels of the controller together while replacing the screws so the panels do not separate.

Step 4



- Carefully turn over the controller and place it on a flat surface.
- Slowly separate the top panel from the bottom panel.
- ⓘ The buttons are loose and may fall off the motherboard.
- Once separated, set aside the top panel.
- ☑ During reassembly, make sure the front panel lines up with the buttons so they slide back into place.

Step 5 — Buttons

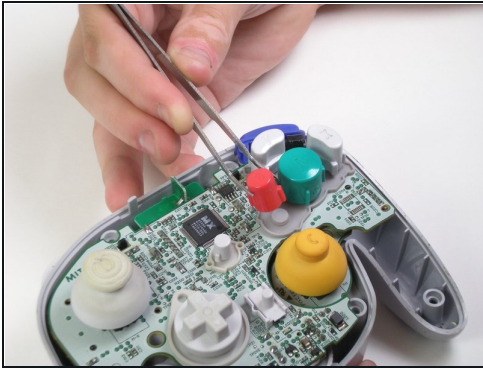

- Use [tweezers](#) to remove the buttons.
- ① It may be easier to remove the A button off of the pad by lifting it with your fingers.
- ☑ During reassembly, make sure all buttons are in their respective sockets so they match up with the front panel.

To reassemble your device, follow these instructions in reverse order.