


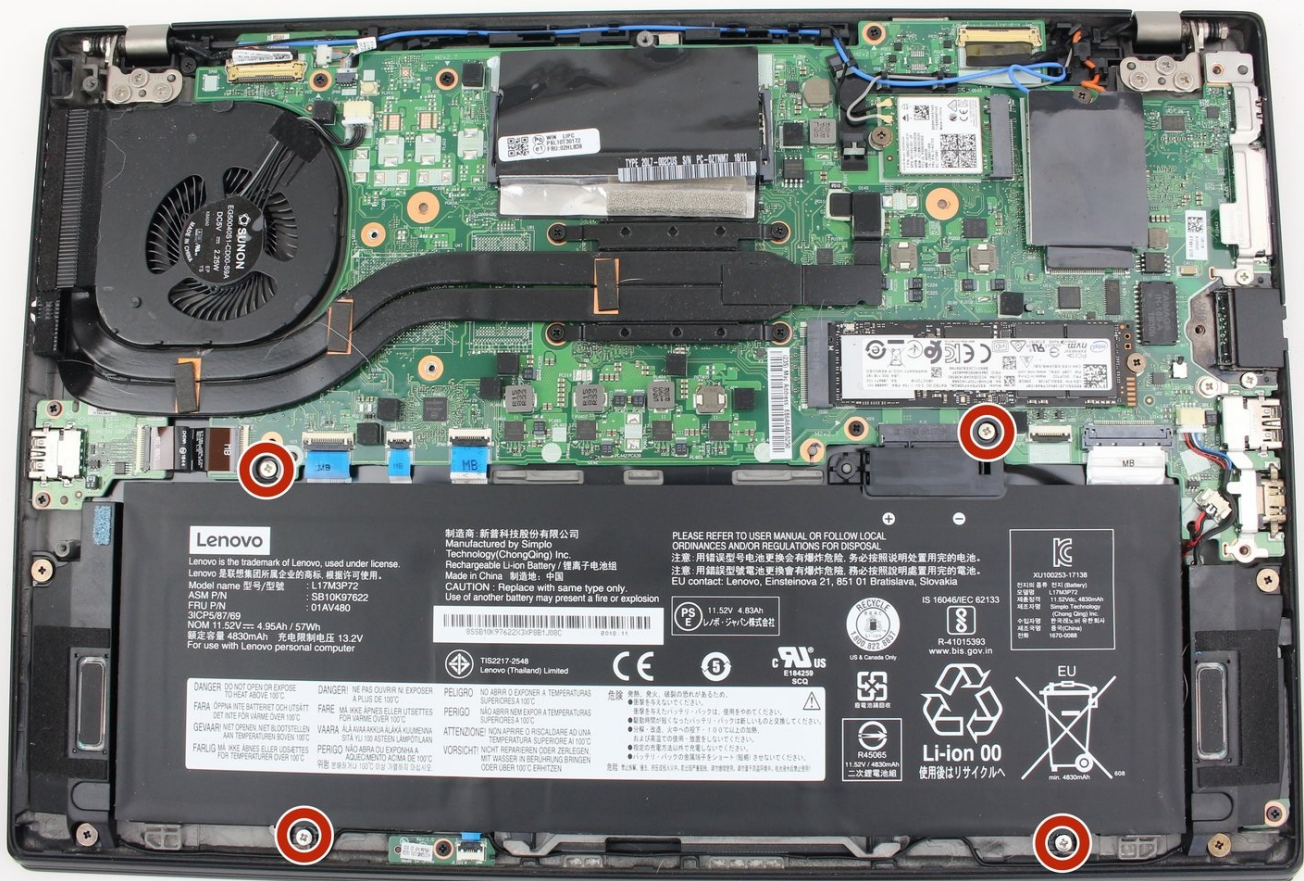

# Lenovo ThinkPad T480s Battery Replacement

This guide will show you how to replace the...

Written By: Sarah Westberg



# INTRODUCTION

This guide will show you how to replace the battery of your Lenovo ThinkPad T480s.

A healthy laptop battery will keep your laptop powered on, even when your device is unplugged from an external power source.

If your laptop no longer holds a charge, or loses its charge very quickly, you most likely have a dead or failing battery which may require replacement. Depending on the cause of your faulty battery, you may be able to resolve the issue using this list of troubleshooting symptoms and solutions from [Lenovo's support forum](#).

Make sure to [disable the internal battery](#), power down your device, and disconnect from any external power sources before you begin.

---

## TOOLS:

[iFixit Opening Tool](#) (1)  
[Phillips #1 Screwdriver](#) (1)


## PARTS:

[Lenovo ThinkPad T480S Battery](#) (1)

---

## Step 1 — Bottom Cover



 [Disable the battery](#), power down the device, and unplug the power adapter from your device before proceeding/beginning the guide.

- Loosen the six captive screws with a Phillips #1 screwdriver.

## Step 2



- Remove the bottom cover with an opening tool.
- Start from the top edge near the hinge and work your way along the edge until all of the clips are unsnapped.


## Step 3



- Lift the bottom cover off.



## Step 4 — Battery

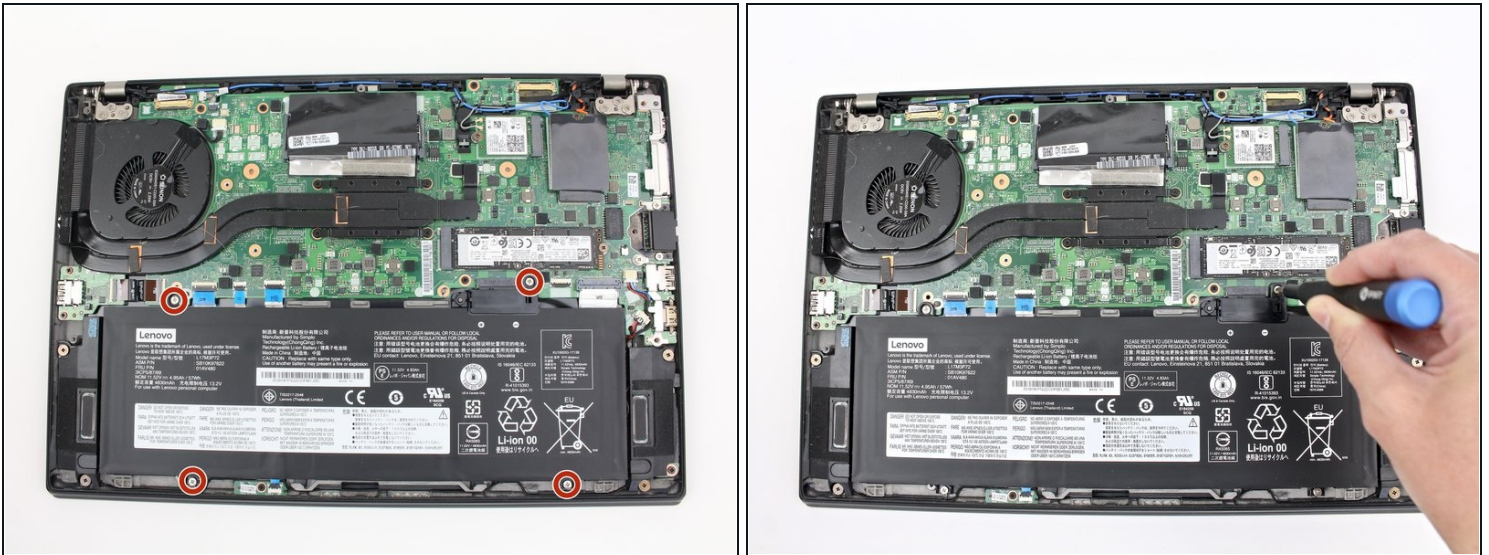

- Use the Phillips #1 screwdriver to remove four 4.5mm screws that hold the battery down to the mid frame.

## Step 5



- Lift the battery near the connector and remove it from the system.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our Answers community for help.