



Toshiba Portege M400 CD/DVD Drive Replacement

Use this repair guide to replace or repair a CD/DVD Drive on a Toshiba Portege M400 that may have been damaged due to normal wear and tear, accidental dropping, or internal problems.

Written By: Spencer Dilley



INTRODUCTION

In this guide, you will learn how to open your jammed CD/DVD Drive as well as how to disassemble it if necessary. This guide will also teach you what the proper and necessary tools are for this repair.

TOOLS:

- [Tweezers](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — CD/DVD Drive



- Make sure your computer is securely latched and closed.
- Locate the CD drive on the right side of your Toshiba Portege M400 laptop and find a small hole right next to the CD drive button.

Step 2



- Using the tweezers, insert them into the small hole next to the CD drive button.

Step 3



- Push the tweezers back into the hole and grab the CD drive door with the other tweezers' appendage.
 - Pull the CD door out carefully to remove the broken or jammed disk.
- i** Note: If the CD door still does not open, move on to the next step to see how to remove the CD drive entirely.

Step 4



- Flip the laptop over so its on its face.

Step 5



- Locate screw as seen on picture
- Using #1 Philips head screwdriver remove the 3.8mm screw.

Step 6



- Locate the lock switch in the center of the laptop.
- Locate the tab on the end of the end of the CD Drive.

Step 7



- Push down on the lock tab and pull on the CD tab simultaneously.
- Keep pulling on the CD drive tab until the CD drive comes all the way out.

To reassemble your device, follow these instructions in reverse order.