



2001-2006 Honda CR-V Tail Light Bulb Replacement

How to replace a tail light bulb on a Honda CR-V 2001-2006.

Written By: Anas Alaoui



INTRODUCTION

This guide shows the process for replacing a tail light bulb on a Honda CR-V 2001-2006, whether it is a turn signal, a brake light, or a reverse light. Bulbs have a life span and need to be replaced if fused or malfunctioning for personal and others' safety. Moreover, properly working tail lights is the legal responsibility of every driver. Replacing a tail light bulb on a Honda CR-V 2001-2006 is easy and knowing how to do it can save the driver time and a fair amount of money.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)



PARTS:

- [#1156 bulb](#) (1)

Step 1 — Tail Light Bulb



- Open the trunk door.

Step 2



- Remove the tab covering the screws using the flat-head screwdriver.

Step 3



- Remove both screws using the Phillips screwdriver.

Step 4



- Take off the tail lamp assembly by slightly pulling the low end using one hand.
- Slide down the lamp a little bit and pull it off using both hands to separate it from its base.

Step 5



- Remove the bulb socket by making a ¼ counterclockwise twist.

Step 6



- Remove the bulb from its socket by making a ¼ counterclockwise twist.

To reassemble your device, follow these instructions in reverse order.