



# Disassembling Sanyo SCP-8100 Back Panel

This guide removes the back panel, leading to the speaker or keypad.

Written By: Yemane





## TOOLS:

- [Y1 Tri-point Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Push Pin](#) (1)

## Step 1 — Battery




- Push and hold the button on the back toward the direction of the arrow to unlock the battery.
- Lift and remove the battery from the back of the phone.

## Step 2 — Back Panel



- Using a push pin, pull out the plug on the back, located under the antenna.

 You may try to use a spudger or opening tool, however, you may damage the plug because those tools are too thick.



## Step 3



- Unscrew the four 6mm long screws with a Tri-Wing Y1 screwdriver.

## Step 4



- Use a plastic opening tool to pry the back panel along the edges.
  - ❗ You may need to apply some force when prying.

## Step 5



- While removing the back panel, take out the rubber cover on each side.

To reassemble your device, follow these instructions in reverse order.