



Asus Vivobook Flip 14 TP410U LCD Assembly Replacement

Complete replacement of the Asus Vivobook Flip 14 TP410U front LCD assembly.

Written By: Dominic Bento



INTRODUCTION

A display can eventually die due to extensive use, or a majority of the times, receive too much damage that it won't function properly. This guide should be followed in order to replace the LCD assembly.



TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Picks \(Set of 6\)](#) (1)
 - [iFixit Adhesive Remover \(for Battery, Screen, and Glass Adhesive\)](#) (1)
-

Step 1 — LCD Assembly




- Turn off the power and disconnected the AC cable from the laptop.

Step 2

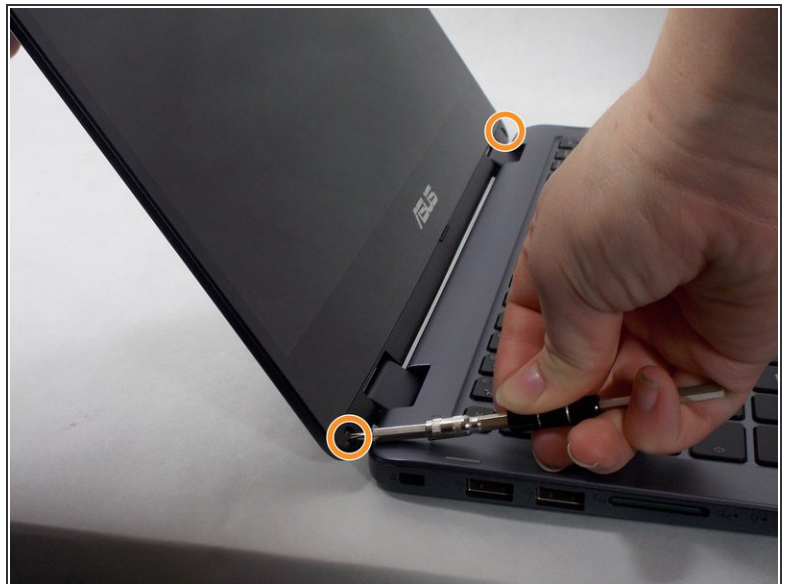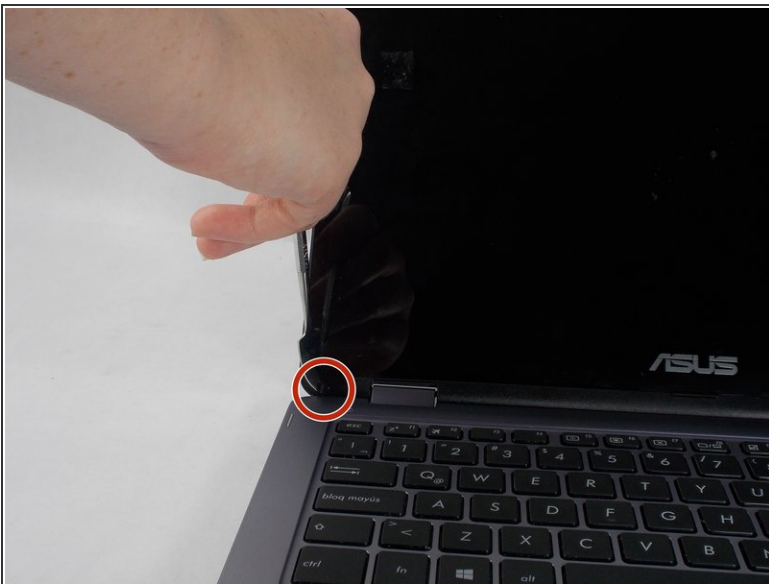



- Remove the rubber covers for the two screws located at the bottom of the screen.
- Use a Phillips #00 screwdriver to remove the two 6.4 mm screws outlined in the image.

Step 3

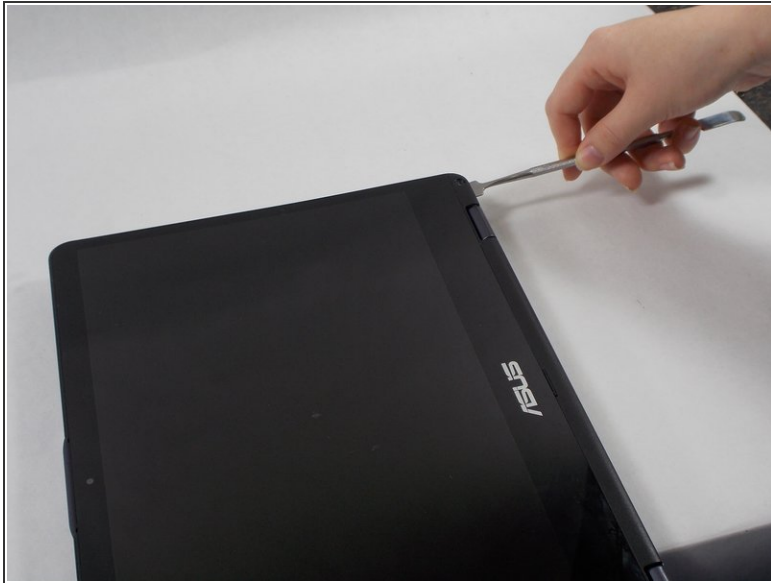

- ⓘ Excessive force may cause damage to connections.
- ⓘ Rotate the screen 360 degrees for ease of access.
 - Place the opening tool at the corner of where the screen meets the base of the laptop.
 - Pry open the screen along the edge until it is completely off the front cover.
 - Disconnect each appropriate connector while opening up the laptop.


Step 4

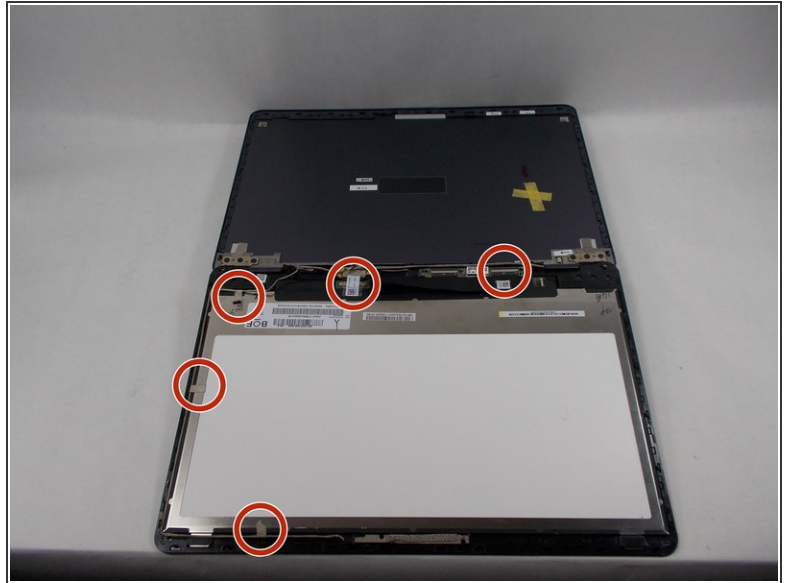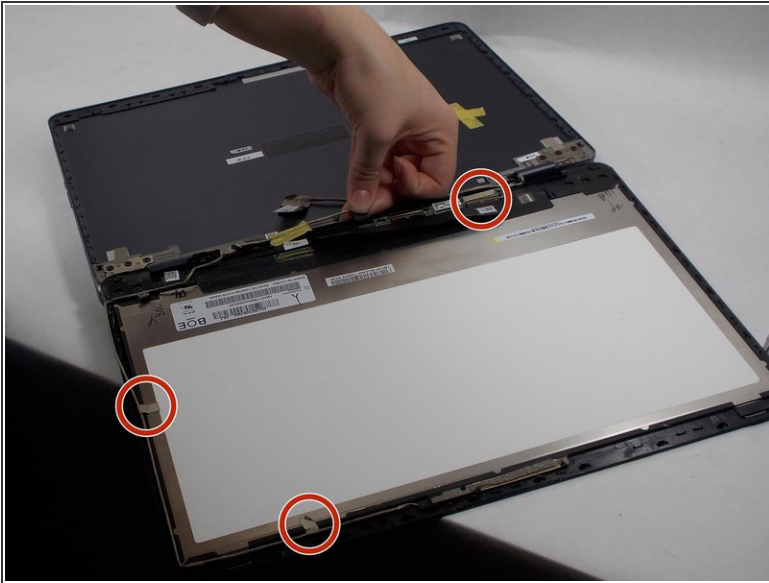

i Excessive force should be avoided since damage may accrue.

- Remove the cable that connects to the touch display, front camera, and motherboard.
- Remove each piece of tape that holds down each cable.

Step 5

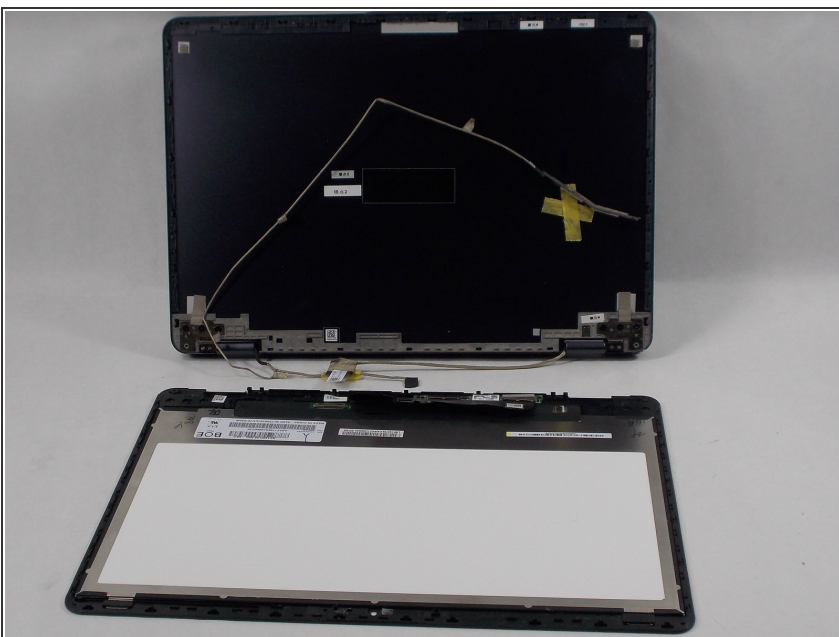

i Have the new LCD display fully unboxed and ready to be used.

- Remove the old LCD display.

! The touch screen sensor is extremely fragile, make sure to not put excessive force on the cable while assembling.

To reassemble your device, follow these instructions in reverse order.