



2011 Scion Tc Blower Motor Replacement

In this Repair Guide, you will know how to successfully replace/repair a blower motor for a Scion Tc 2011.

Written By: Jose Ruvalcaba



INTRODUCTION

This guide explains how to replace a 2011 Scion Tc 2011 blower motor. If your vehicle's HVAC doesn't blow air at all, then it can be your blower motor. The blower motor turns the blower fan, which sends fresh air to your vehicle.

This replacement is fairly straightforward. This repair is needed for every 2011 Scion Tc, because blower motor plays an important role to keep drivers cool or warm. It's a crucial part of the heating and cooling systems in a 2011 Scion Tc.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [6-in-1 Screwdriver](#) (1)



PARTS:


- [Scion Tc Blower Motor](#) (1)

Step 1 — Blower Motor



- Locate your blower motor. Your blower motor should be below the glovebox.

Step 2

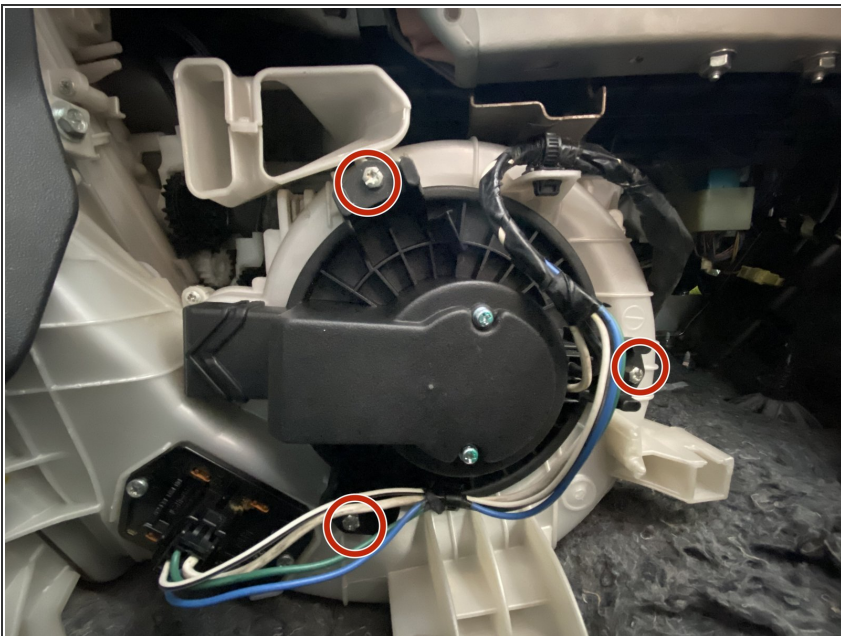

- Remove the three 2 mm screws that secure the blower motor.


Step 3




- Remove the two 1 mm Phillips #0 screws that secure the blower motor wiring harness.

Step 4



- Disconnect the sensor that is connect to the blower motor.
-  The sensor should have a click and carefully remove it upwards.

Step 5

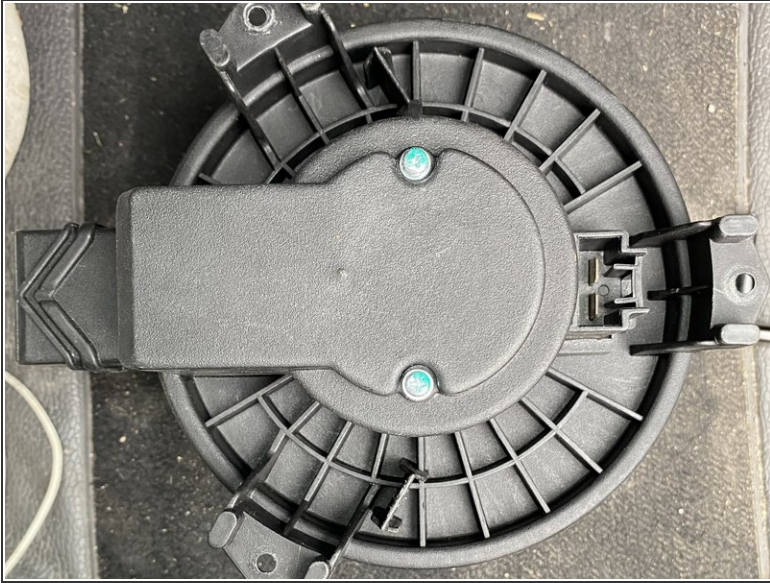

- Put the new blower motor in place, and secure it with the three 2 mm Phillips #0 screws.

Step 6



- Tighten the two 1 mm screws to the wiring harness.

Step 7



- Congratulations, you have successfully replaced your blower motor!
- ⓘ Once all the screws are tightened, just make sure to turn on your air to see if your blower motor works!

To reassemble your device, follow these instructions in reverse order.