



iPhone 14 SIM Card Replacement

Use this guide to remove or replace the SIM...

Written By: Dominik Schnabelrauch



INTRODUCTION

Use this guide to remove or replace the SIM card in your iPhone 14.

 
This guide is for the physical SIM card and therefore for the international **A2882** model only; the embedded SIM (eSIM) is silicon-based and cannot be removed.



TOOLS:


- [SIM Card Eject Tool](#) (1)
-

Step 1 — Eject the SIM card tray

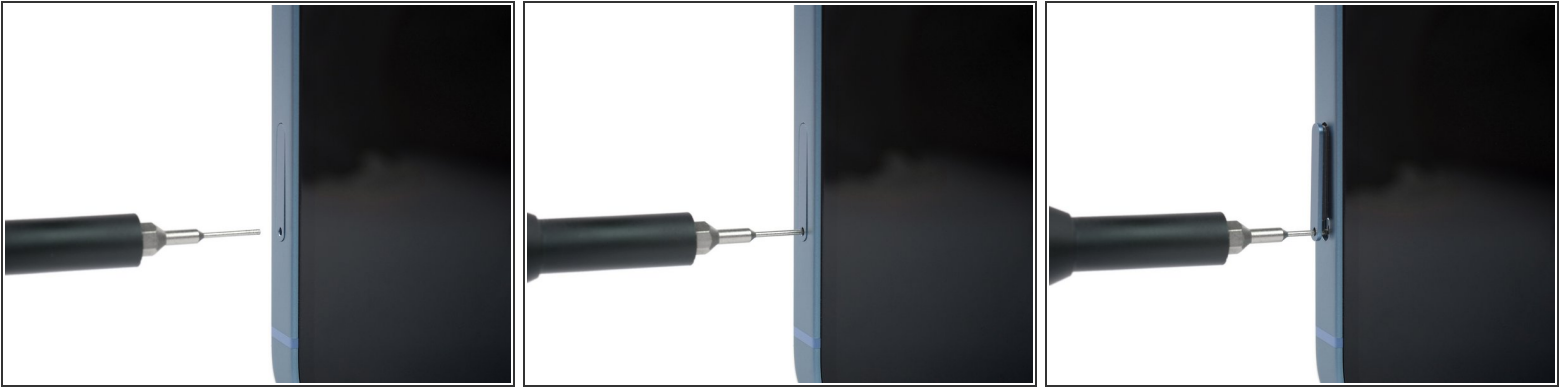

- Insert a SIM card ejector tool into the small hole in the SIM card tray, located on the volume button edge of the iPhone.
- Press firmly to eject the tray.

 Step 2 — Remove the SIM card tray

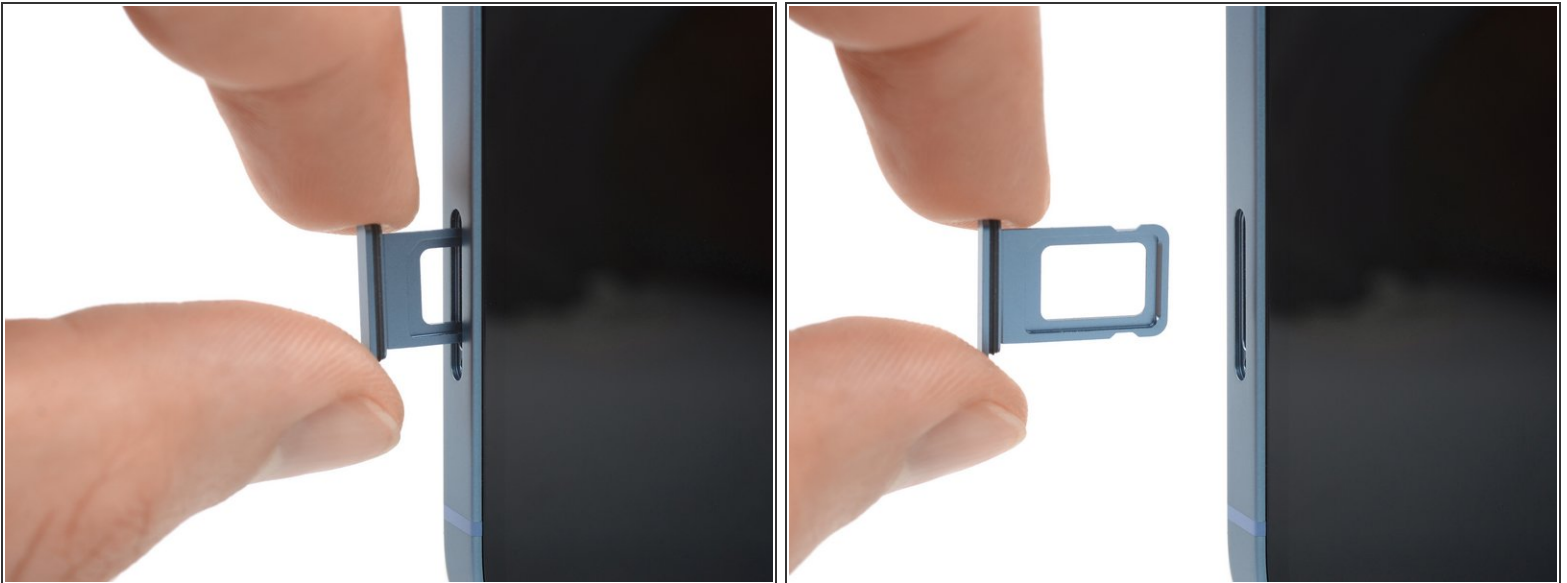

- Remove the SIM card tray from the iPhone.
- ✦ When reinserting the SIM card, make sure it's in the proper orientation inside the tray.
- ✦ A thin rubber gasket around the SIM tray provides water and dust protection. If this gasket is damaged or missing, replace the gasket or the entire SIM tray to protect your iPhone's internal components.

To reassemble your device, follow these instructions in reverse order.

Repair didn't go as planned? Try some [basic troubleshooting](#), or ask our [Answers community](#) for help.