


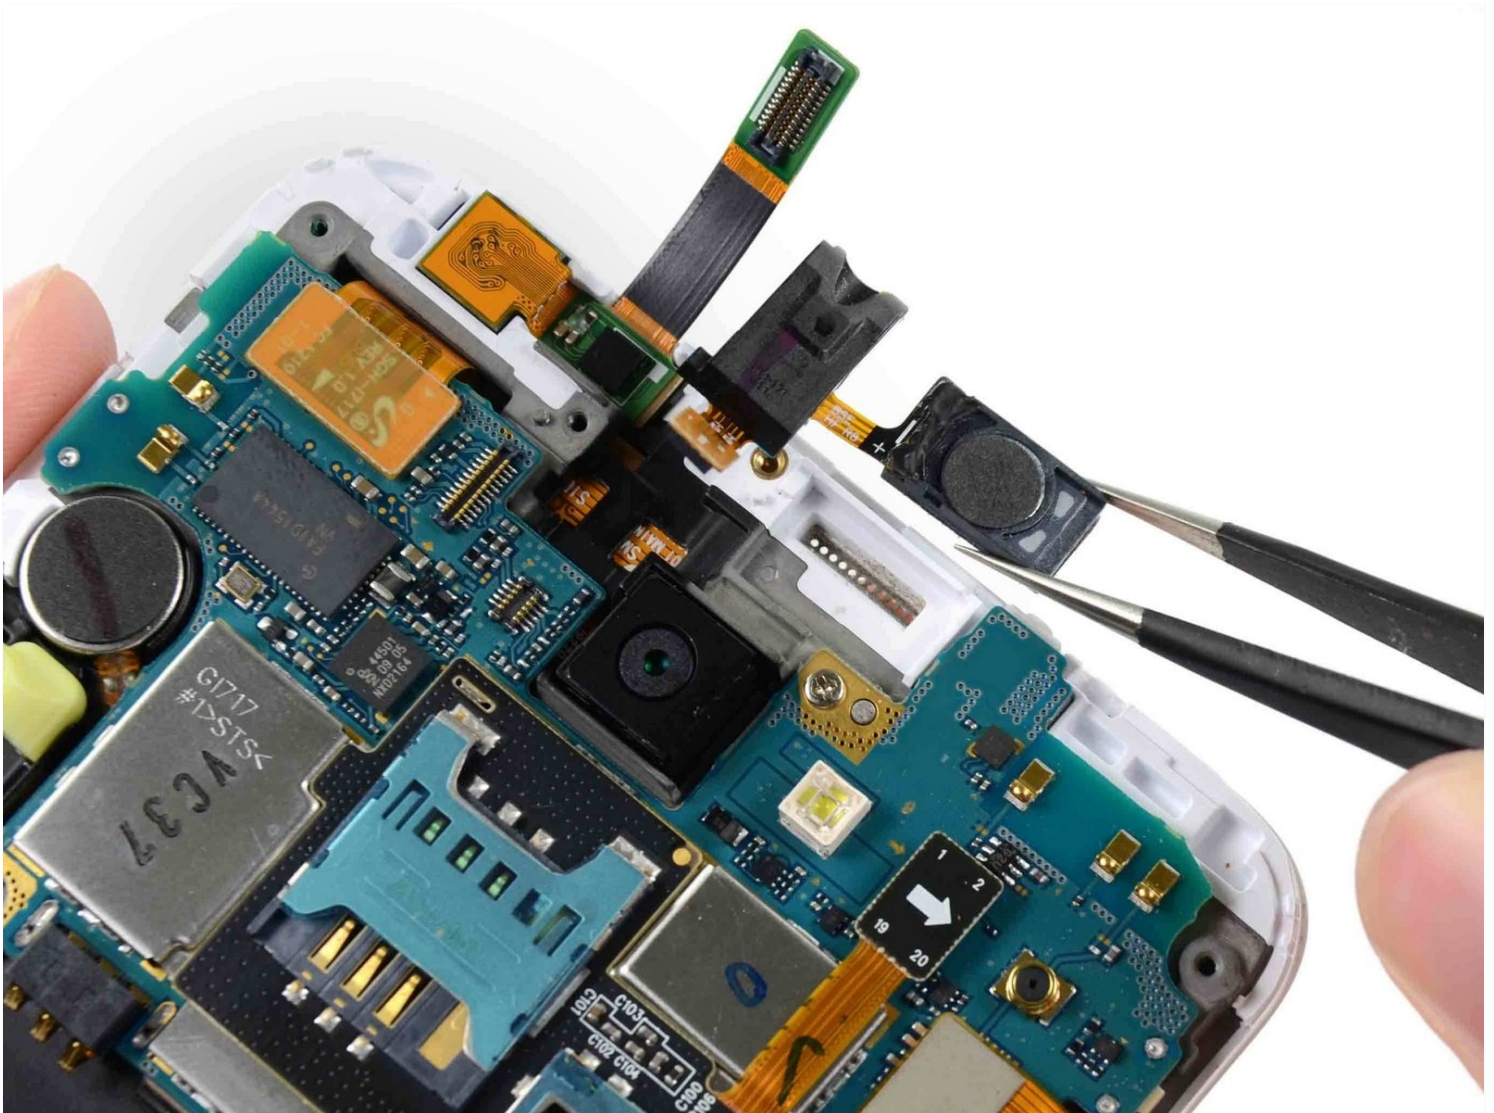

Samsung Galaxy Note Headphone Jack/Earpiece Speaker Assembly Replacement

Use this guide to replace the headphone jack...

Written By: Sam Goldheart



INTRODUCTION

Use this guide to replace the headphone jack and earpiece speaker assembly of your Samsung Galaxy Note.

TOOLS:

[iFixit Opening Tool](#) (1)

[Spudger](#) (1)

[Phillips #00 Screwdriver](#) (1)

[Tweezers](#) (1)

Step 1 — Stylus



- Grasp the cap of the stylus and remove it from its slot in the midframe.

Step 2 — Rear Case



- Pry with a plastic opening tool, or your fingernail, in the divot to the right of the rear-facing camera, near the volume rocker.

Step 3



- Lift and remove the rear case from the phone.

Step 4 — Battery




- Insert your finger in the notch of the battery compartment.
- Press the battery toward the rear facing camera while pulling outward.

Step 5 — microSD Card



- Use the flat end of a spudger, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
 - After the click, release the card and it will pop out of its slot.
- ☒ For reassembly, push the microSD card into the slot until it clicks in place.

Step 6

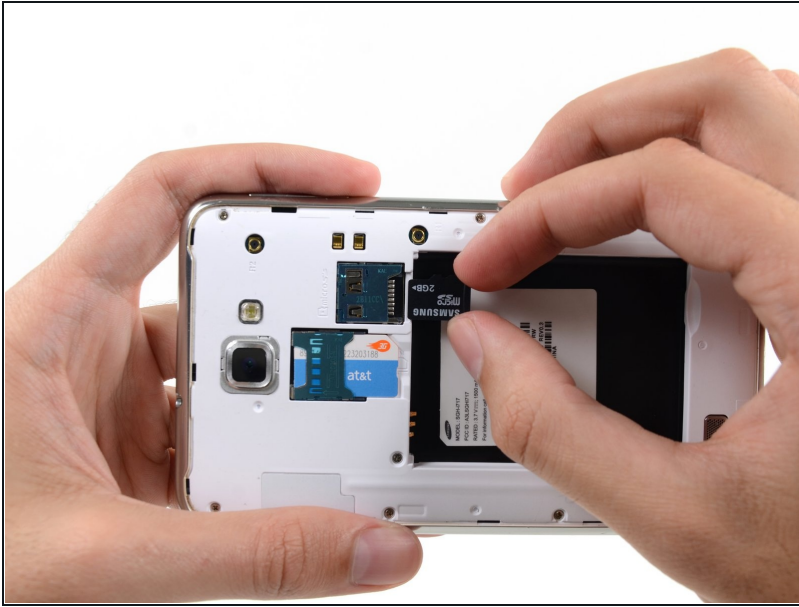


- Remove the microSD card from its slot in the midframe.

Step 7 — SIM Card



- Use a plastic opening tool, or your fingernail, to push the SIM card out of its compartment.

Step 8

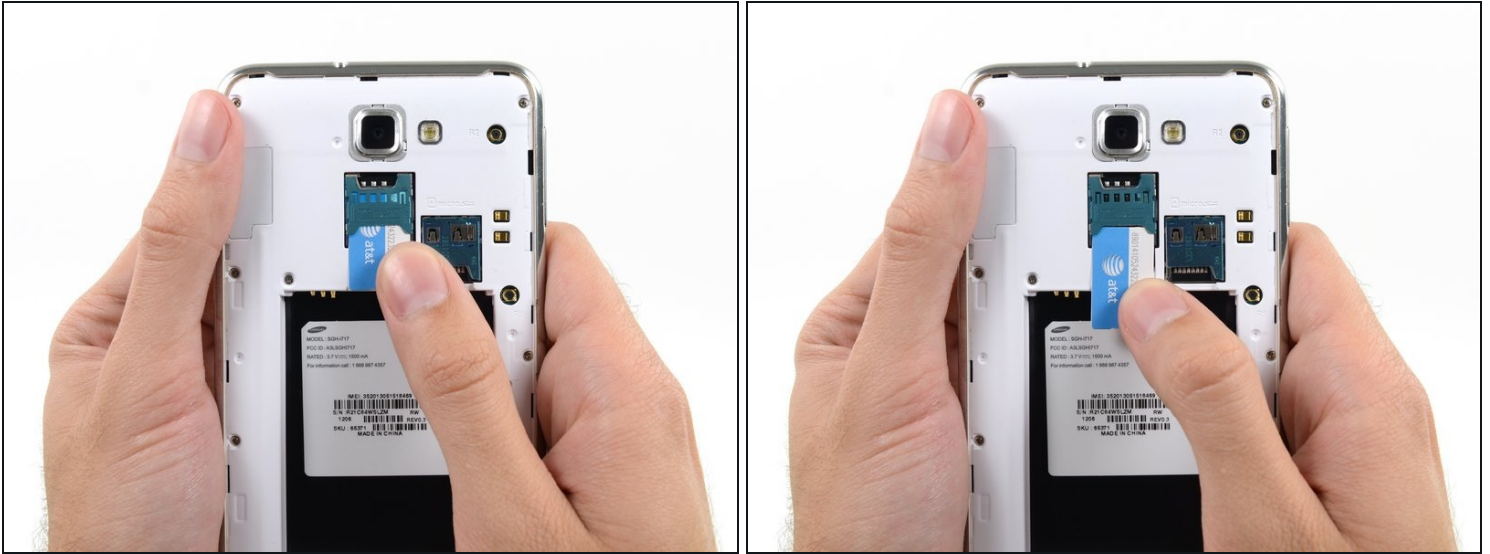


- Slide the SIM card out the rest of the way with your thumb and remove it from the device.

Step 9 — Midframe



- Remove the nine 3.4 mm Phillips #00 screws securing the midframe to the display assembly.

Step 10

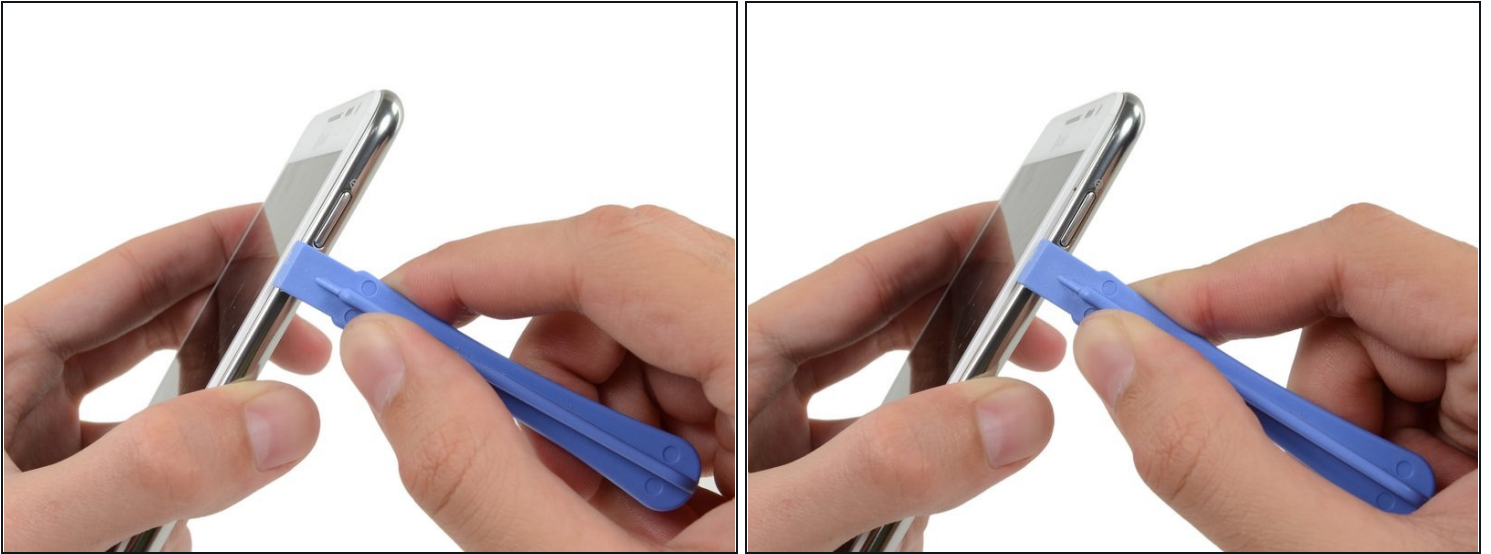

- Insert your plastic opening tool to the left of the power button between the midframe and the front panel assembly and pry.

Step 11



- Slide the plastic opening tool down the seam.

Step 12




- Insert your plastic opening tool to the left of the headphone jack between the midframe and the display assembly.
- Slide the opening tool along the top edge of the phone.
- Continue to run the plastic opening tool around the perimeter of the phone until the midframe is separated.

Step 13




- Remove the midframe from the display assembly.

Step 14 — Upper Display Assembly Bracket

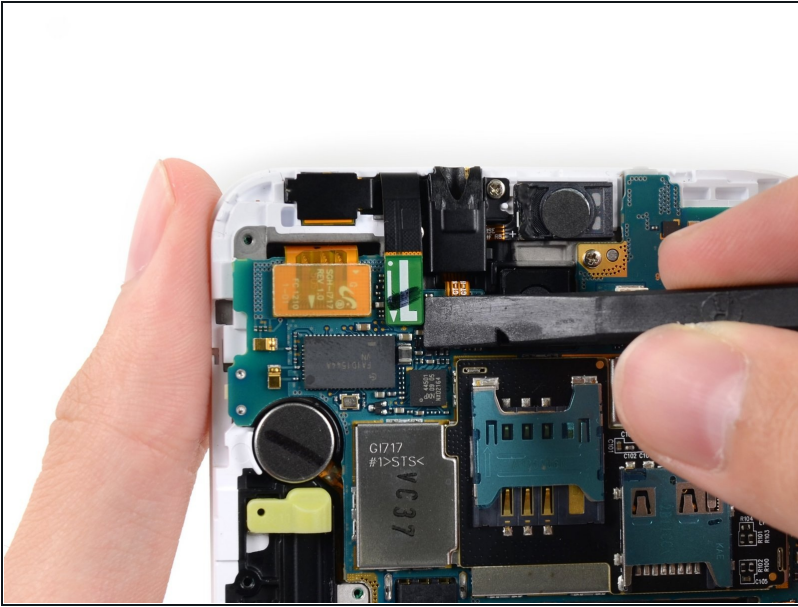


- Use the flat end of a spudger to disconnect the headphone jack/earpiece speaker assembly cable connector.

Step 15

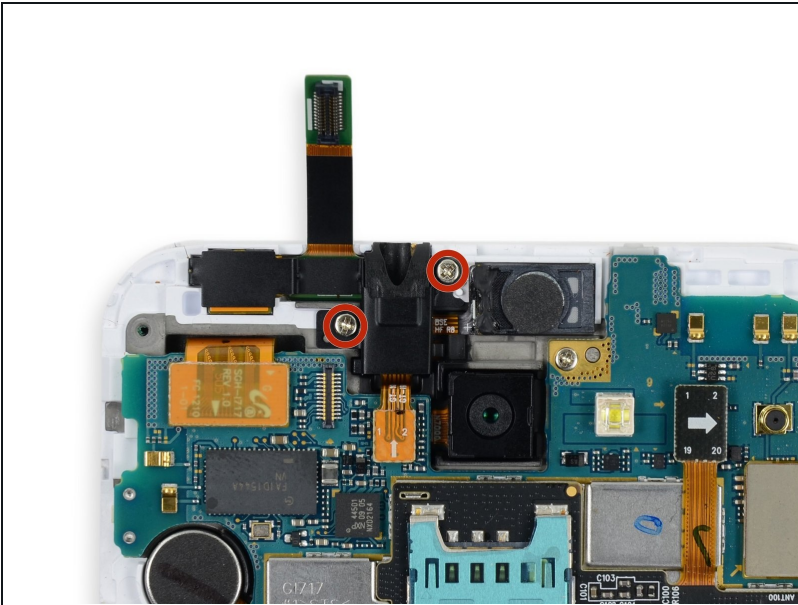


- Remove the two 3 mm Phillips #00 screws securing the upper display assembly bracket.

Step 16

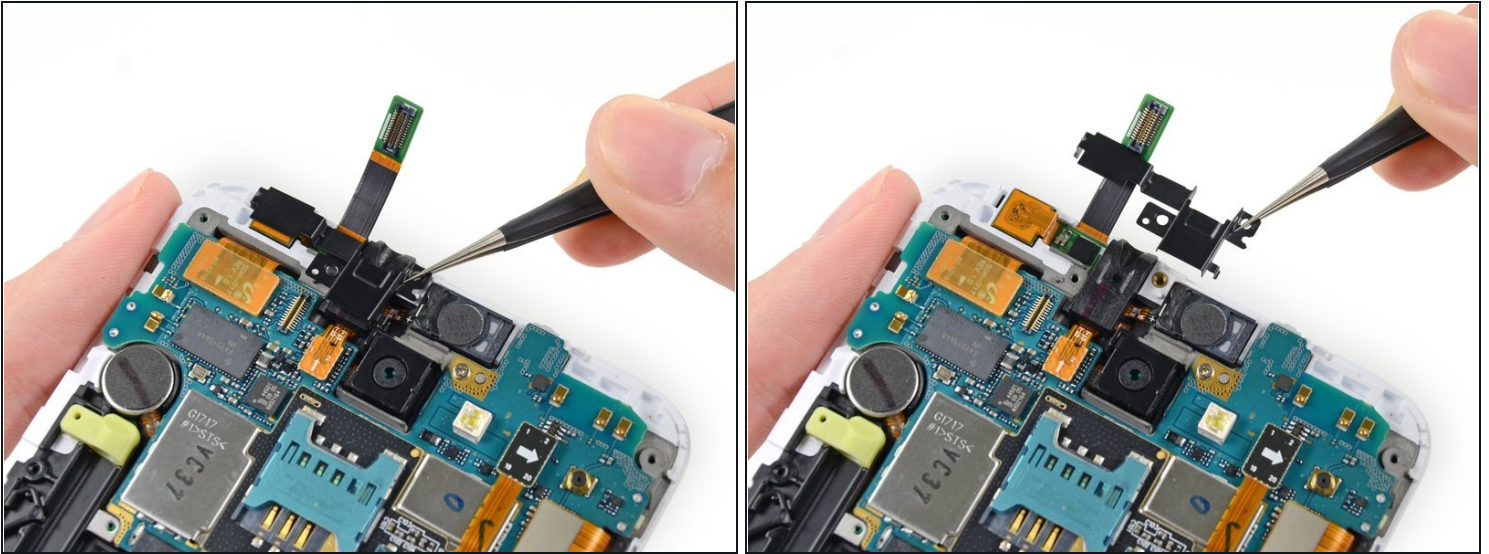


- Use a pair of [tweezers](#), or your fingers, to remove the upper display assembly bracket.

Step 17 — Headphone Jack/Earpiece Speaker Assembly

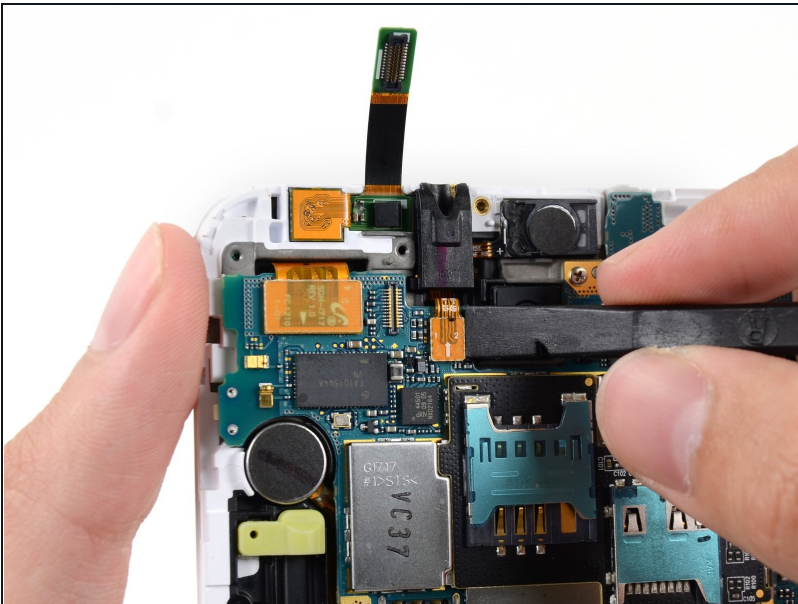


- Use the flat end of a spudger to disconnect the headphone jack/earpiece speaker assembly connector.

Step 18

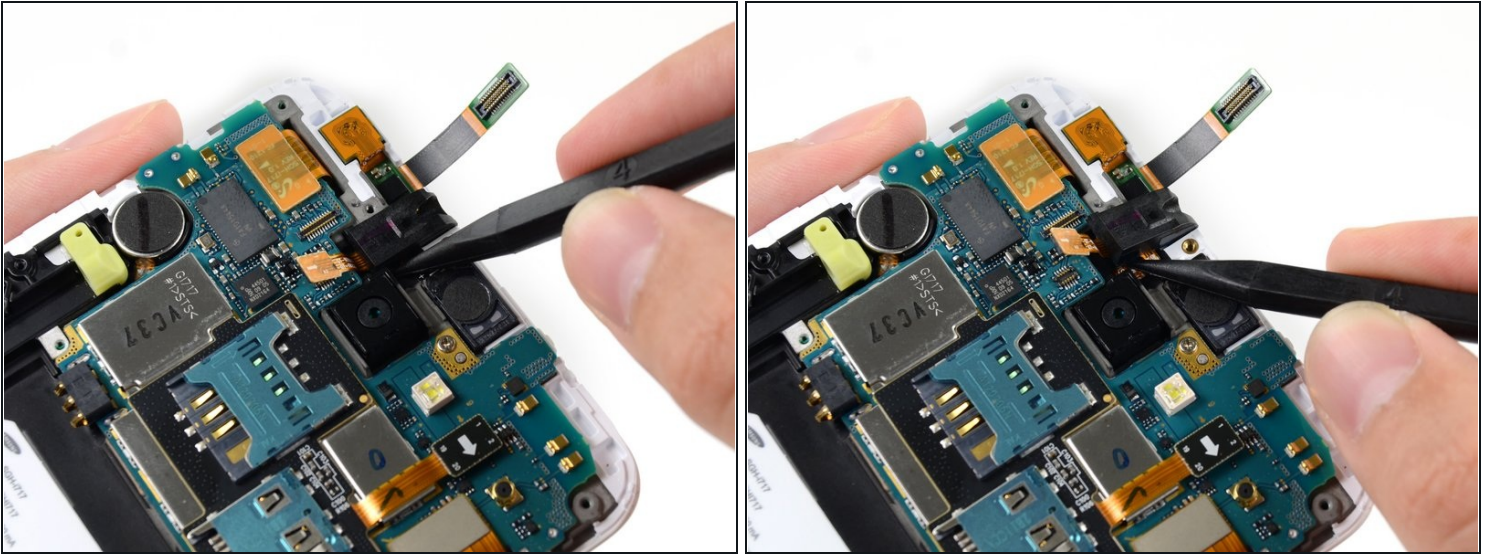

- Use the point of a spudger to pry the headphone jack out of its recess in the display assembly.

Step 19

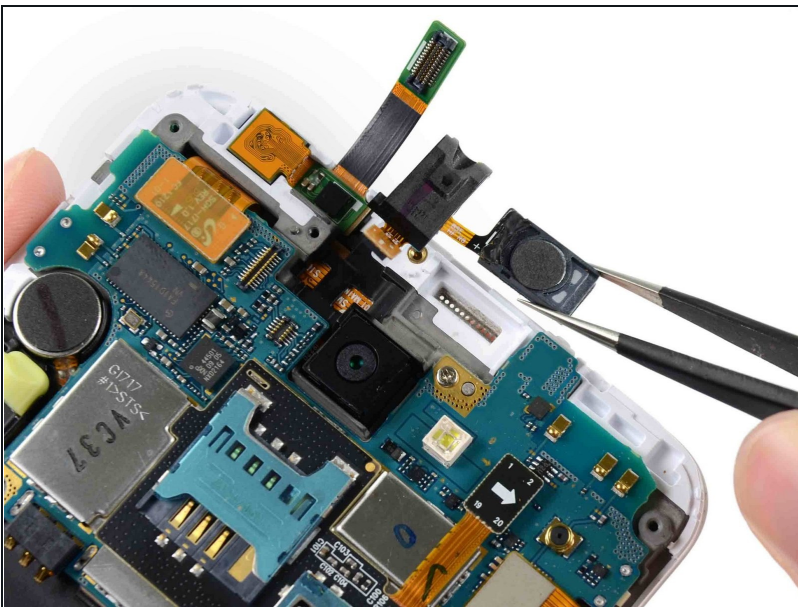

- Use a pair of [tweezers](#), or your fingers, to remove the headphone jack/earpiece speaker assembly from the display assembly.

To reassemble your device, follow these instructions in reverse order.