


iPad Mini Wi-Fi Logic Board Assembly Replacement

Use this guide to replace the logic board.

Written By: Andrew Optimus Goldheart

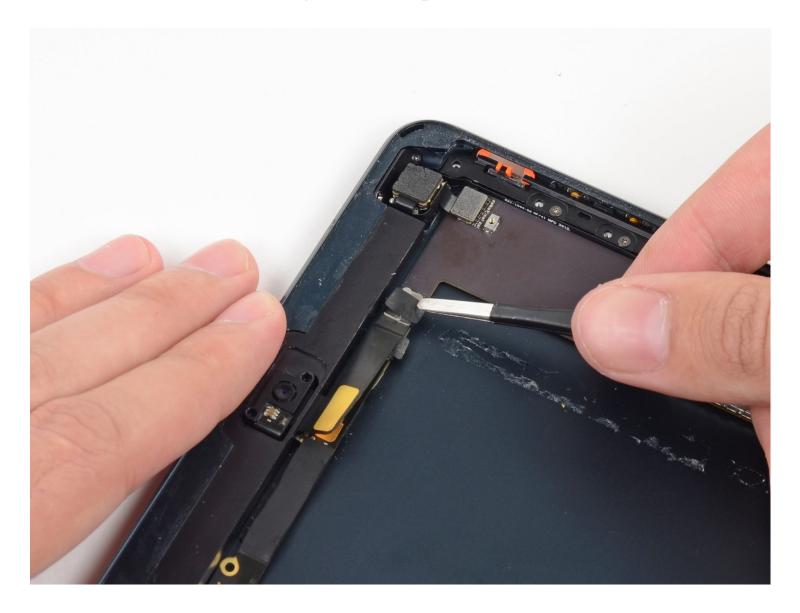

INTRODUCTION

Use this guide to replace the logic board.

TOOLS:

iFixit Opening Tool (1) ESD Safe Blunt Nose Tweezers (1) Spudger (1)


Step 1 — Logic Board Assembly



• Use <u>tweezers</u> to peel up and remove the small piece of tape covering the front-facing camera cable connector.



- (i) The front-facing camera cable connector is secured with pieces of tape that wrap up around the sides of the cable and are fastened to two small metal plates.
- Use a plastic opening tool to gently pry the lower metal plate up from the front-facing camera cable connector.
- Being careful not to break the plate or the tape attached to it, pry it up and fold it away from the front-facing camera cable connector.

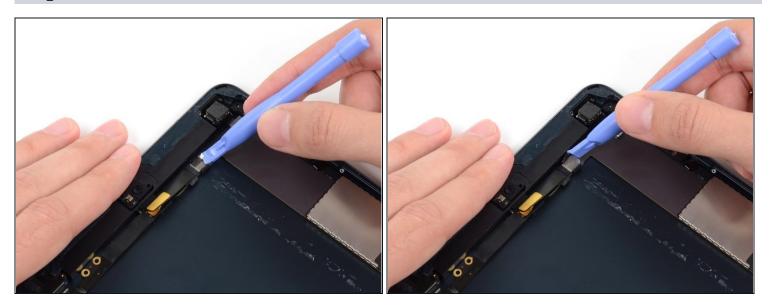

- Gently pry the second (upper) metal plate up from the front-facing camera cable connector.
- Again, carefully pry the plate up and away from the front-facing camera cable connector.

Step 4



• Use a plastic opening tool to pry the front-facing camera cable's connector up from its socket on the logic board.



• Gently fold the front-facing camera cable up and out of the way of the logic board.

Step 6



• Use tweezers to peel up and remove the small piece of tape covering the headphone jack cable connector.




- Use a plastic opening tool to gently pry the lower metal plate up from the headphone jack cable connector.
- Being careful not to break the plate or the tape attached to it, pry it up and fold it away from the headphone jack cable connector.

Step 8



- Pry the second (upper) metal plate up from the front-facing camera cable connector.
- Again, carefully pry the plate up and away from the headphone jack cable connector.

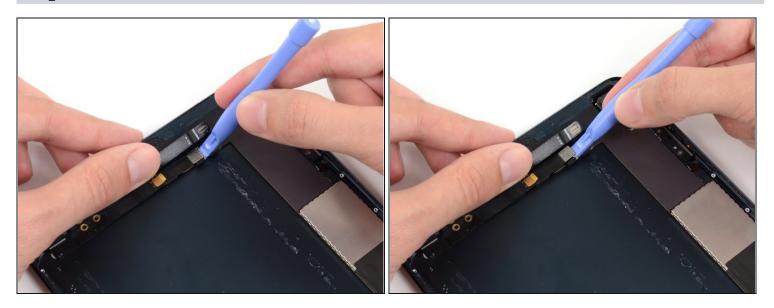


- Use a plastic opening tool to pry the headphone jack cable's connector up out of its socket on the logic board.
- (i) Gently bend the headphone jack cable back, away from the logic board.

Step 10




• Use a plastic opening tool to pry the rear-facing camera cable up from its socket on the logic board.

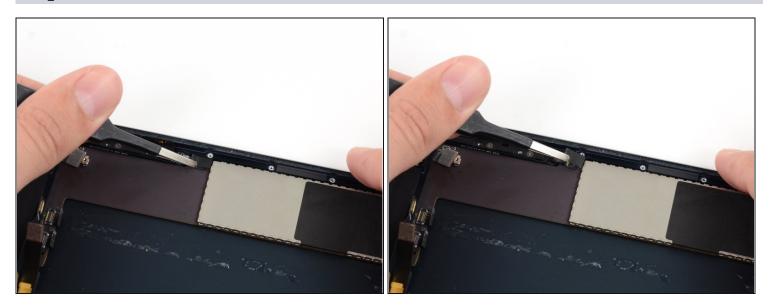

• Use tweezers to peel up and remove the small piece of tape covering the button ribbon cable ZIF connector.

Step 12

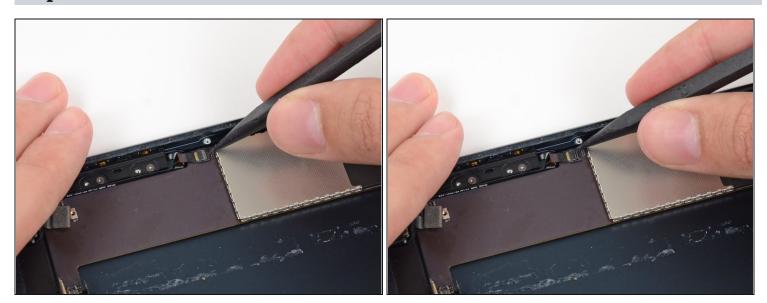


• Use the tip of a spudger to lift up the tab on the button ribbon cable ZIF connector.



• Use tweezers to pull the button ribbon cable straight out of its ZIF socket on the logic board.

Step 14

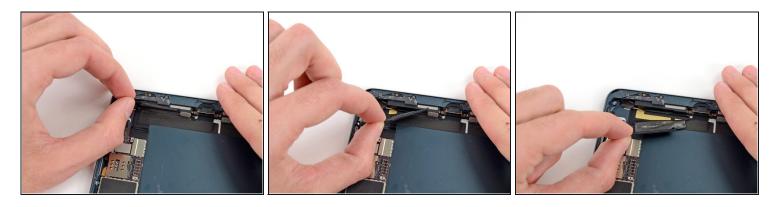


• Gently peel back the wide piece of tape covering the top of the right speaker.




• Continue peeling the tape, and remove it from the iPad.

Step 16

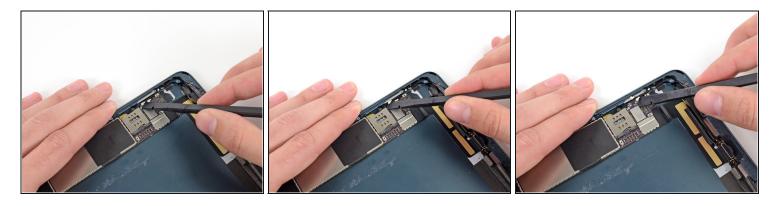


• Use the flat end of a spudger to disconnect the two bottom antenna cable connectors from their sockets on the logic board.

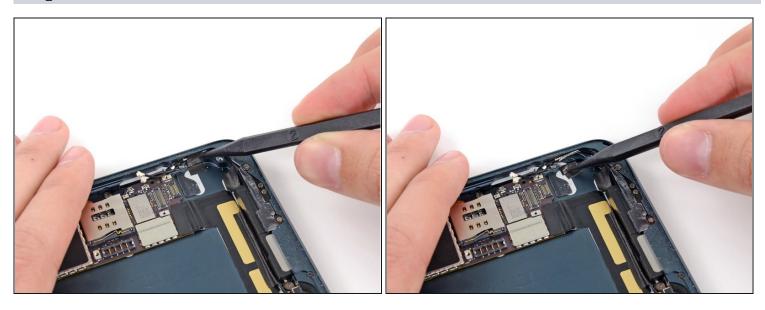


- Use the tip of a spudger to peel back the small piece of tape covering both antenna cables on the bottom right side of the iPad.
- 🗹 Leave the lower part of the tape stuck to the back of the rear case to aid in reassembly.

Step 18

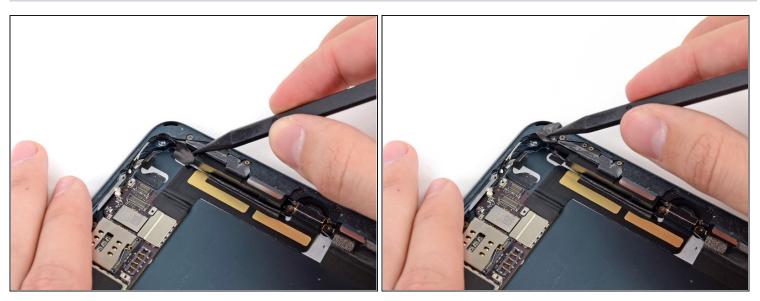


• With the tip of a spudger, peel up the larger piece of tape covering both antenna cables near the bottom of the rear case.

 \triangle Do not try to remove this piece of tape; it is wrapped around the top antenna cable.

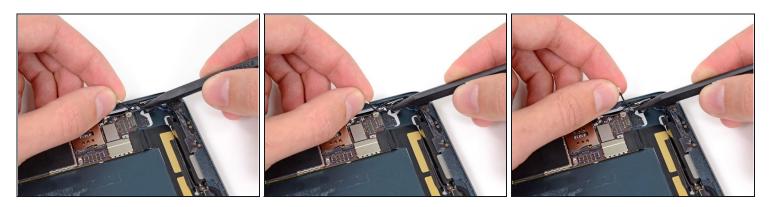


• Use the tip of a spudger to pry the small metal retaining clip off the left antenna cable, then de-route the cable from the clip.

Step 20

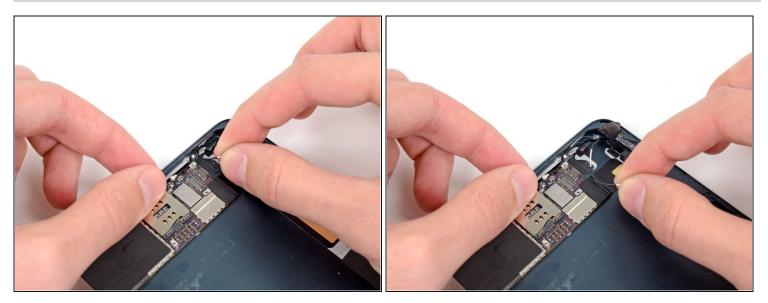


• De-route the antenna cable from the corner of the iPad.

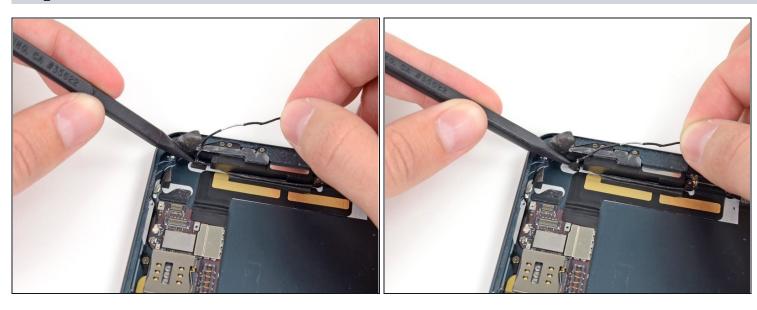


• Use the tip of a spudger to remove the small piece of tape securing the antenna cable in the bottom right corner of the iPad.

Step 22

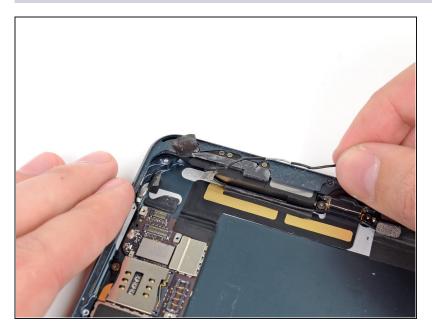


• Peel the cable back from the corner of the iPad.

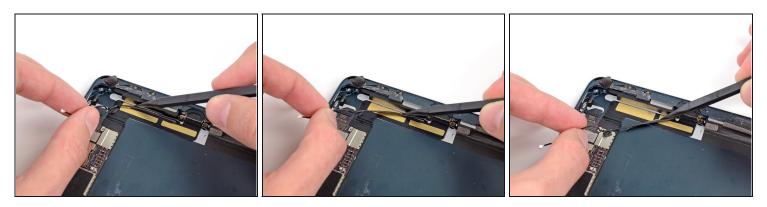

- Use the tip of a spudger to pry the antenna cable tape up from the rear case of the iPad.
- Gently pull the antenna cable out of the way as you work along the piece of tape, to keep it from resealing.

Step 24

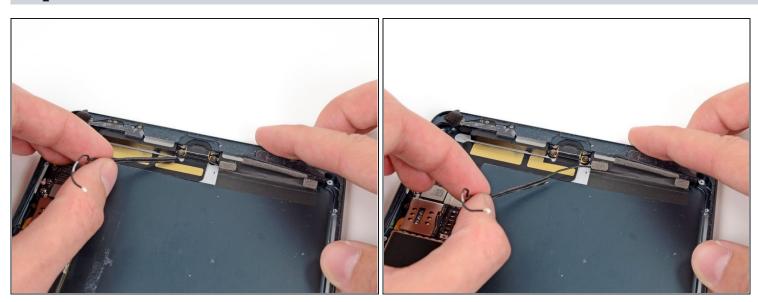

• Pull the antenna cable from the slot behind the Lightning connector.

To reassemble your device, follow these instructions in reverse order.