



Acer Chromebook C710-2847 RAM Replacement

This guide will show you how to replace the RAM memory module(s).

Written By: Bradley Pavy



INTRODUCTION

RAM provides programs with quick access to the data they need. The more programs you have open at once, the more RAM your computer will need.

TOOLS:

- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Place the laptop on a flat surface with the bottom side facing up.
- Place the tip of a spudger or finger into the hole on the battery release slider.


Step 2



- Use the spudger to move the slider to the right and hold it there.
- With the slider held, use your other hand to pull the battery back away from the laptop.

Step 3 — Acer Chromebook C710-2847 Back Cover Replacement



 This step will void your device warranty.


- Use the screwdriver to pierce the warranty sticker.
- Unscrew and remove the #0 6mm Phillips screw and set it aside.

Step 4



- Slide the back panel towards you. The best spots to place your fingers are on the bumpers.
- Lift on the front edge to remove the panel.



Step 5 — RAM

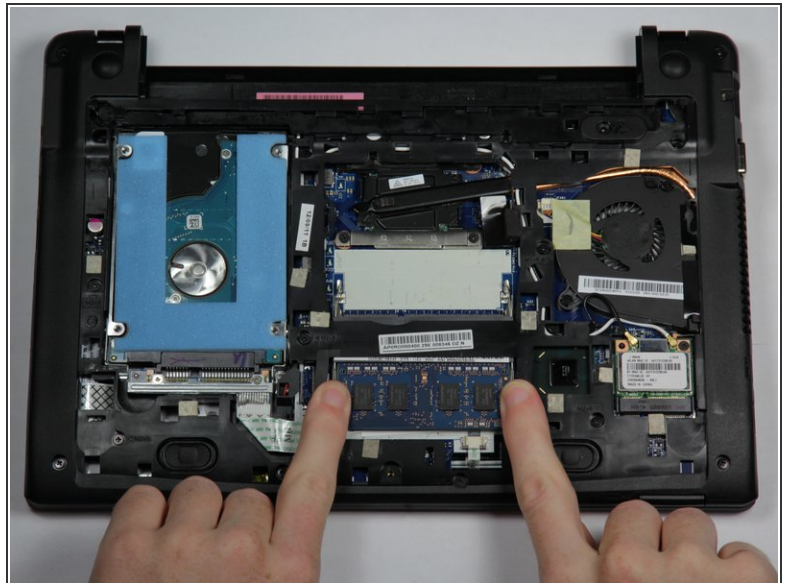

- Pull the metal tabs sideways away from the memory stick.

i The RAM stick will pop up.

Step 6

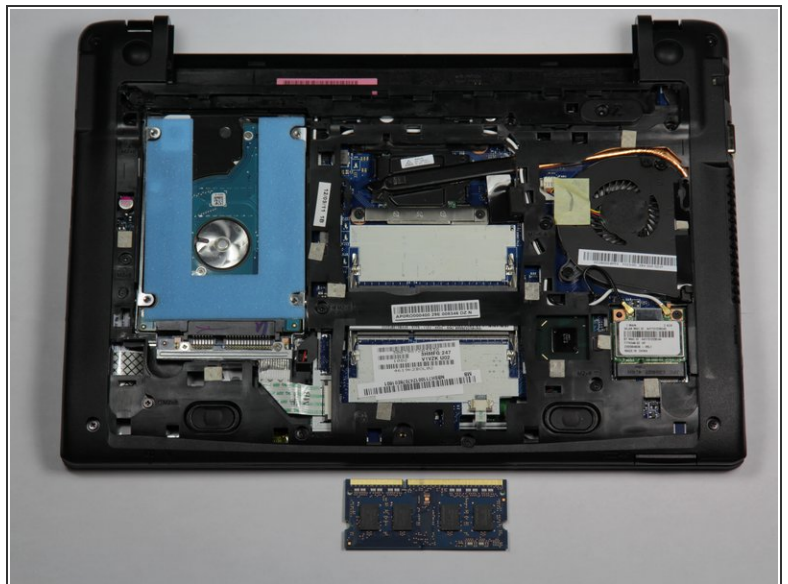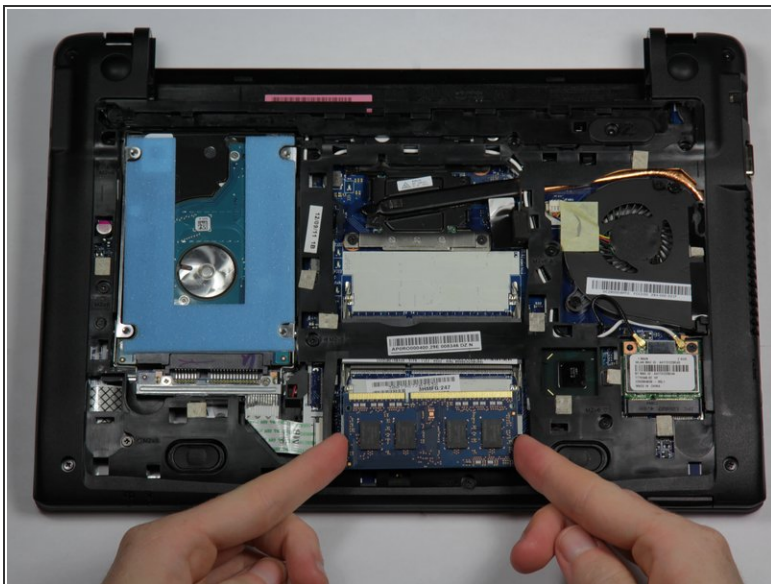

- Pull the RAM stick up and away from the laptop.

To reassemble your device, follow these instructions in reverse order.