




# Les Paul Wireless Guitar Strummer Replacement

This guide will demonstrate how to replace the strummer on the guitar.

Written By: Chris

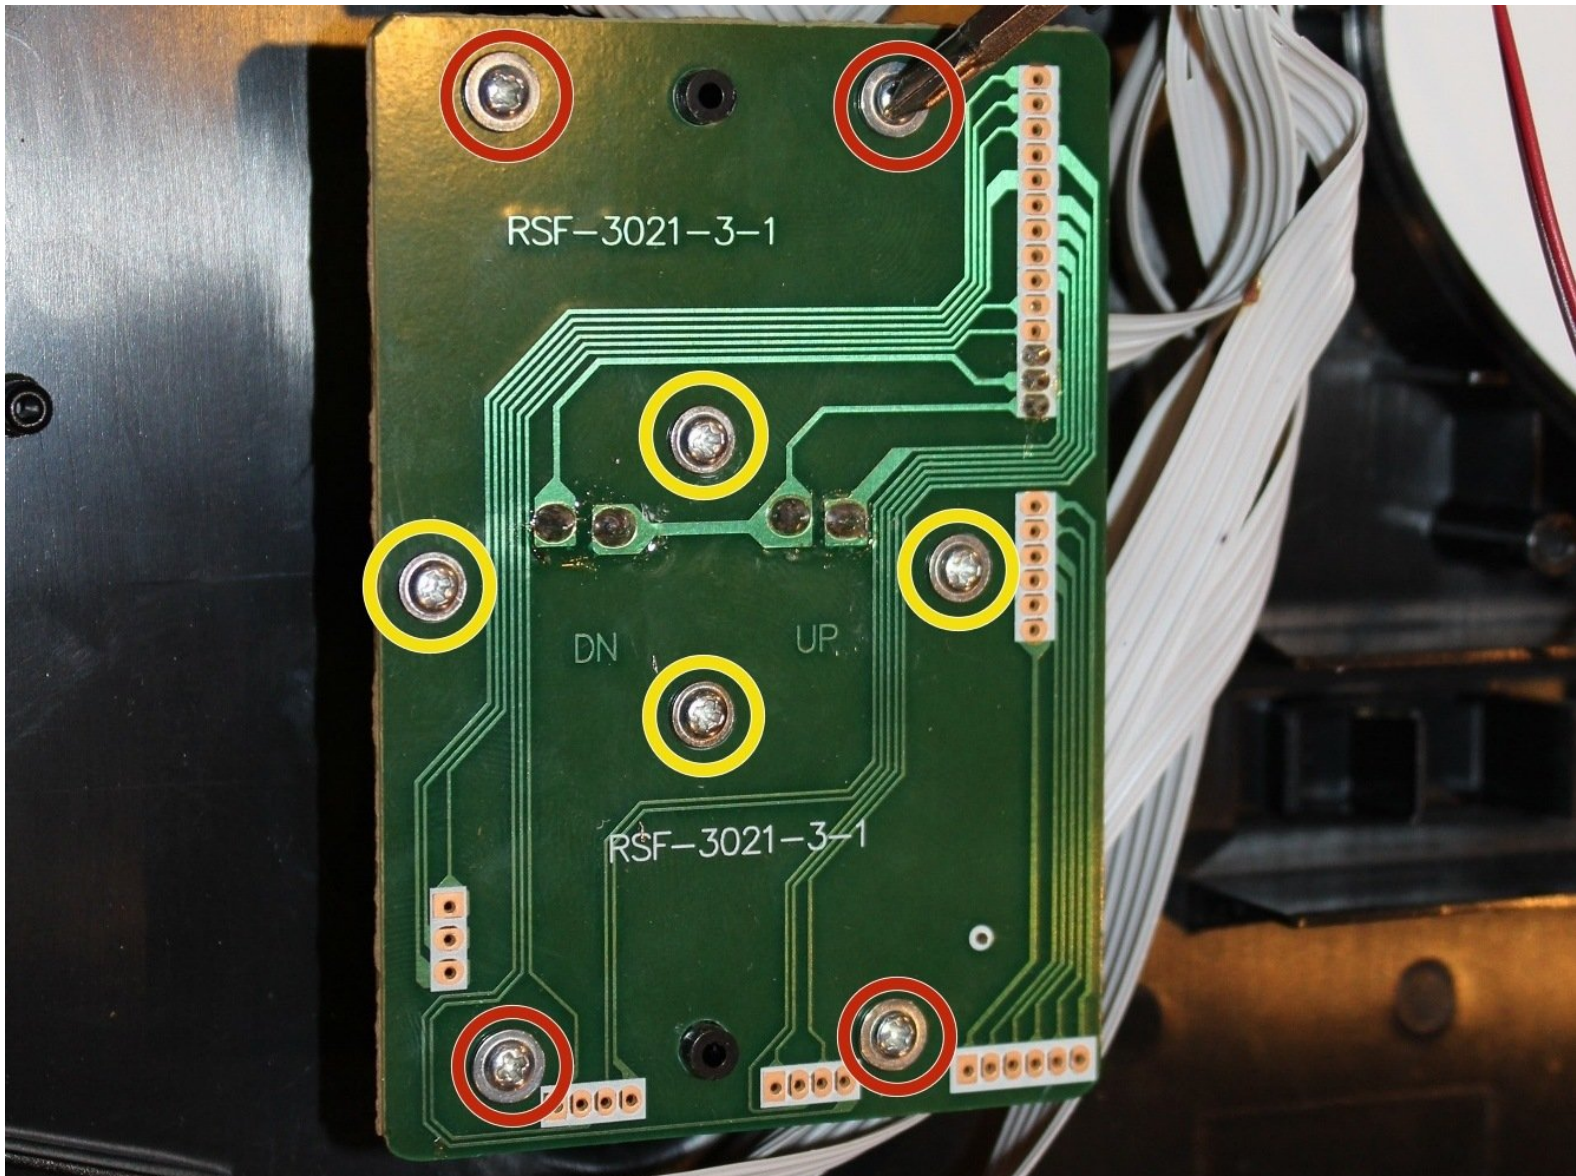

---

## INTRODUCTION

This guide will demonstrate how to replace the strummer, used in the game to strum for every note, on the guitar.

---

### TOOLS:

- [TR10 Torx Security Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Les Paul Wireless Guitar Body Teardown



⚠ Remove batteries


## Step 2



- Remove void warranty sticker
- The sticker is covering a torx screw





## Step 3

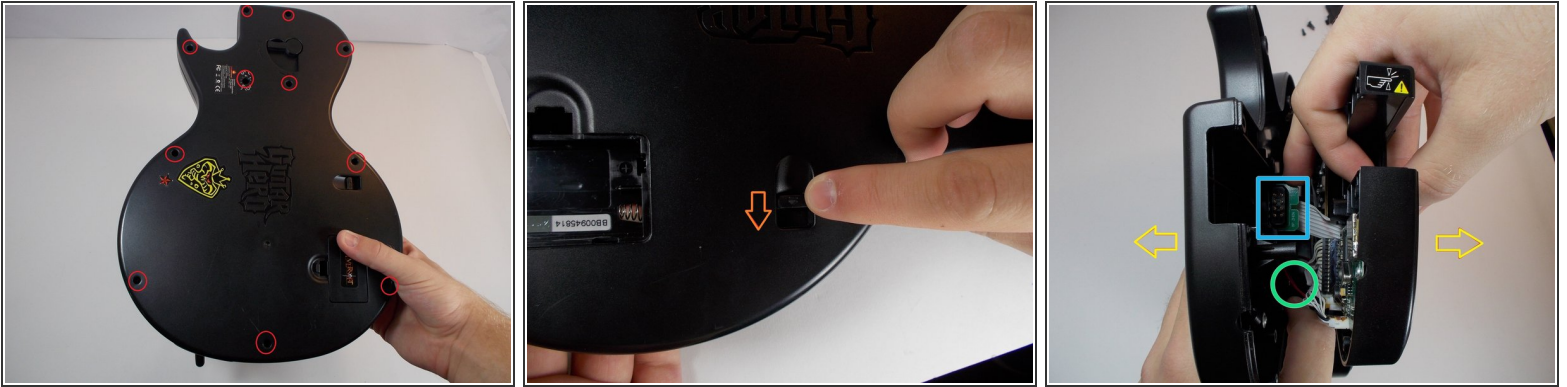


- Unscrew the 11 screws securing the back of the body using a T10 Torx screwdriver. Each screw is 1 cm long.
- Push level, this will detach the back of the guitar from the front.
- Carefully remove the back of the body
  - The battery pack cord is attached to both sides of the guitar, be careful not to tear it apart.
  - The neck connector may be stuck to the back so be sure to detach it before fully pulling

## Step 4 — Strummer

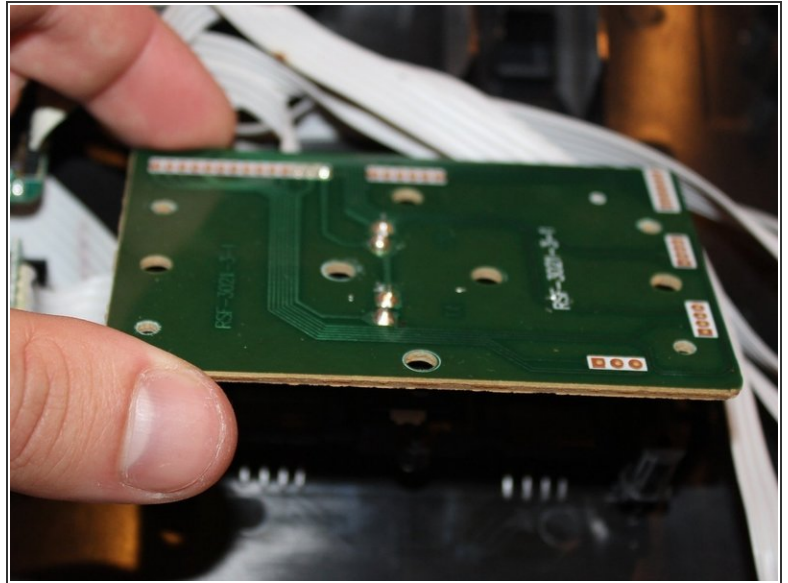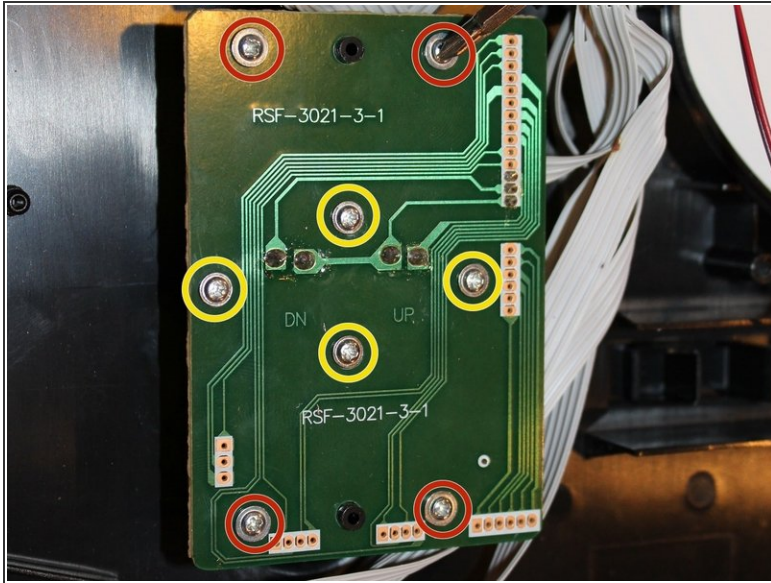


- Remove the 4 screws from the back of the strum chip using a Phillips PH1 screwdriver. each of these screws are 1.2 cm each.
- Remove the 4 inner screws, each are 0.8 cm.
- Make sure that when putting back together, the 4 inner screws line up with the small plastic piece underneath.

## Step 5

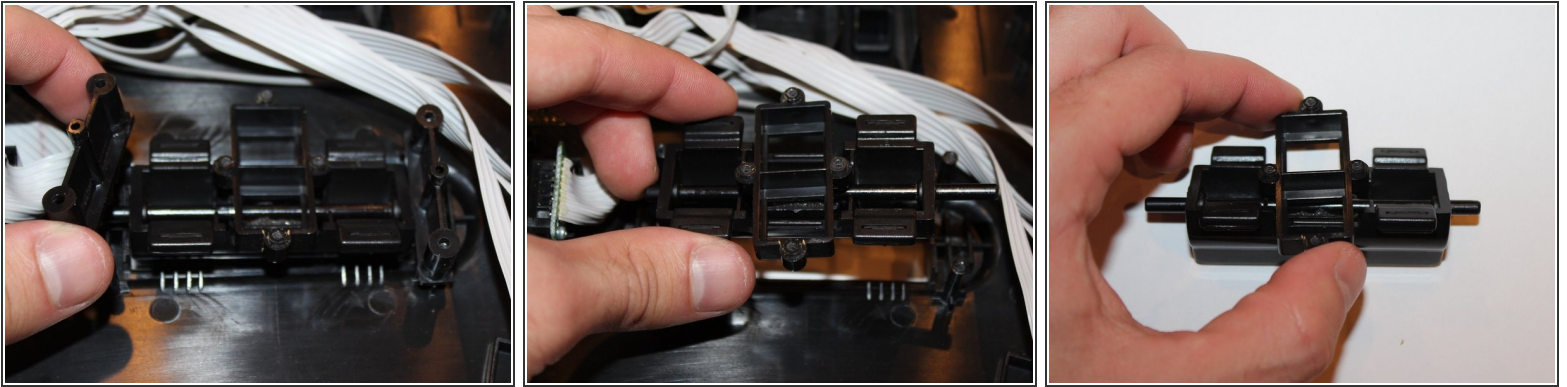

- Remove the two plastic holders on the underside of the chip.
- Pull out the the plastic piece on each side of the strummer.
- Lift the strummer out of it's location

## Step 6

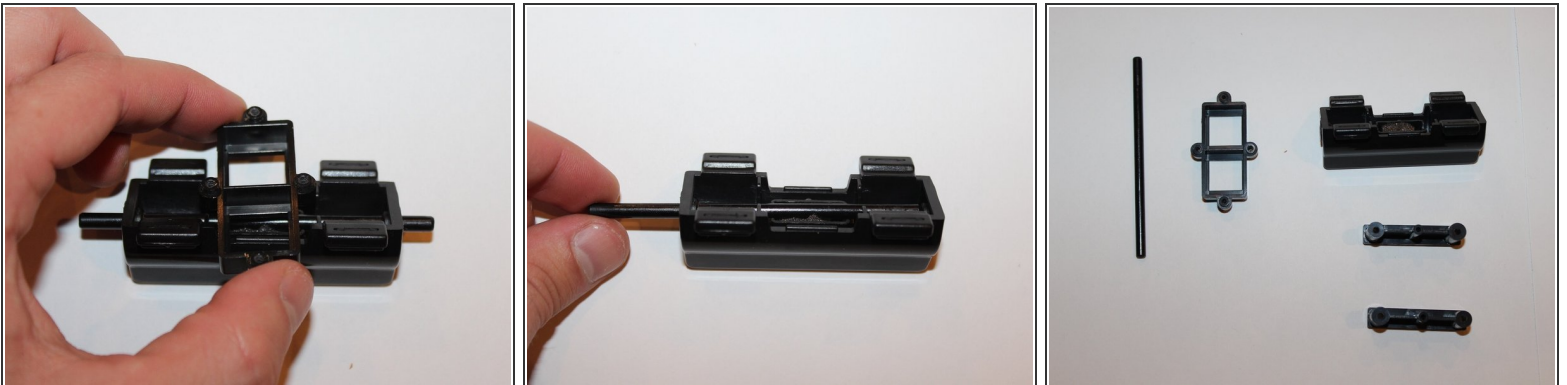

- Take the top black cover off the strummer.
- Slide the black rod out of the side.
- Clean if needed.

To reassemble your device, follow these instructions in reverse order.