



# Crosley CR704 Audio Jack Input Replacement

Written By: MarkAnthony





## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Safety



- Make sure the device is unplugged and not connected to a power source.

## Step 2




- Using your Phillips head screwdriver, remove the 10 outer black screws from the back of the device.

## Step 3



- Gently remove the back of the device, being careful not to pull any wires out of place.

## Step 4

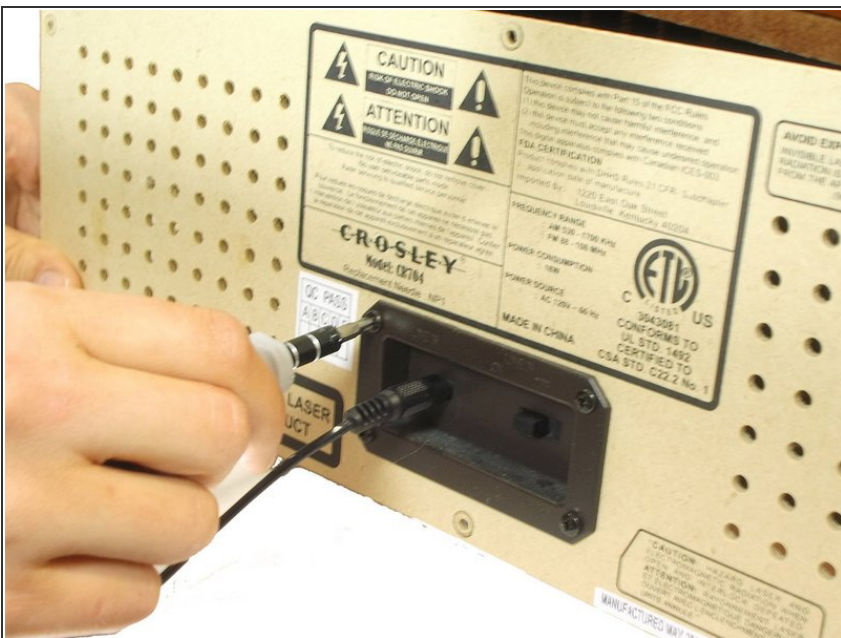

- Using the Philips head screwdriver, remove the 4 black screws from the audio input box.

To reassemble your device, follow these instructions in reverse order.