
INTRODUCTION

The 16 SanDisk is a limited internal memory capability for the Chromebook.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Cover




- Place the laptop on a flat surface with the bottom side facing up.
- Remove the rubber feet from the bottom of the panel using your fingernails.
- Remove all the seven screws from the bottom panel.

Step 2




- Loosen the back cover panel using a spudger.

Step 3

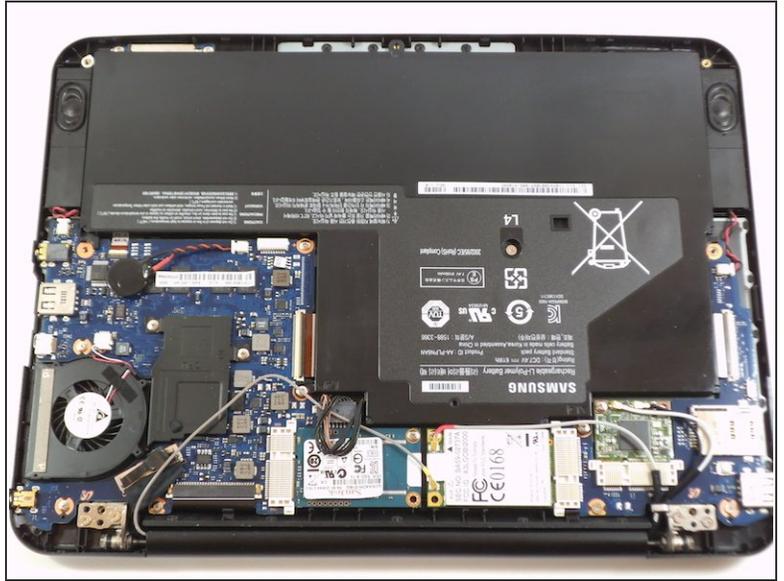

- Once you work your way around, you can remove the panel.

Step 4 — 16 GB SanDisk

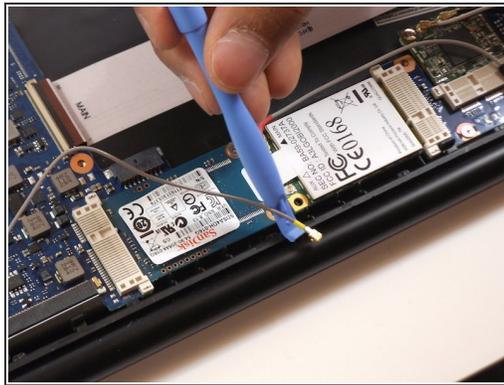

- Remove the single screw.
- use the plastic tool to disconnect the WWAN antennas from the board.
- After removing its mounting screw, the 16 GB SanDisk can be removed from the motherboard.

To reassemble your device, follow these instructions in reverse order.