



Lenovo Laptop T400 Motherboard Replacement

Allow you to replace parts like keyboard, RAM or fan for uprocessor, GPU.

Written By: Carsten Dahl Hjarup



INTRODUCTION

Detailed steps to disassemble to the logic board, then useful pictures for rest of guide. (remember to add new thermal compound if you need to remove/replace fan assembly on processor and GPU)

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Motherboard



- recommend to print out picture of the backside of the laptop and then use it as a template to place the screws on. They are many and different sizes.
- Remove all bottom screws and place on template printout.

Step 2



- Remove DVD drive. Toggle the "play triangle" switch so that the tab extends. Pull the tab to remove the DVD drive.
- Remove hard drive

Step 3




- unsnap touchpad left and right.
- lift up touchpad carefully, and disconnect touchpad.

Step 4



- Pull keyboard gently toward yourself. and then lift up until flex is visible.
- use spudger to disconnect connector for keyboard.

Step 5

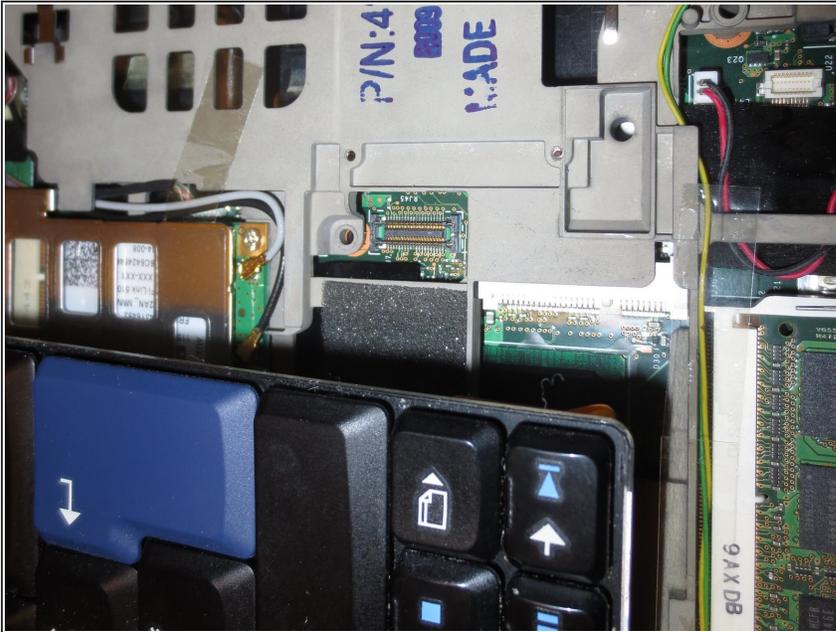

- The rest of the guide is mostly helpfull pictures...
- Remove WLAN module by
 - unplug carefully with spudger the two RF connectors to WLAN module.
 - remove the two screws holding wlan module.
 - lift up module 45 degress and pull outwards.

Step 6



- usefull images showing most of main assembly.
- Removing RAM modules is usefull if the whole logic board needs to be taken out.
- From here on , unscrew everything - carefully note where screws belong. I used IFixit magnetic mat and some note making.

