

# **CD/DVD Drive Replacement**

Written By: Marjorie



#### TOOLS:

Pro Tech Toolkit (1)

## Step 1 — Battery



• Remove all wires then flip the laptop

#### Step 2





• Remove the battery


#### Step 3 — CD/DVD Drive





• Remove the 2 screws holding the CD/DVD Drive.

### Step 4

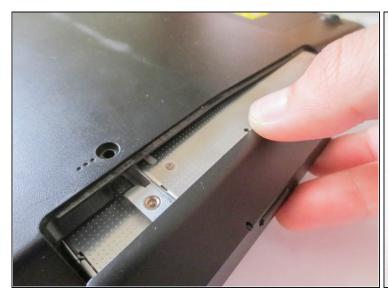



• Slide the CD/DVD Drive out.

To reassemble your device, follow these instructions in reverse order.