

Sony Vaio VGN-S260 Upper Casing Replacement

Written By: Jeffrey Bryan



INTRODUCTION

How to remove the upper casing of the Sony Vaio VGN-S260 laptop



TOOLS:

- Phillips #00 Screwdriver (1)
- Spudger (1)

Step 1 — Battery







- Flip the laptop over so the Vaio logo is facing down.
- Locate the battery at the top and Find the release and unlock slides on the battery.
- Slide the unlock tab to the unlock position.
- Slide the release tab in the direction of the arrow, i.e. towards the unlock tab.

Step 2





With the tabs still in the unlock position, slide the battery away from the main case.

Step 3 — Keyboard





- Flip the computer over so the Vaio logo is facedown.
- Unscrew the 2 screws next to the battery.

Step 4



- Flip the computer over again so the Vaio logo is face up.
- Open the lid.

Step 5





- Press down on the outer gray shell around the keyboard.
- Use the spudger to gently lift keyboard.

No not pull up the keyboard too far as it is attached to a ribbon underneath.

Step 6





Lift up lever underneath the ribbon to detach the keyboard.

This document was generated on 2020-11-28 01:42:34 AM (MST).

Step 7 — **Upper Casing**



 Remove memory/wireless compartment cover.

Step 8








- Flip so the Vaio Logo is face down.
- Locate and remove a total of 8 screws on the bottom.

Step 9

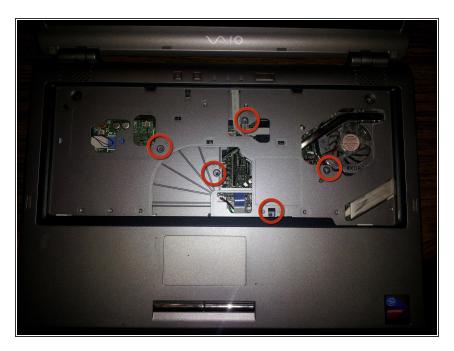

 Find and remove 5 screws (they all have arrows next to them) from cover.

Step 10







- Flip the laptop over so the Vaio logo is face up.
- Use the spudger to pop up the upper casing.
- ↑ Do not lift too much as the upper casing is attached to wires underneath.
- Remove the wires that are attaching the upper casing to the motherboard.

Step 11



Remove the upper casing.

To reassemble your device, follow these instructions in reverse order.