


Disassembling Brother PT-D200 Back of Device


This guide will show you how to open up and disassemble your Brother PT-D200.

Written By: [deleted]



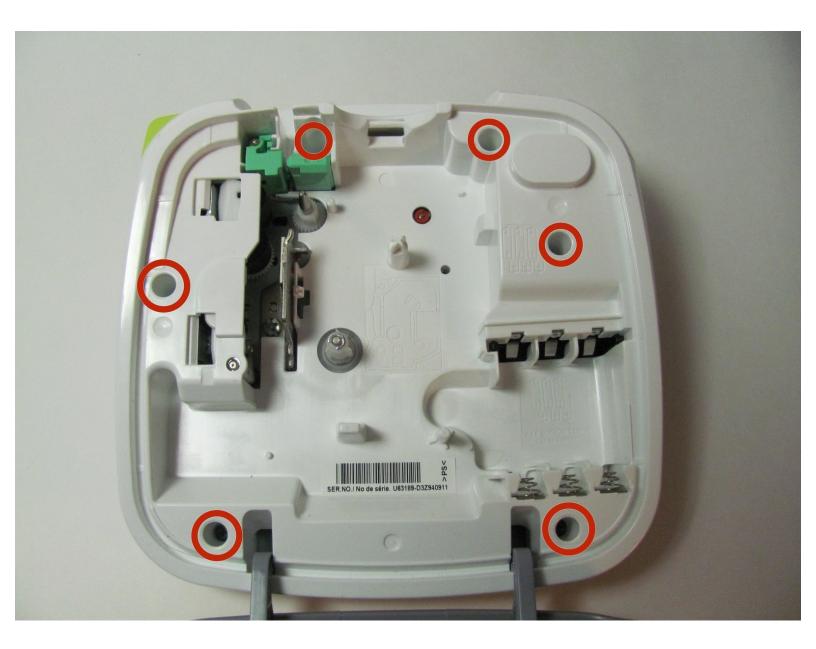


Step 1 — Battery

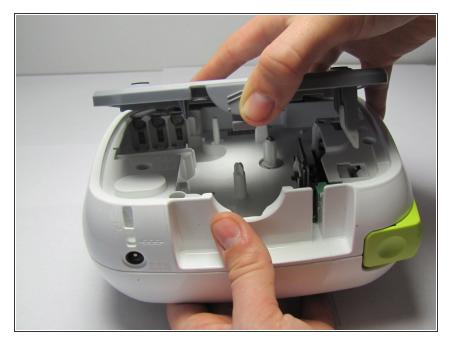


 Flip the device over and press down on the indication arrows located at the top center of the back cover and pull it open.

Step 2

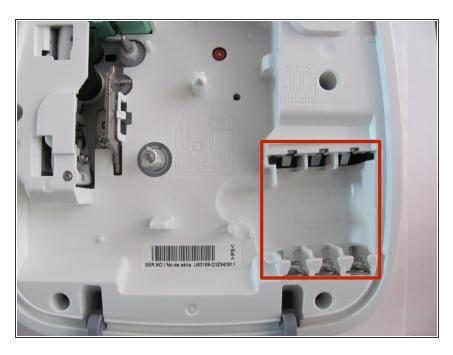

• Remove the six AAA batteries.

Step 3 — Back of Device

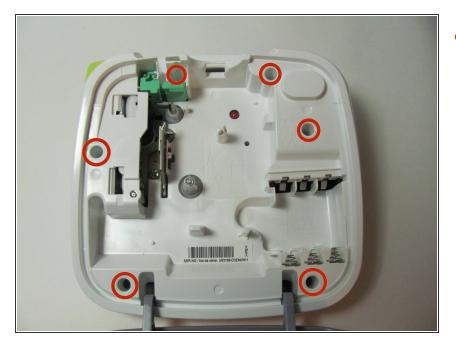

 Use the Helping Hand 1/4" screwdriver to unscrew the six 3/16" corner screws.

Step 4



• Close the back cover and then flip the device over and separate the top half from the bottom half as shown.

Be gentle when lifting the top of the device, there is a ribbon cable attaching the two halves together.

To reassemble your device, follow these instructions in reverse order.