

Separate Samsung SGH-X105 Front & Back Panels

Separate your phone's front and back cover.

Written By: DJ Tarazona



INTRODUCTION

Separate your phone's front and back cover.



Phillips #00 Screwdriver (1)

Step 1 — Battery



 Rotate the phone onto its front side so that the LCD screen is facing away from you.

Step 2







 Remove the battery by pressing down on the battery release button while sliding the battery downwards.

Step 3 — Front & Back Panels



- Remove the four small black screws that secure the back phone panel using the Phillips #00 screwdriver.
- *i* Complete removal of screws may not be necessary.

Step 4








- Carefully separate the front and back panels by gently prying them apart. Start at the bottom of the phone (near the AC charger input).
- ② Volume control button will be unsecured and may fall out as soon as the panels are separated.
- ② Gentle force may be required to separate the panels at the top latch.
- (i) There are two wires connecting the front and back panels. Be careful not to rip these wires out when separating the panels.

Step 5

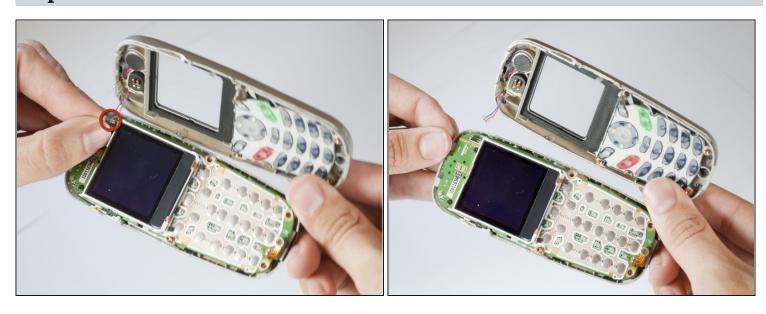

• Using your nails, <u>tweezers</u>, or any precise grabbing tool, pinch the antenna wire connector (clear plastic plug) and pull gently. It should pop out rather easily.

To reassemble your device, follow these instructions in reverse order.