




# Fix rattling sound inside Tapco Link

Remove an unnecessary part that sometimes comes loose.

Written By: Tobias

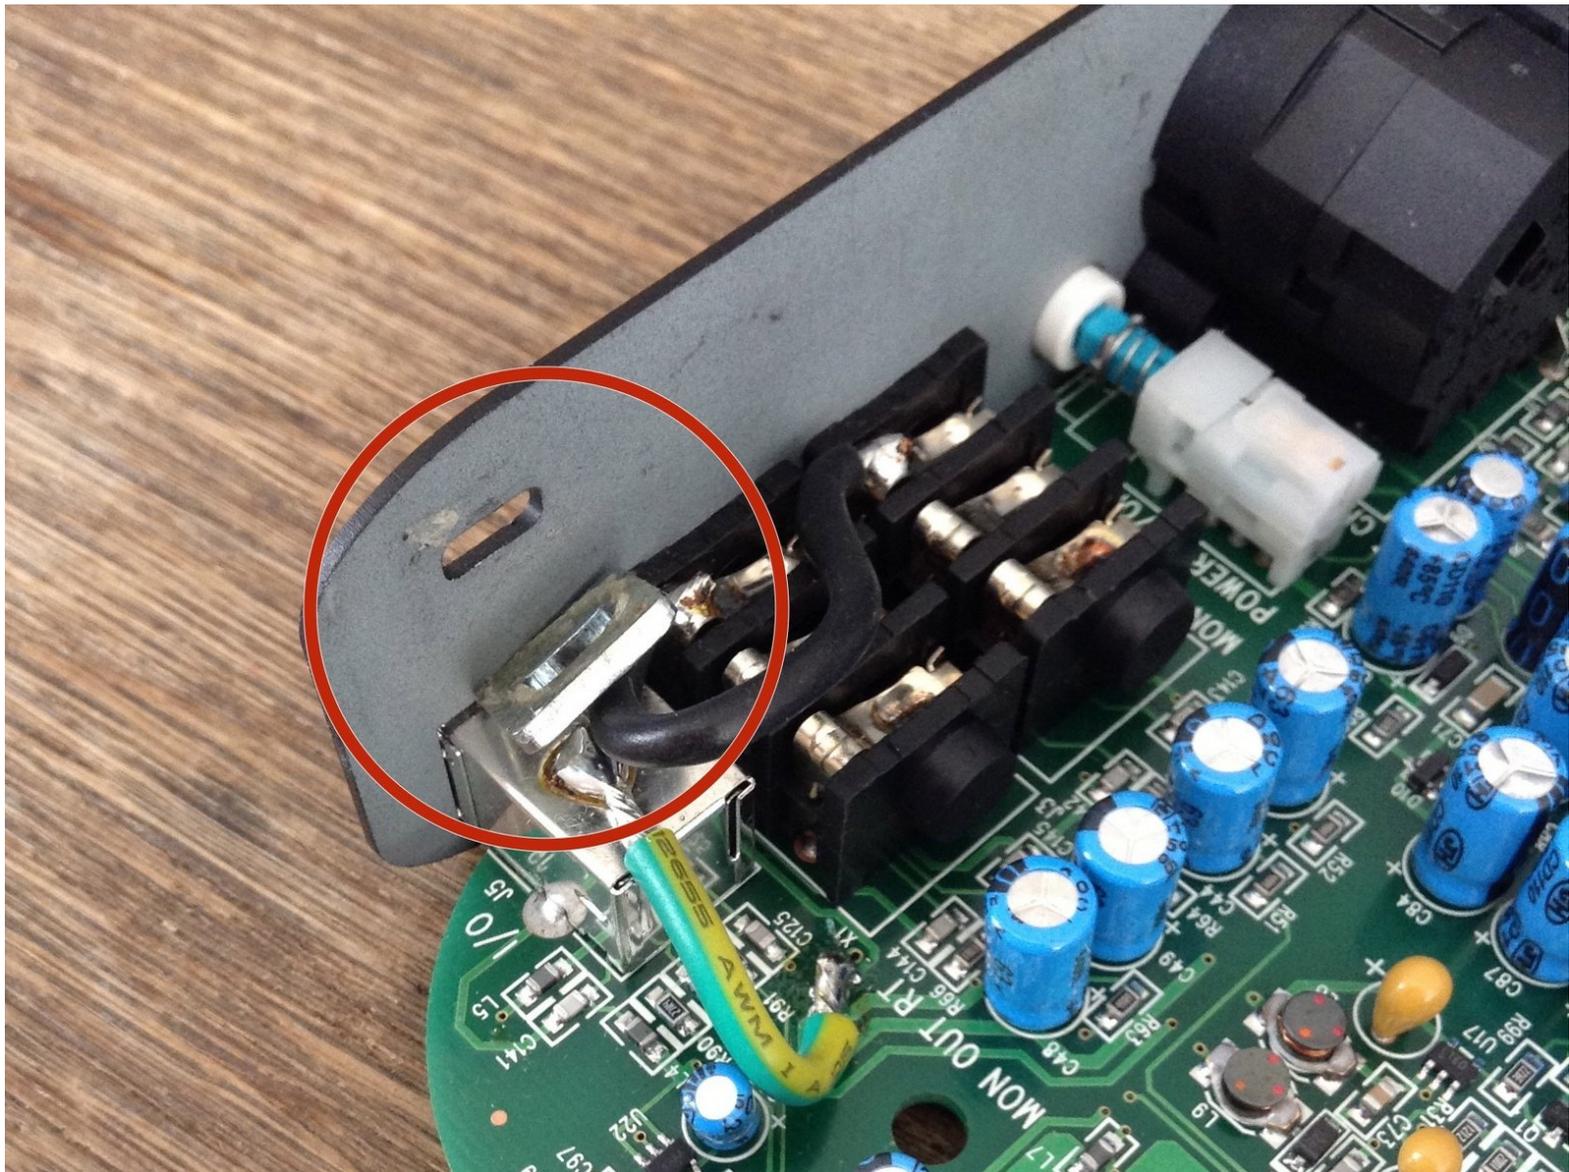

---

 **TOOLS:**


- [Phillips #1 Screwdriver](#) (1)
  - [Heavy-Duty Spudger](#) (1)
-

## Step 1 — Introduction



- Put the device in front of you, with the knob labels the right side up

## Step 2 — Revealing Screws

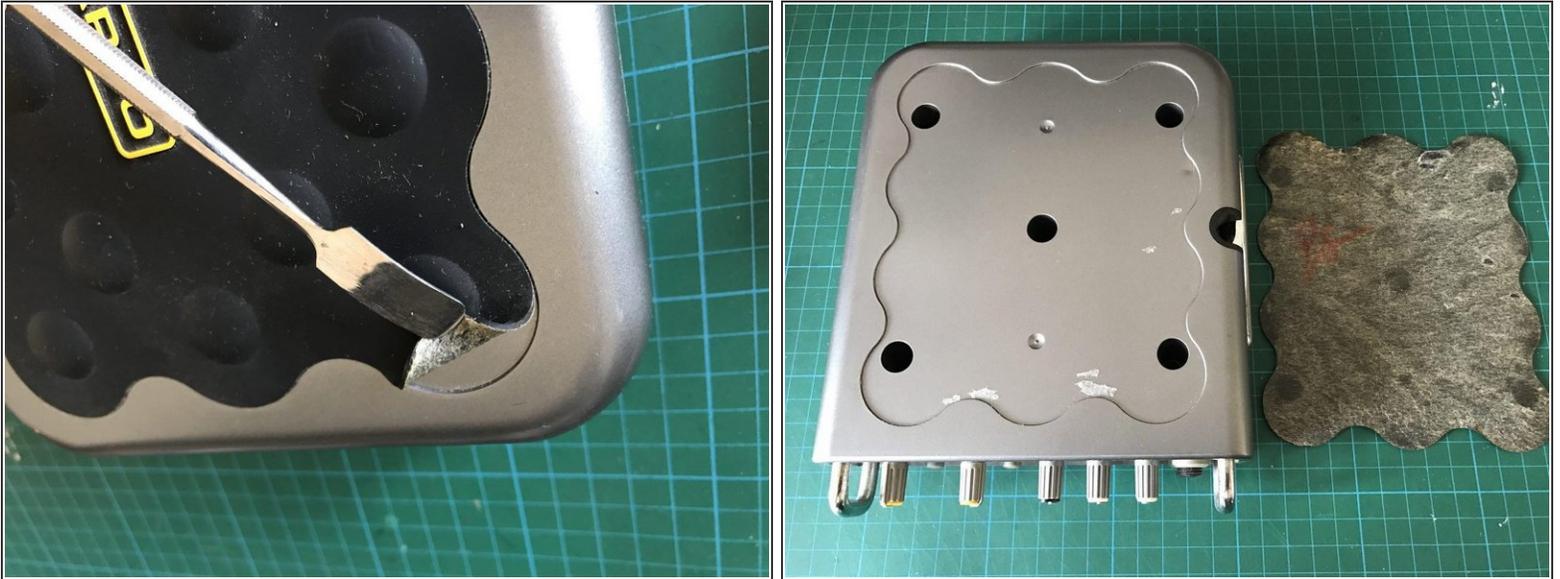

- Pry the rubber off the top of the device
- All the rubber
- Use your fingernails, then pull with your bare hands. Do not use a heat gun or prying tool as they will damage the adhesive.
- 5 screw holes will appear. Leave them alone for now.

### Step 3



- Look at the side of the device with the metal stand
- Take a heat gun to the two small foam pads
- You only need to pry off the halves on the top plastic shell
- Put scraps of glossy paper on the foam pads to prevent them from sticking on again
- Alternatively, if you do not mind sacrificing aesthetics, you may slice the foam pads down the middle as in the picture.

## Step 4




- Now remove the 5 Philips screws on top

## Step 5




- Simply lift off the top
- No clips anywhere

## Step 6

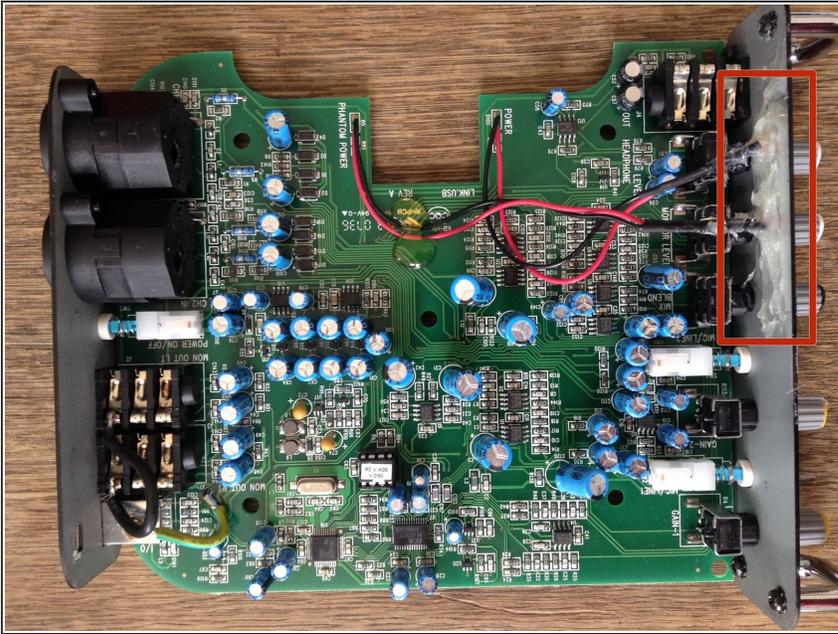

- You could now lift out the whole innards
- They are not attached to the bottom shell
- No, the mess of glue is how it left the factory

## Step 7 — Fix rattling sound inside Tapco Link

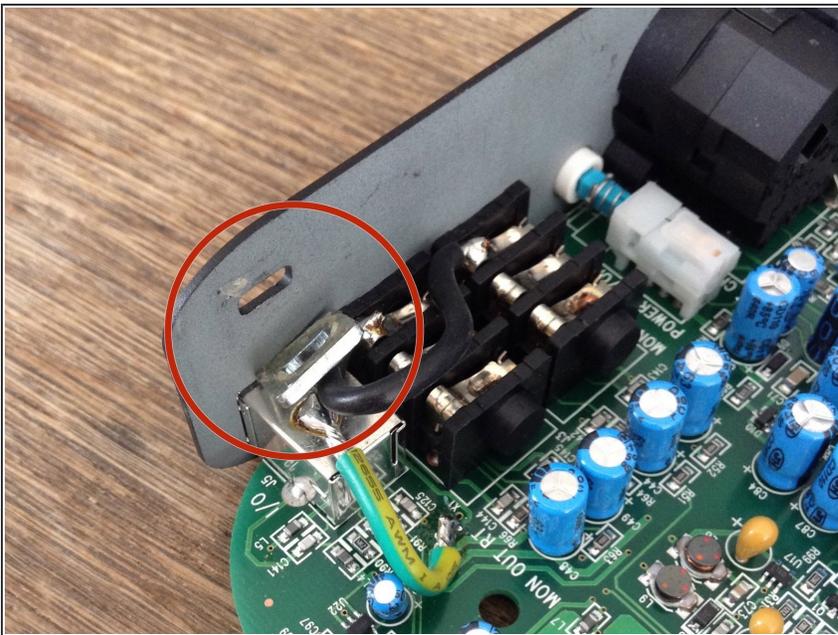

- Look for a small metal rectangle with a hole
- It's supposed to give a Kensington lock a better hold than the thin backplate
- It's insufficiently glued on

To reassemble your device, follow these instructions in reverse order.