



# iPhone 6 SIM Card Replacement

Replace the SIM Card in the iPhone 6.

Written By: Walter Galan



## INTRODUCTION

Use this guide to remove or replace the SIM card.



### TOOLS:

- [SIM Card Eject Tool](#) (1)



### PARTS:

- [iPhone 6 Nano SIM Card Tray](#) (1)

## Step 1 — SIM Card



- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray.
  - Press to eject the tray.
- i** This may require a significant amount of force.

## Step 2



- Remove the SIM card tray assembly from the iPhone.
- ☒ When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

To reassemble your device, follow these instructions in reverse order.