



Besta Super 5000 Battery Replacement

Remove and replace the battery on a Besta Super 5000.

Written By: Jessie



INTRODUCTION

This is a step-by-step guide on how to remove and replace the battery on a Besta Super 5000. Containing pictures and simple procedural steps, this guide is easy to follow so you can get your Besta Super 5000 back on track. No special skills or tools are required.

Step 1 — Battery



- Turn the device over so that the barcode is facing upwards.

Step 2



- Place your fingers on the battery cover arrow and pull the cover down and off the device.

Step 3



- Pull upwards on the battery tab to remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.