



HP ProBook 4320t Keyboard Replacement Guide

Replace a malfunctioning keyboard or keyboard that's missing keys/cracked keys

Written By: Joshua



INTRODUCTION

If your keys are sticky, missing, or otherwise broken, the keyboard may need replacing. The keyboard is also a necessary part to remove if one needs to get to any internal components.

TOOLS:


- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery Removal




- Flip the laptop upside down and remove battery by pressing inward on the two latches holding the battery in.

Step 2 — Screws

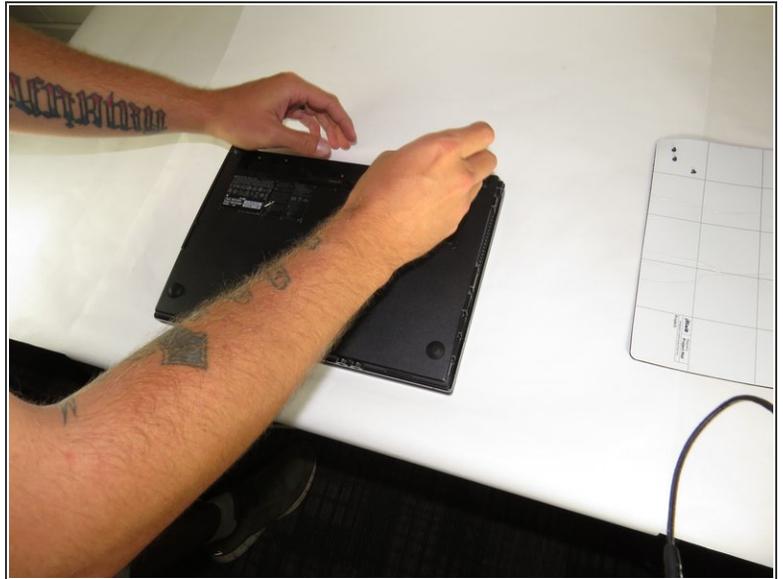

- Unscrew the four (2.5 mm Phillips) screws (Use Phillips #0 Screwdriver).

Step 3 — Flip

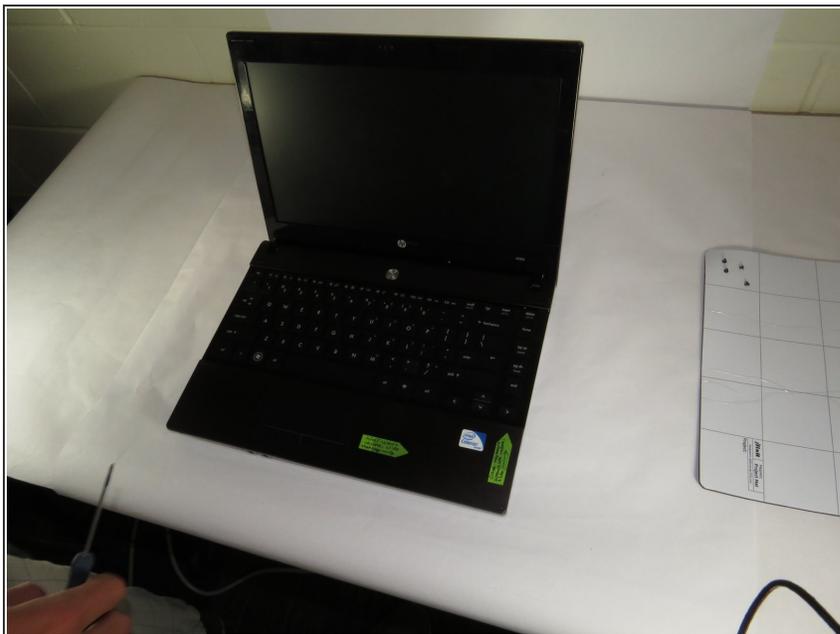

- Flip laptop over and open it.

Step 4 — Push N Lift



- Slightly push up while lifting up on the power button panel to release the panel.

Step 5 — Unscrewing




- Unscrew the four (2.5 mm Phillips) screws holding the keyboard in (Use Phillips #0 Screwdriver).

Step 6 — Careful Now



- Carefully (holding both sides of the keyboard), push up and lift slightly.
- ⚠ Keyboard is still connected via a ribbon cable.
- Move the keyboard slightly to the left to have access to the keyboard ribbon cable.

Step 7 — Disconnect Wire

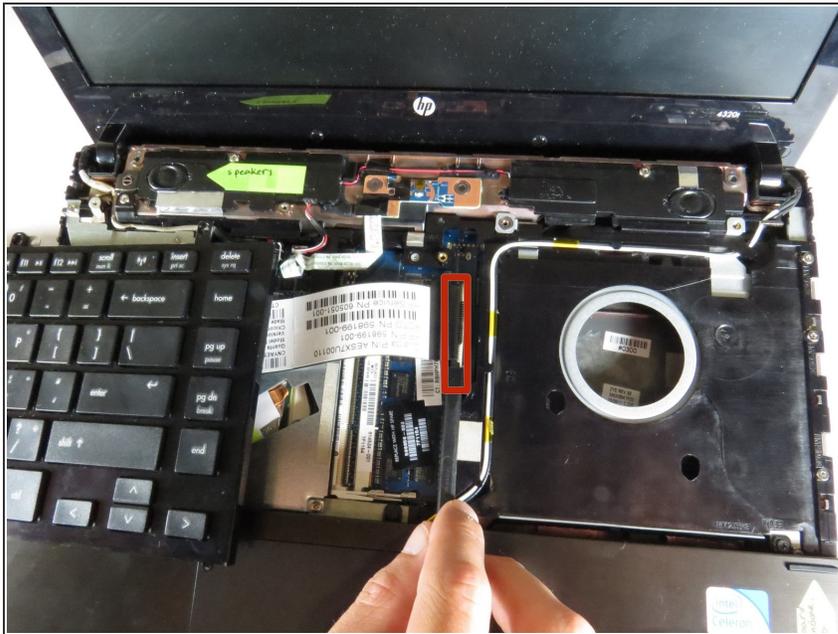

- Use the black spudger to lift the black latch holding the keyboard ribbon cable.

To reassemble your device, follow these instructions in reverse order.