



Craftsman Model 315.10721 Brush Replacement

This guide will show the proper steps for replacing the brush inside the motor of the saw.

Written By: Riley Hilliker



INTRODUCTION


Often times it is only necessary to replace the carbon brushes, not the motor. Carbon brushes experience a lot of friction, and replacement is generally expected over time. **Ensure your saw is unplugged before beginning the repair**



TOOLS:

- Flathead 3/32" or 2.5 mm Screwdriver (1)
 - Phillips #00 Screwdriver (1)
-

Step 1 — Brush

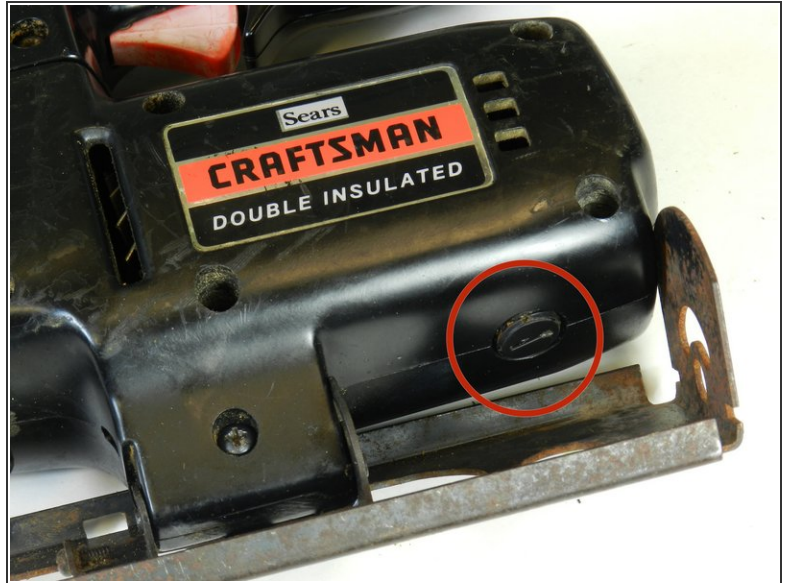

- Using a flathead screwdriver, remove the brush caps on the outer casing of the saw near the motor.

Step 2



- Using a Phillips #00 screwdriver or a small diameter nail, carefully pull out the washer.
- ⓘ The washer is seurely held in place and may require force to remove

Step 3



- After the washers are removed, gently grab the old brushes and remove them from the motor.
- ☑ When reassembling make sure the curvature of the brushes match curvature of the motor.

To reassemble your device, follow these instructions in reverse order.