


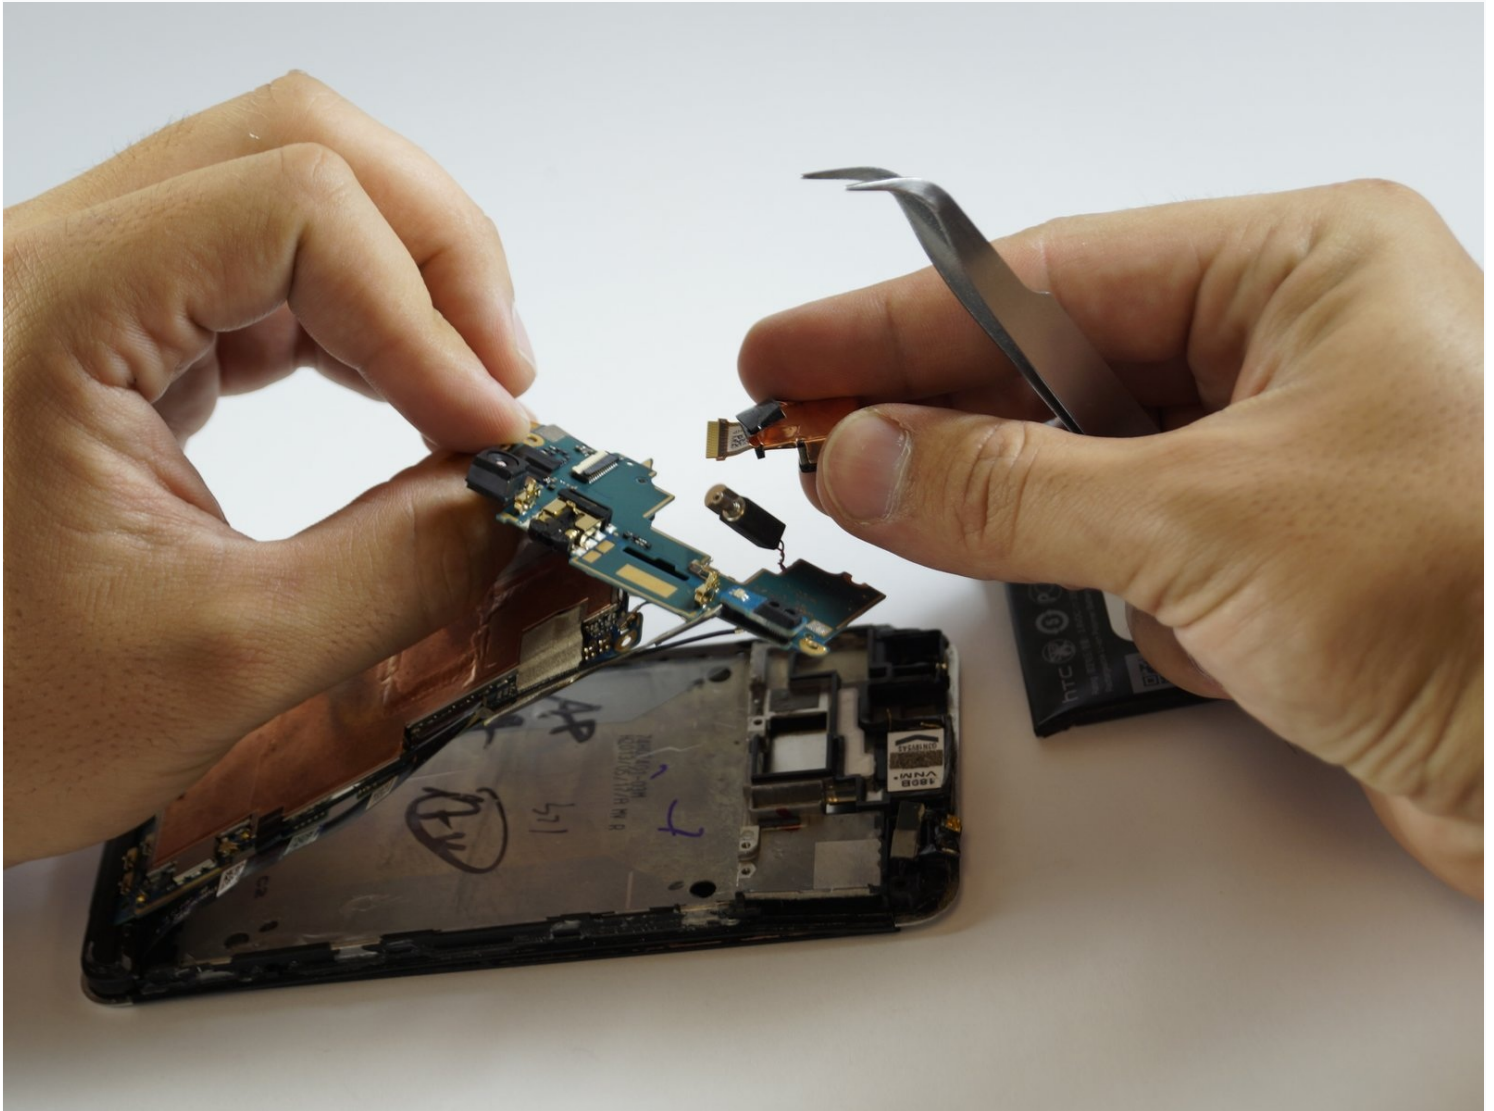

HTC One Speaker Replacement

If you have an issue with your speaker as...

Written By: Alex



INTRODUCTION

If you have an issue with your speaker as stated in our troubleshooting page ([HTC One M7 Troubleshooting](#)) then this guide is for you.


TOOLS:

[iFixit Opening Tool](#) (1)

[Tweezers](#) (1)


[Phillips #000 Screwdriver](#) (1)

Step 1 — Speaker

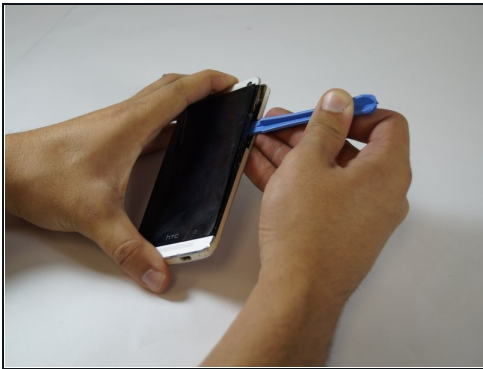


- Gently remove the volume button. Using a plastic opening tool or guitar pick, loosen the back panel of the phone. Work around the phone, following the crease of the back panel.

Step 2

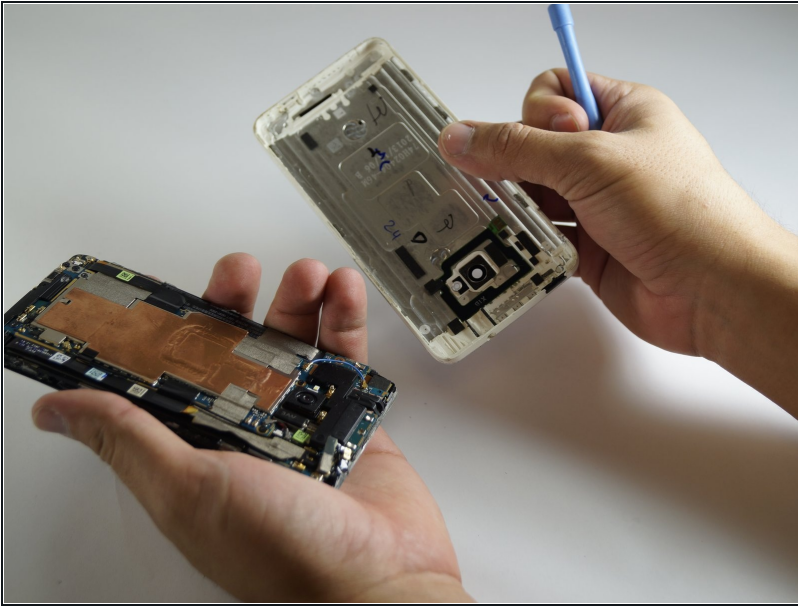


- Pry the back loose and lift. The back panel will come off with time.

Step 3

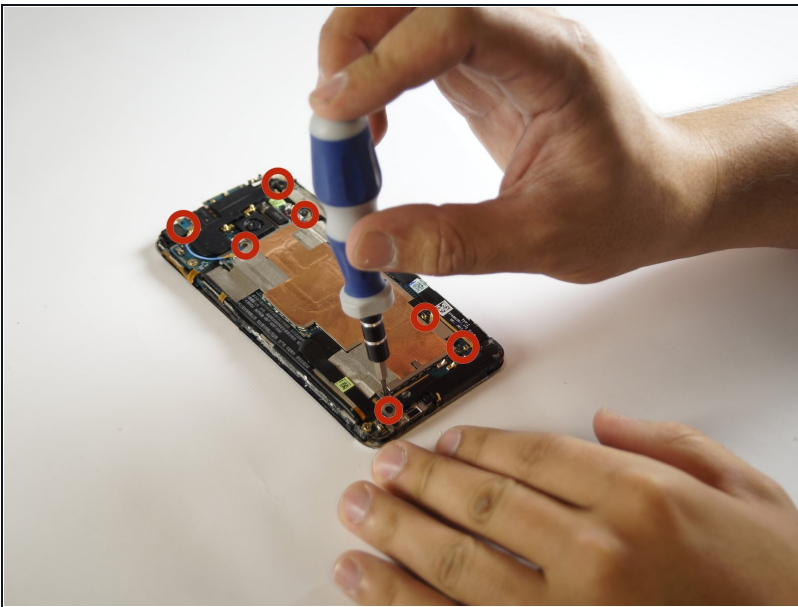

- Remove all of the screw which are located on the backside of the phone with a #000 Phillip screw driver.
- ① Remove the tape gently to find some hidden screws underneath.


Step 4

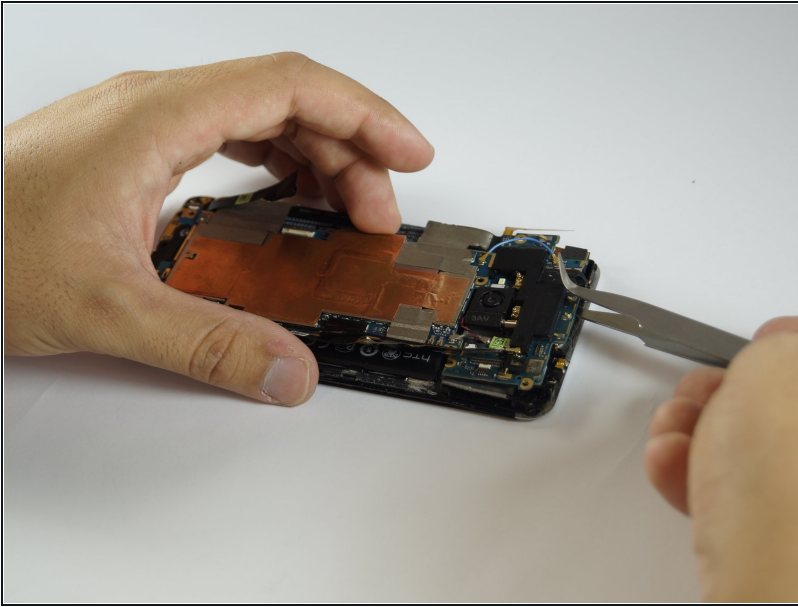

- Use [tweezers](#) to get underneath the motherboard to lift.



⚠ Lift gently because the motherboard is not completely disconnected.

Step 5

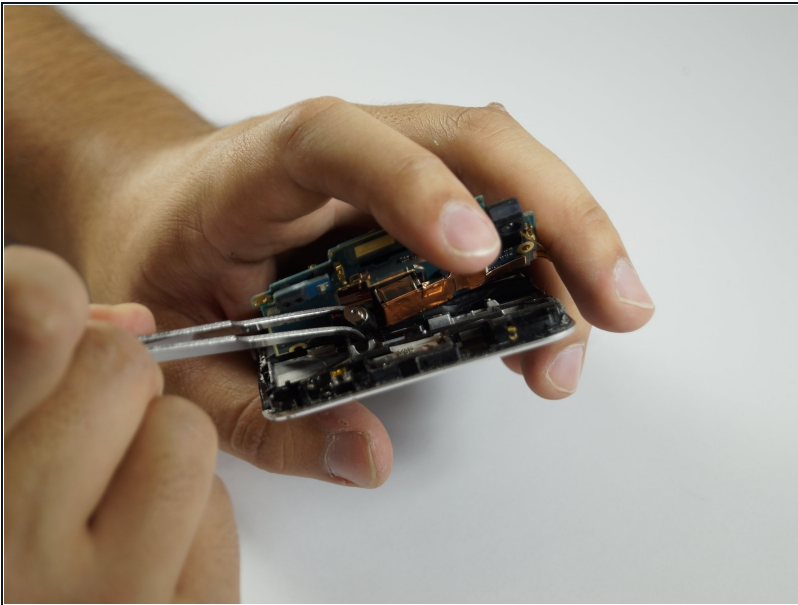

- Remove the Camera by detaching the box from the frame (you will have to rotate the metal piece on the box to remove it)
- Lift the camera from the bottom of the motherboard.



Step 6

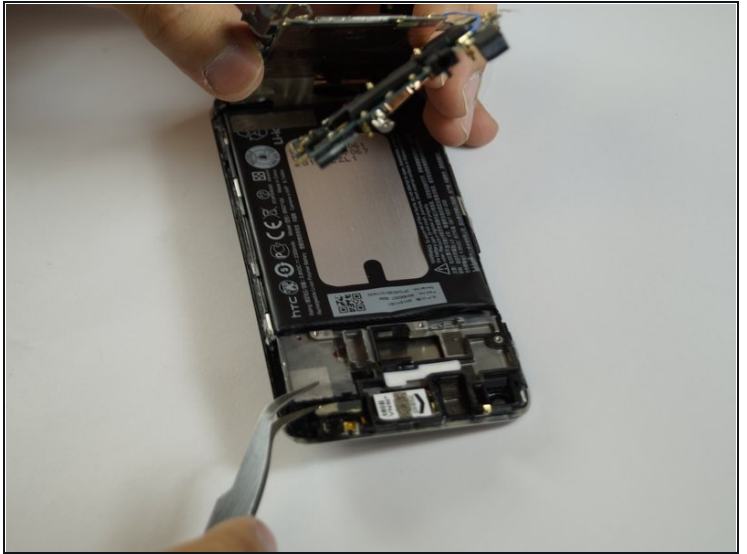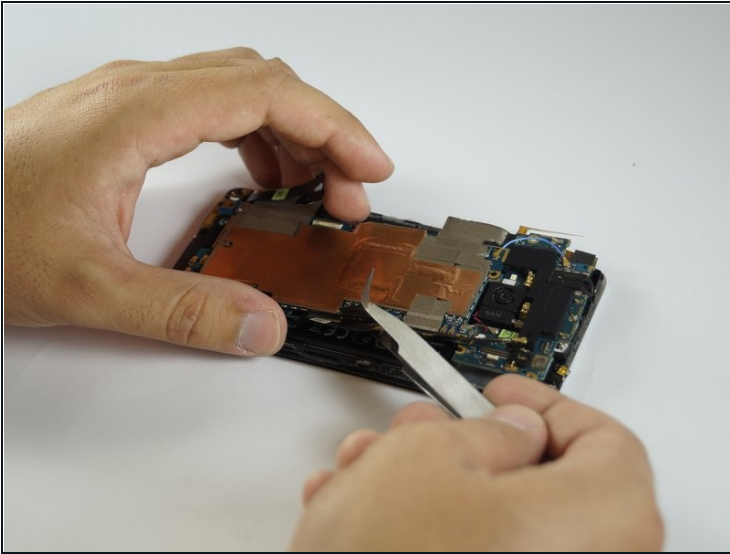

- Remove the motherboard completely out of the phone.

ⓘ May stay attached from one end by tape.

Step 7

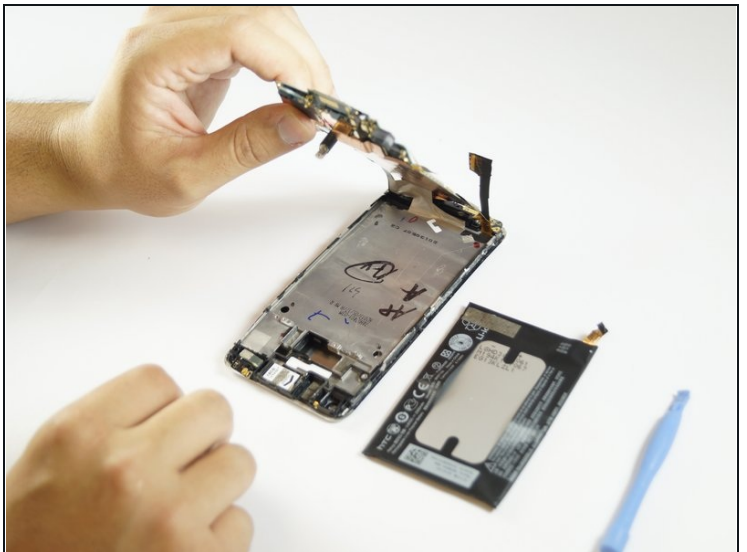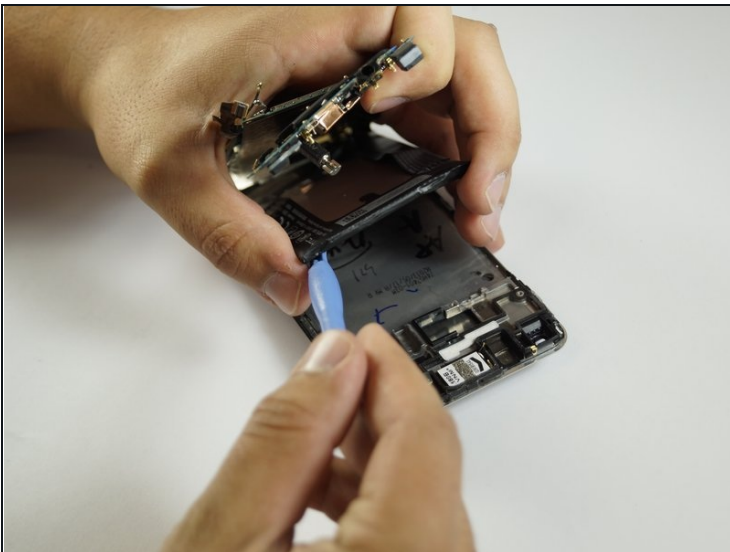


- Use the blue opening tool to pry the battery from the frame.

ⓘ Some force will be needed since the battery is glued to the frame.


⚠ Be careful to not break the battery upon removal.

Step 8

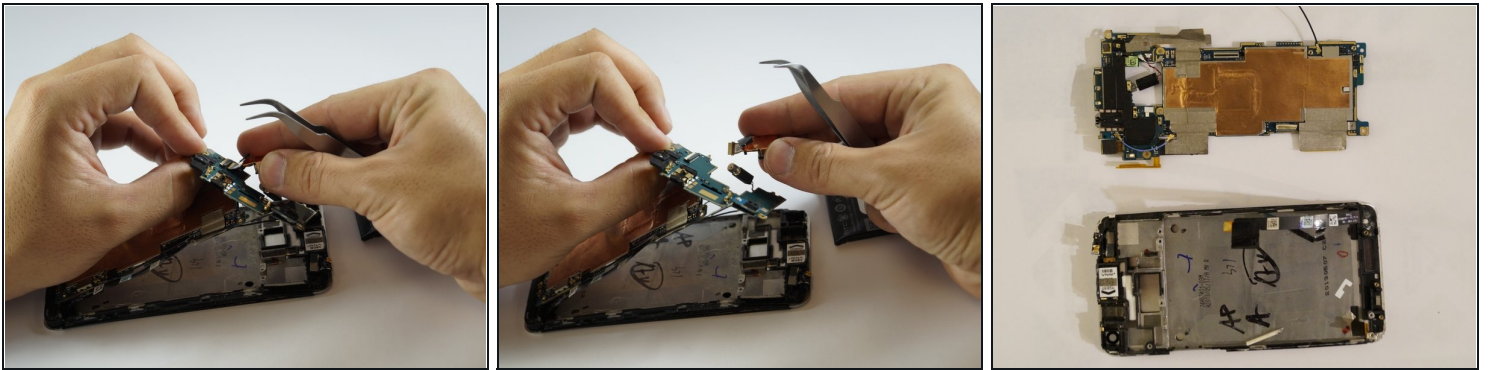

- Completely remove the motherboard.

Step 9

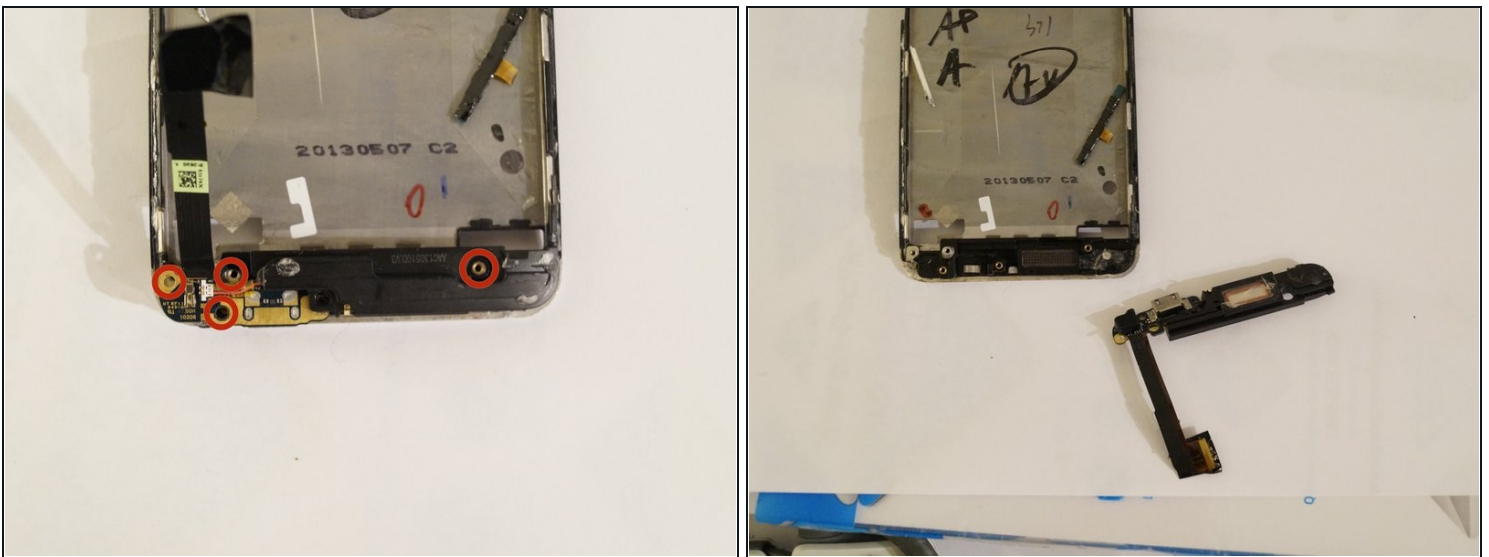

- Remove the #000 screws around the speaker that are located at the bottom of the frame.
- Lift the speaker out of the frame.

To reassemble your device, follow these instructions in reverse order.