




# Wii Balance Board Battery Case Replacement

Use this guide to replace the Battery Case.

Written By: Michelle Reed

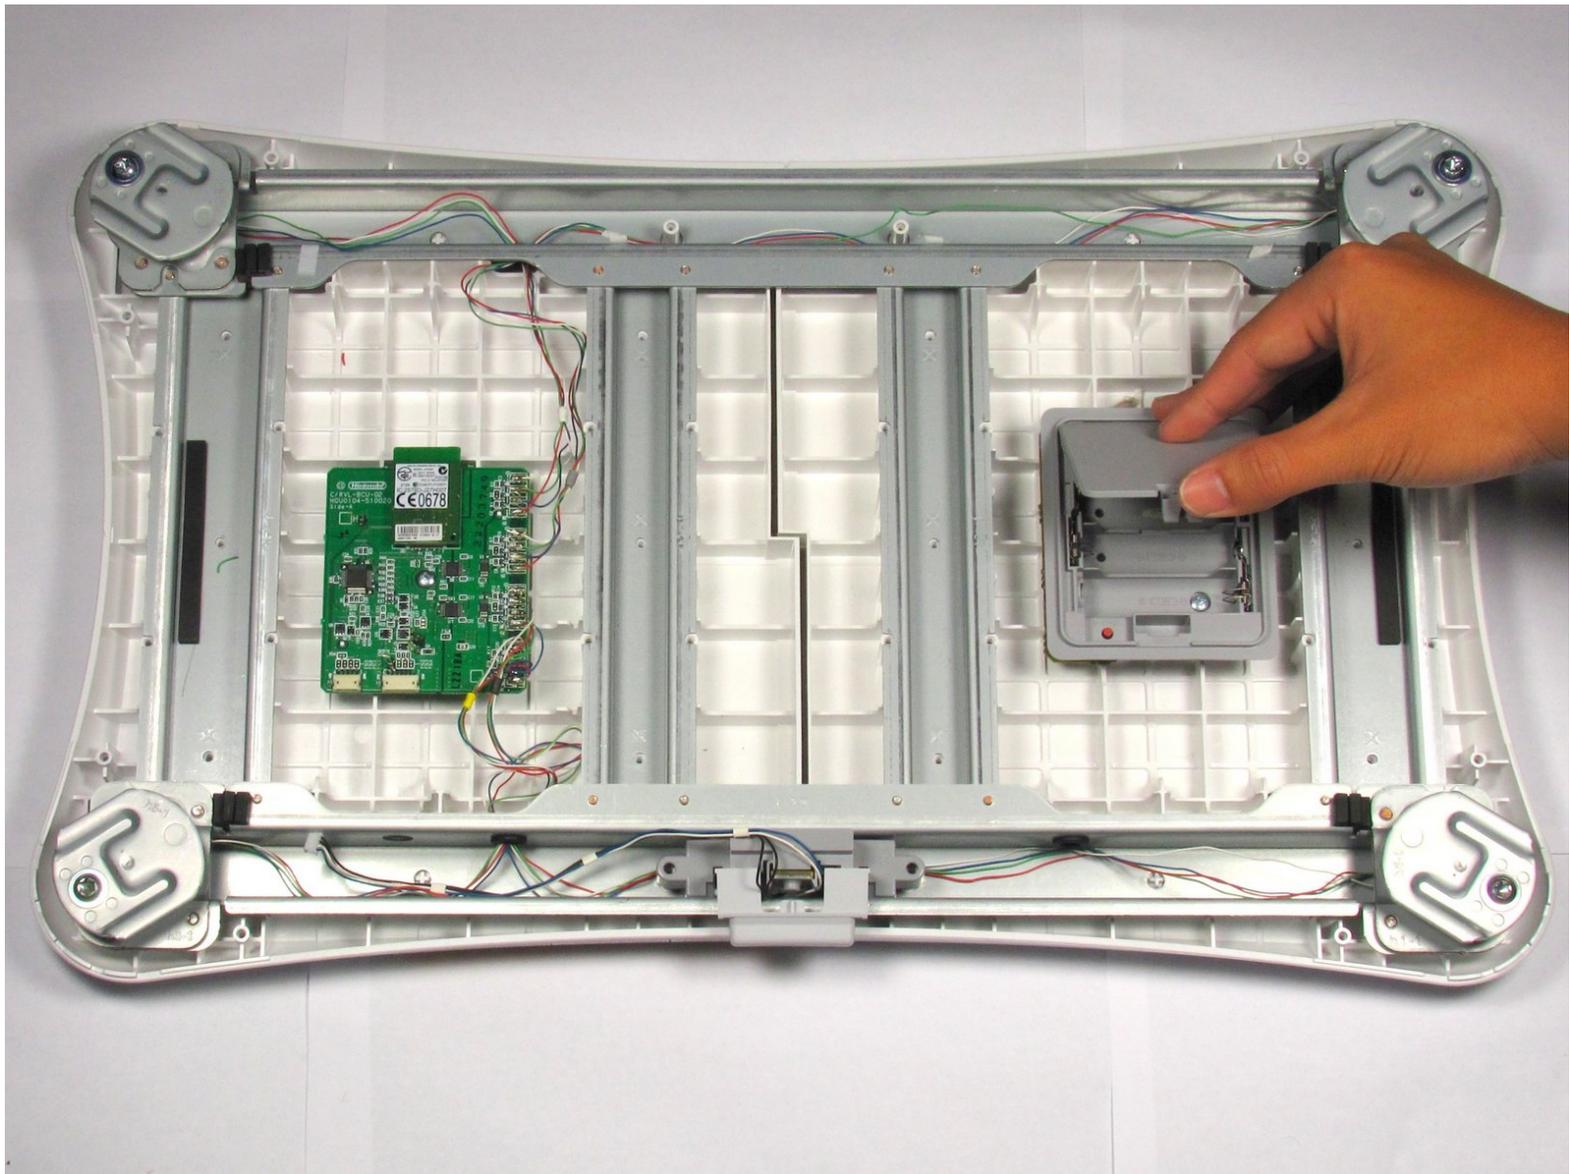

## INTRODUCTION

This guide will demonstrate how to replace the Battery Case inside the Wii Balance Board.



### TOOLS:

- [Phillips #1 Screwdriver](#) (1)



### PARTS:

- [New Wii Balance Board Battery Case](#) (1)

## Step 1 — Unscrewing the Foot Cover



- Flip device upside-down so the plastic white board is facing the ground.
- Locate the four feet in the corners of the Balance Board.
- Unscrew the three 12.7 mm Phillips screws from each foot cover.

## Step 2 — Removing the Foot Cover



- Remove the gray plastic ring from the actual foot by lifting it up.

### Step 3 — Removing the Foot




- Separate the loose foot from the device by lifting it up.

### Step 4 — Removing the Additional Feet



- Repeat steps two and three on the remaining four feet.

## Step 5 — Unscrewing the Back Cover

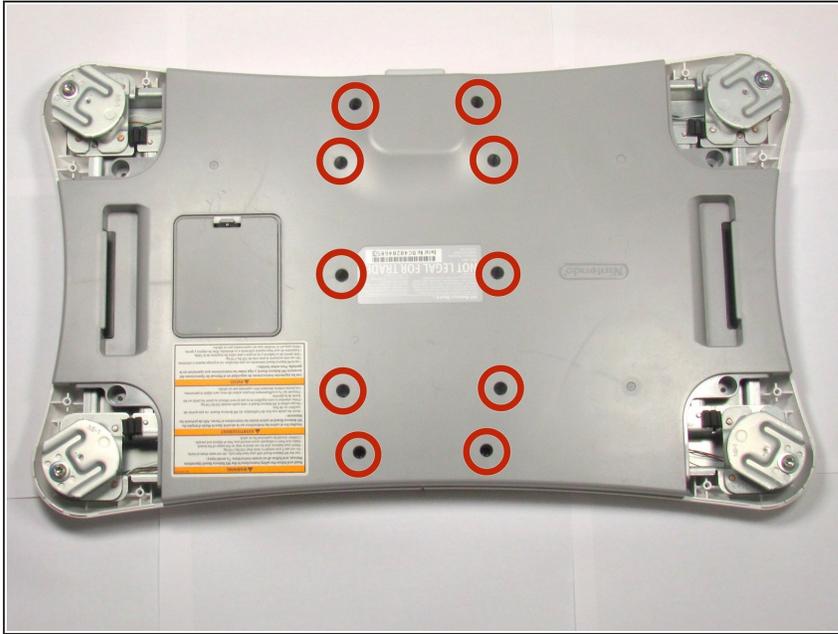



- Unscrew the ten 12.7 mm Phillips #1 screws.

## Step 6 — Removing the Back Cover




- Lift off the gray back cover.

## Step 7 — Battery Compartment

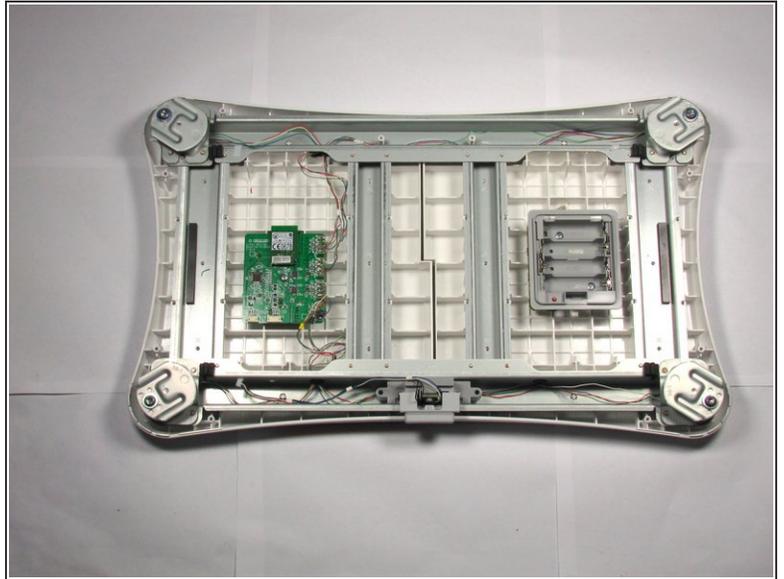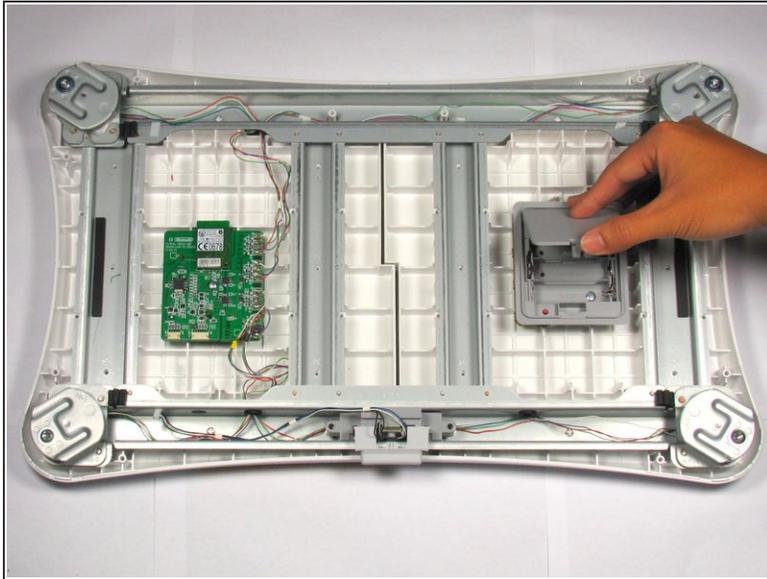

- Locate the gray battery compartment.
- Push the tab on the bottom and lift up completely to remove the cover to the batteries.

## Step 8 — Removing the Battery Case

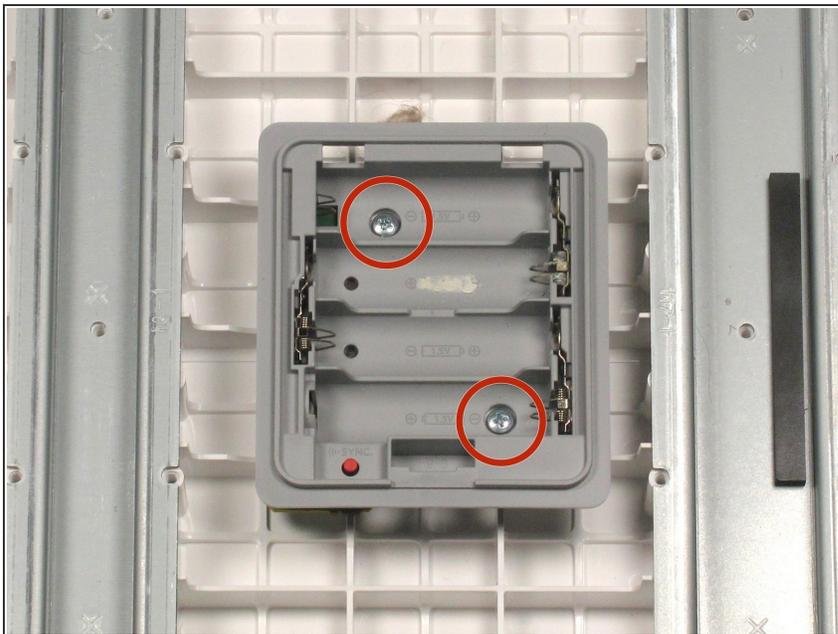

- Unscrew the two 6.35 mm Phillips #1 screws.
- Slide the battery case out.

To reassemble your device, follow these instructions in reverse order.