



# HTC One Mini Rear Case Replacement

Use this guide to replace the rear case of your HTC One Mini.

Written By: Chris Jose



---

## INTRODUCTION

This guide will show you how to remove the case on your HTC One Mini

---

### TOOLS:

- [iOpener](#) (1)
  - [iFixit Opening Tool](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — iOpener Heating



- Use an iOpener or hair dryer to apply heat to the lower speaker grille, in order to soften the adhesive underneath.

## Step 2 — Remove Speaker Grills



- Slide a thin pry tool underneath the lower speaker cover and slide it across to separate the adhesive underneath.
- Remove the lower speaker cover.

### Step 3 — Remove Screw




- Remove the screw under the speaker cover using a T6 Torx screwdriver.

### Step 4



- Slide a thin guitar pick or pry tool between the edge of the display and the rear case, near the bottom of the phone.
- Carefully work your way up each side of the display and separate the rear case. There are three clips on each side.

## Step 5 — Separate Rear Case

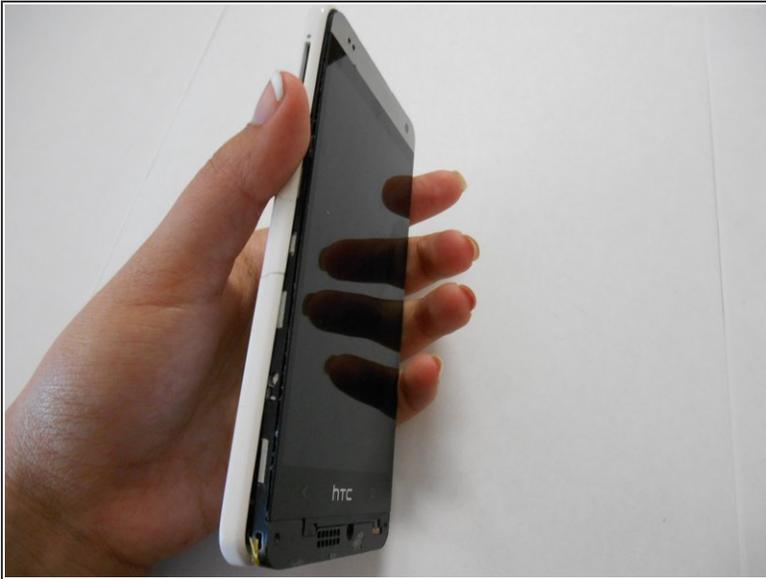

- Remove the rear case from the phone.

To reassemble your device, follow these instructions in reverse order.