




Dell OptiPlex GX100 Hard Drive Replacement

Replace/Upgrade Hard Drive for Dell OptiPlex GX100


Written By: hans

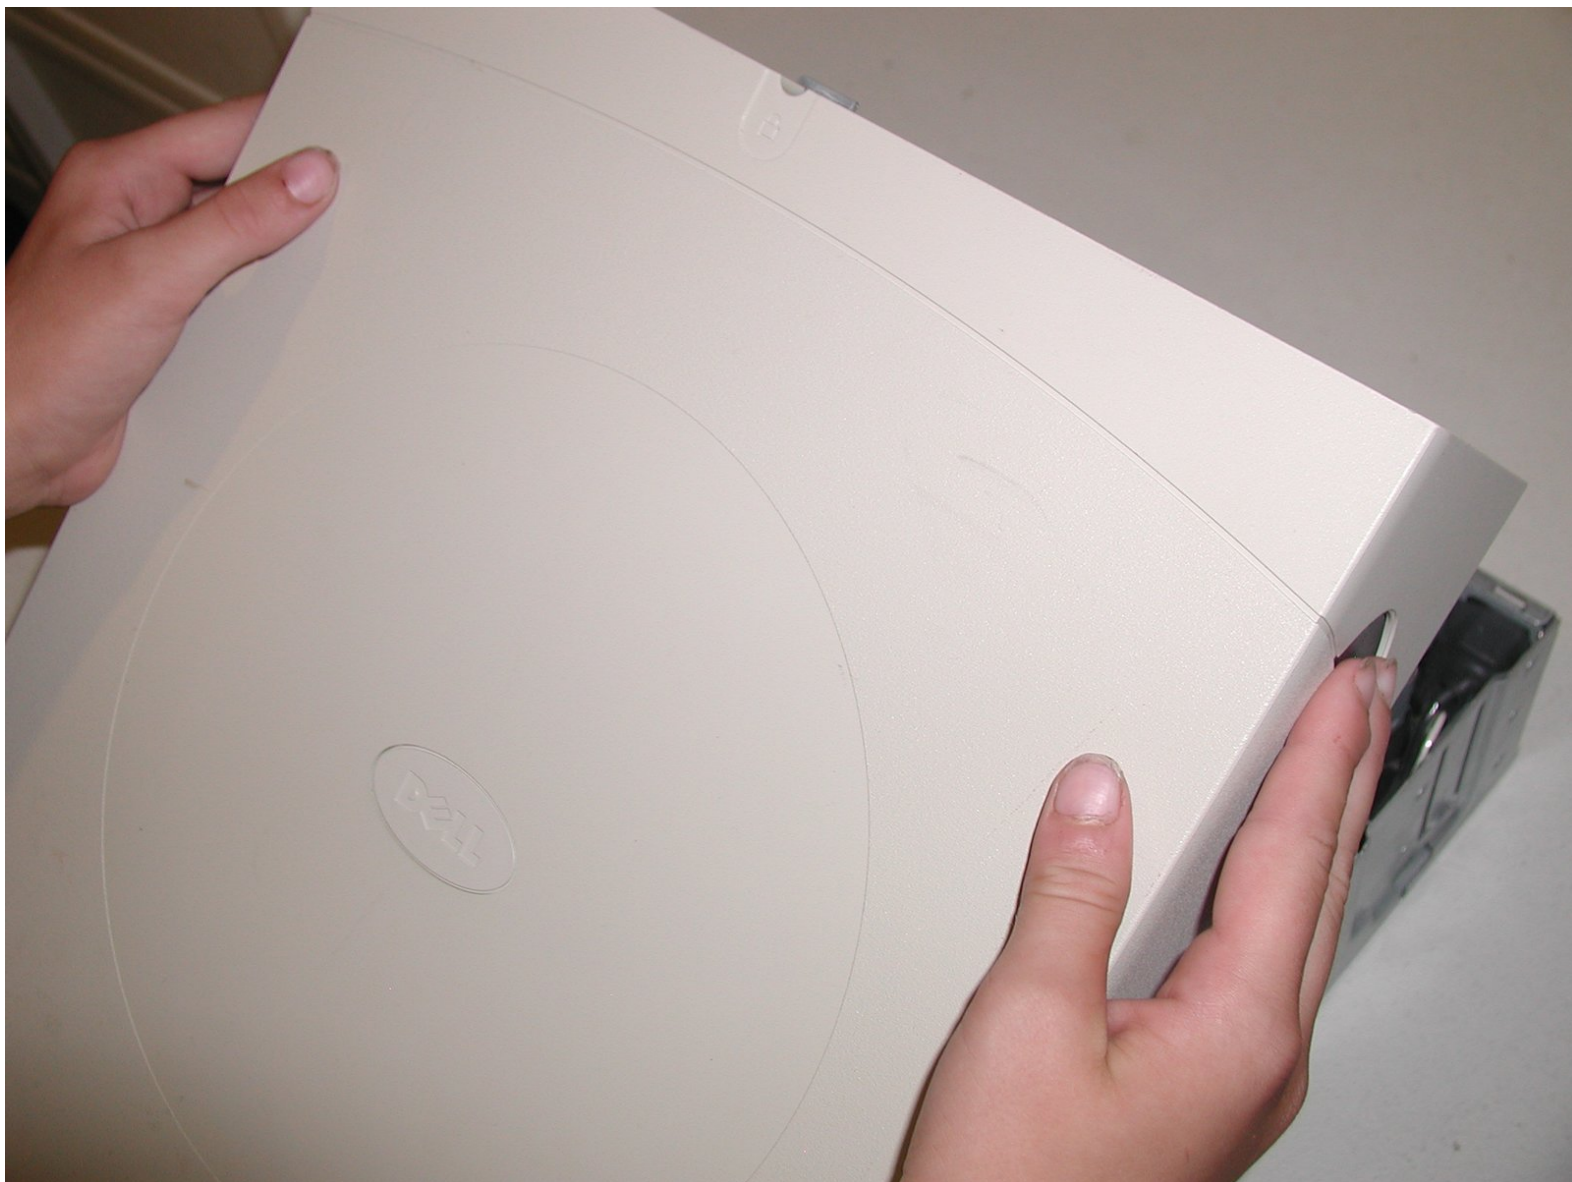

INTRODUCTION


Replacing Hard Drive on the GX100 is very easy. Consider, maybe the fact that dell Tried to make it possible to take apart most of the machine not using any screws.

Step 1 — Remove the cover

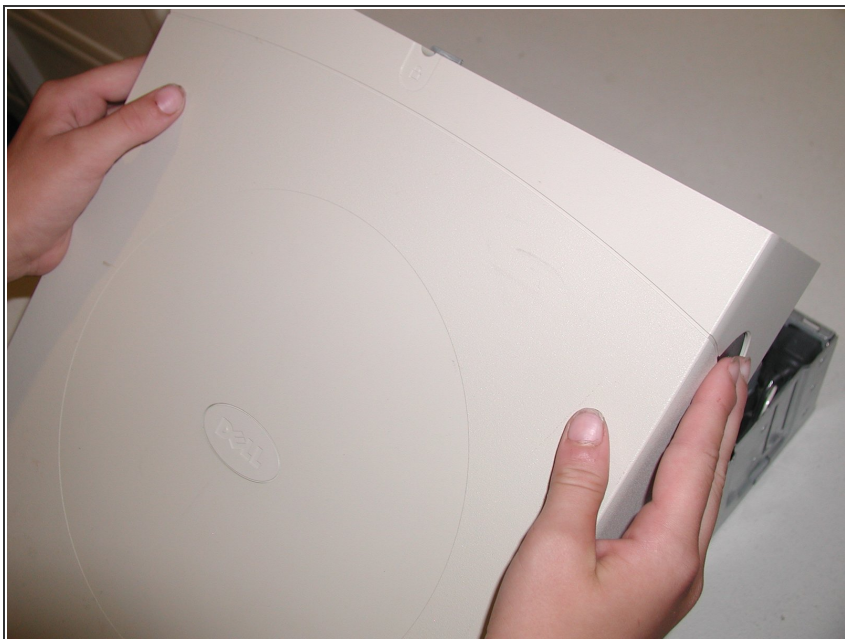


- pull cover UP while holding in the 2 buttons on either side of the optiplex.

Step 2 — Remove Cd drive Cables

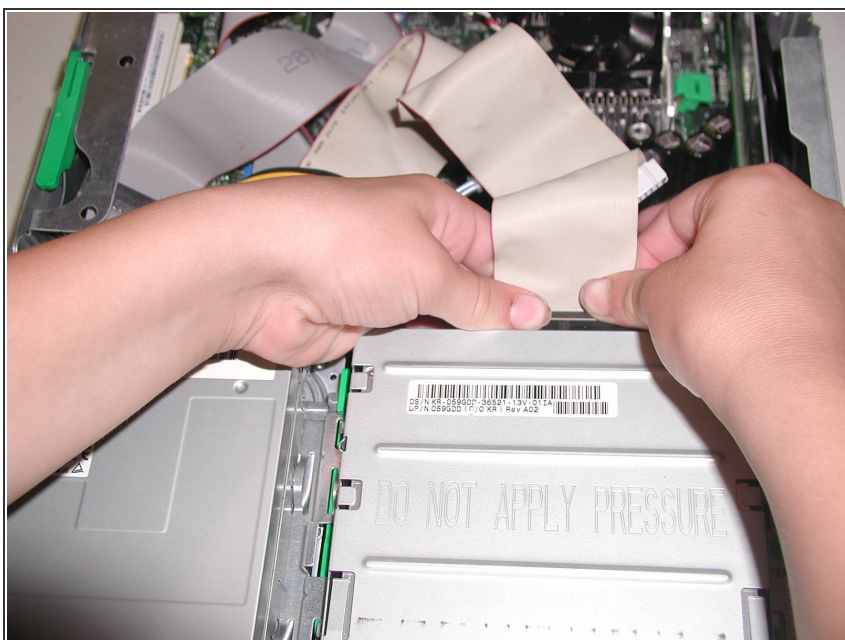


- Pull Ribbon Cable Straight Back, and Out of Cd drive Using the Plastic Tab.

Step 3

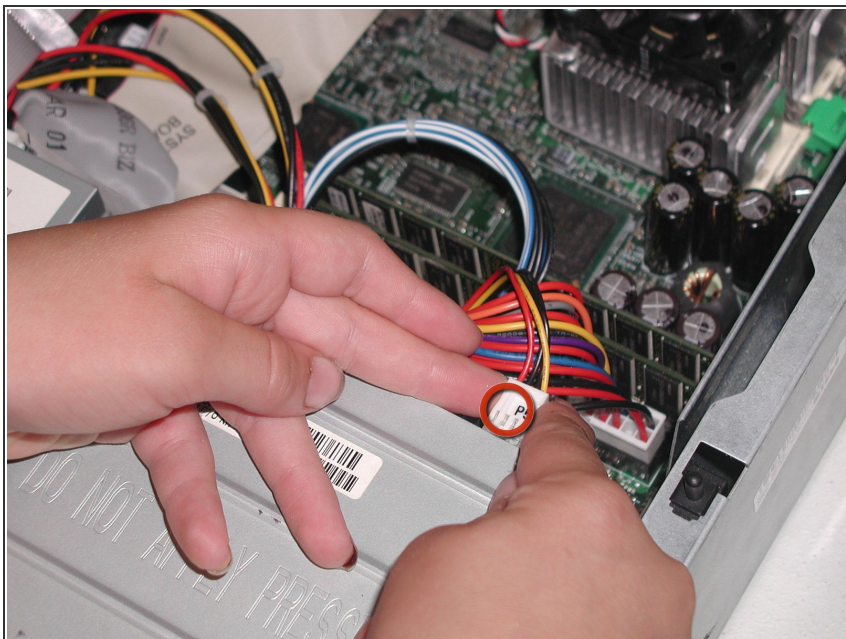

- Pull Power Cable Out of Cd drive.
- All Cables Will Take A Bit Of Wiggling to Come Out.

Step 4 — Remove Floppy Drive Cables

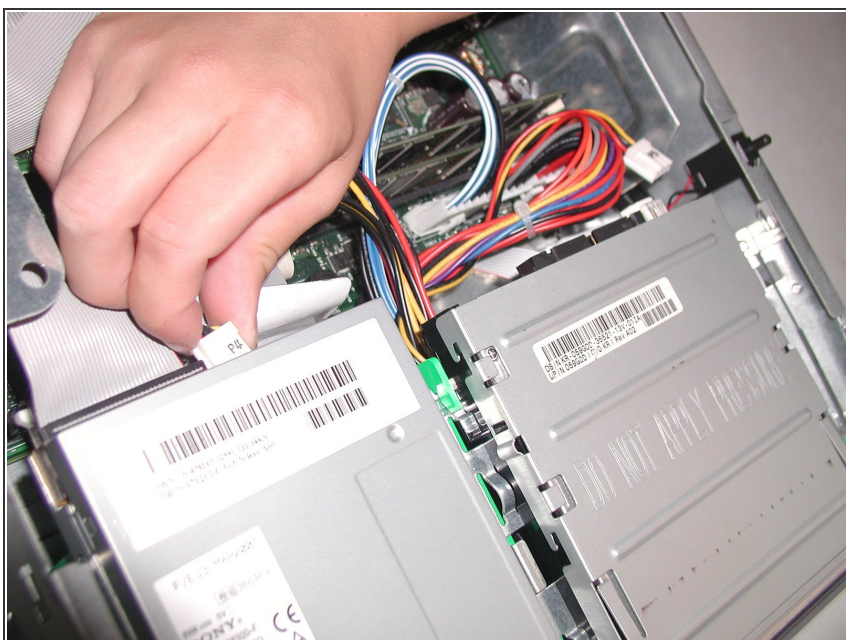

- Remove power cable from floppy drive.

To reassemble your device, follow these instructions in reverse order.