



Uniden Dect 6.0 Keyboard Replacement

This guide will help the owner of a Uniden Dect 6.0 Home phone replace the faulty keyboard!

Written By: Megan Lawrence



INTRODUCTION

This guide entails and explains the simple steps to replace the non-functioning keyboard on the Uniden Dect 6.0 home phone.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery




- Locate the battery compartment on the back of the Uniden home phone.
- Place your finger on the groove, and pull directly back on the cover to access to the battery.

Step 2




- Remove the white battery pack from the battery compartment.

Step 3

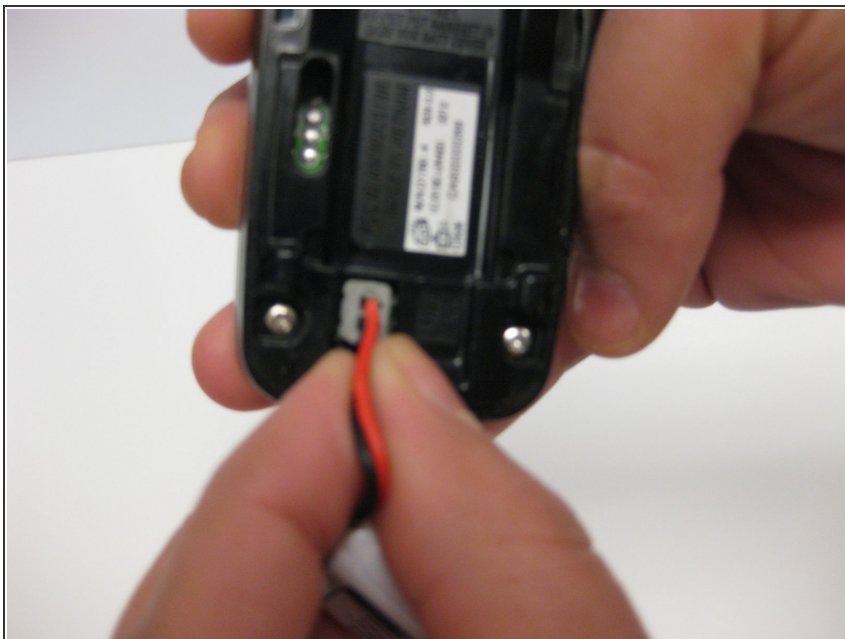


- Remove the red-and-black-wired port from the plug directly under the battery compartment.

Step 4 — Keyboard

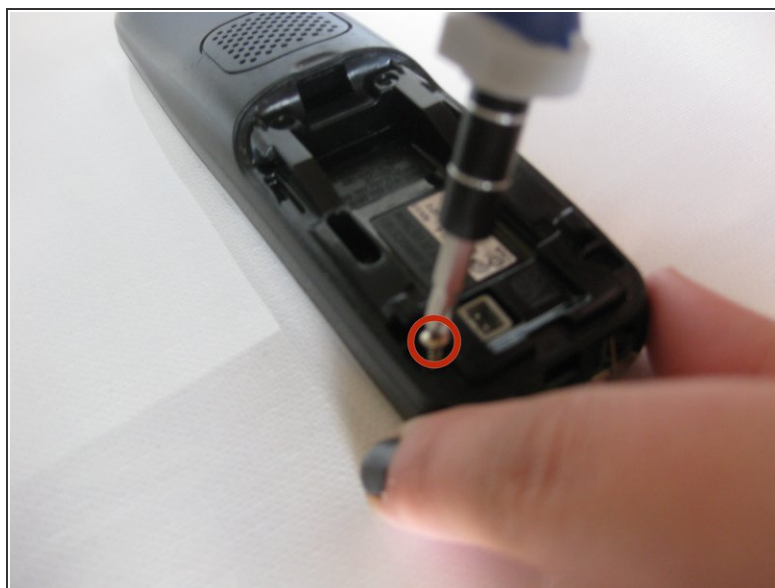


- Using a Phillips #1 screwdriver, remove the two .9 mm screws on the back of the device on each side of the battery pack.


Step 5

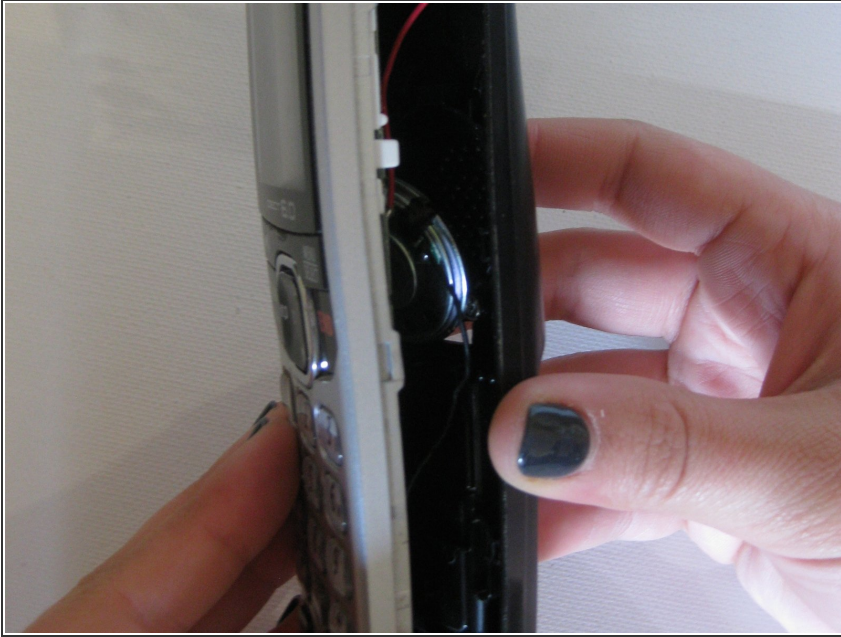

- Using your fingers, gently lift and separate the front of the housing from the back housing.

 Potential for device damage: While separating the back housing from the front, be sure to open from the sides as pictured.

Step 6

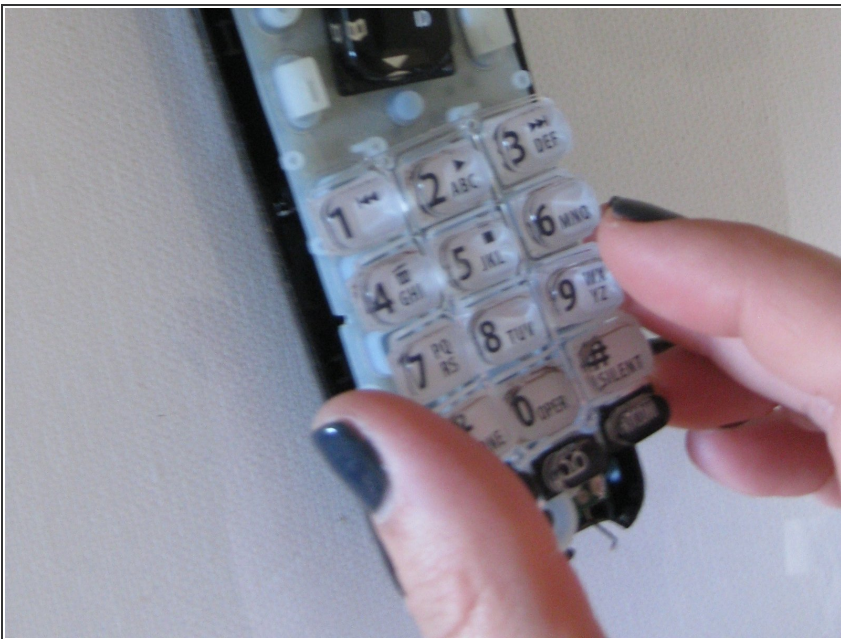

- Gently remove the loose keyboard from the lined gel casing located under the front housing of the front of the phone.

To reassemble your device, follow these instructions in reverse order.