


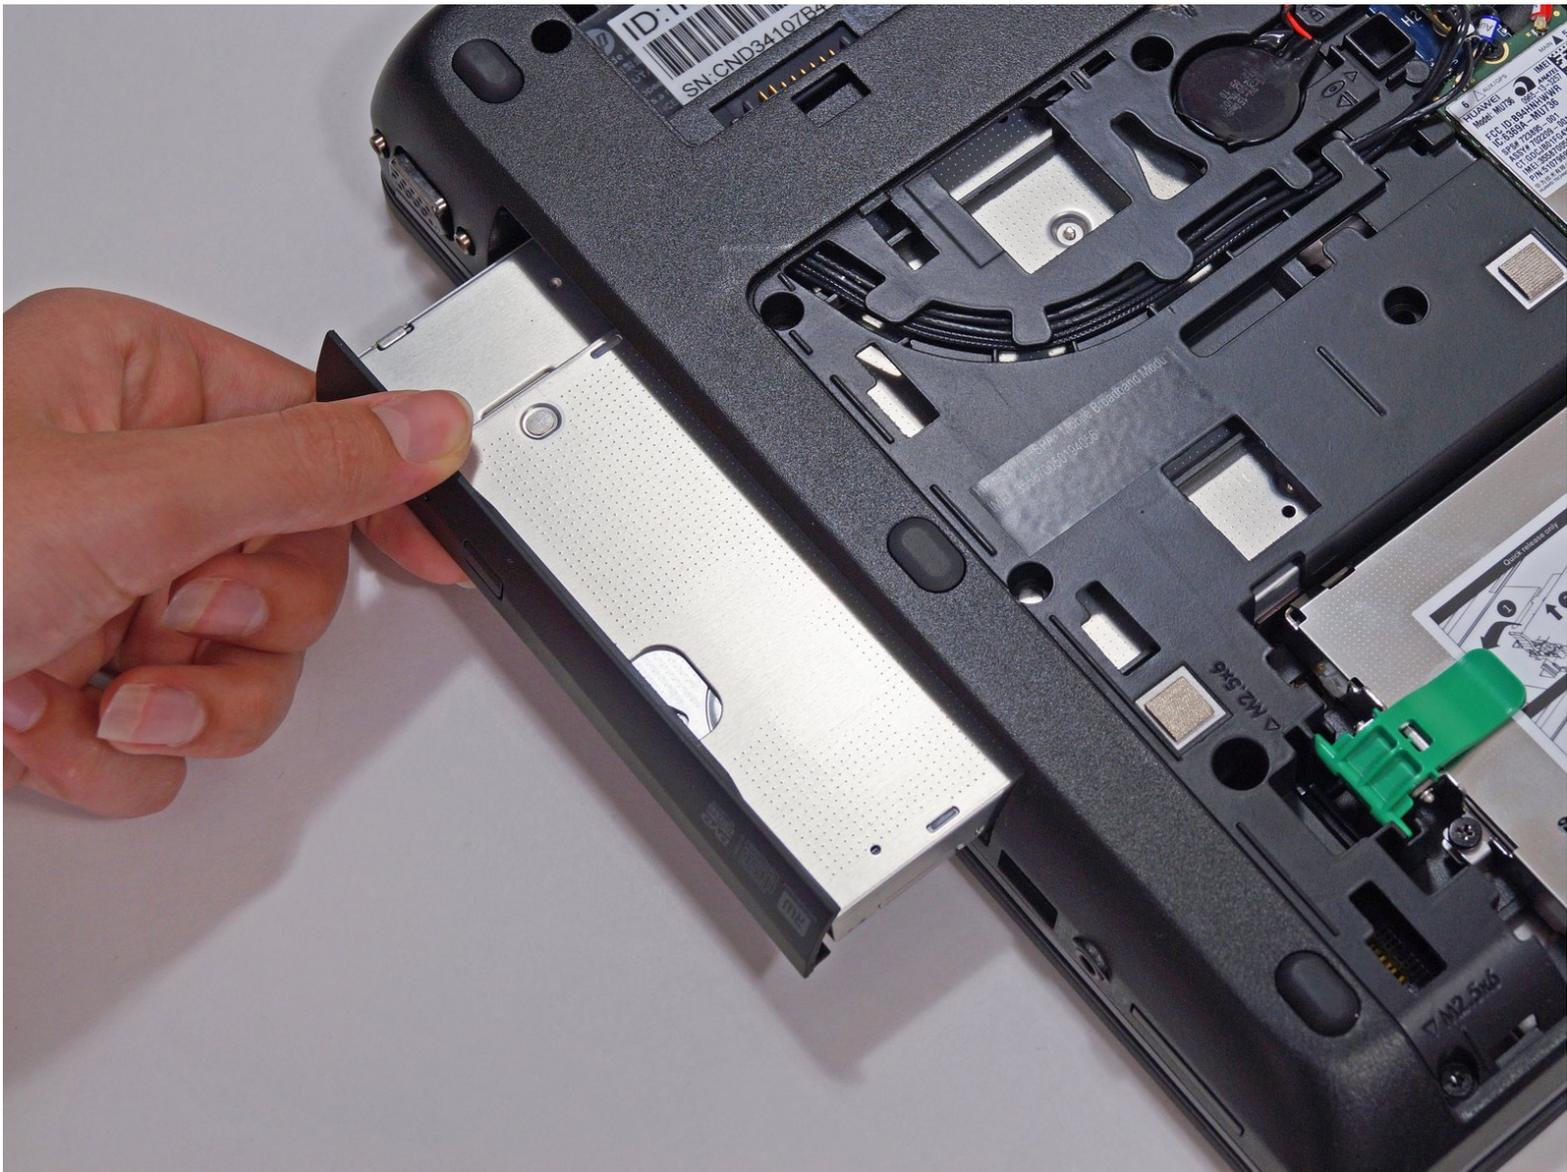

HP ZBook 15 Optical Drive Replacement

This guide will demonstrate how to remove the optical drive (CD/DVD drive) from the computer.

Written By: Grant Terris



INTRODUCTION

If the CD/DVD drive on your computer is broken and needs replacing, follow this replacement guide!

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery



- Flip the laptop over.
- Slide the lever with the battery symbol beside it firmly until the battery pops out.
- Remove the battery from the laptop.

Step 2 — Back Cover






- Slide the right lever firmly to the right.
- Slide the cover towards yourself to remove it.

Step 3 — Optical Drive



- Unscrew the captive screw shown near the battery compartment with a Phillips #0 screwdriver.
- ⓘ The screw does not come out all the way and stays attached to the computer.

Step 4

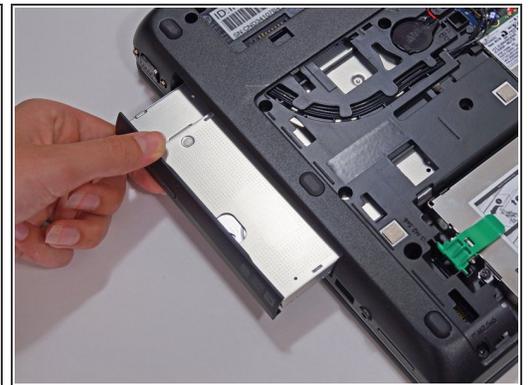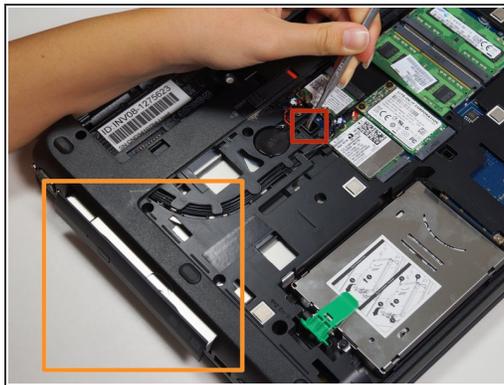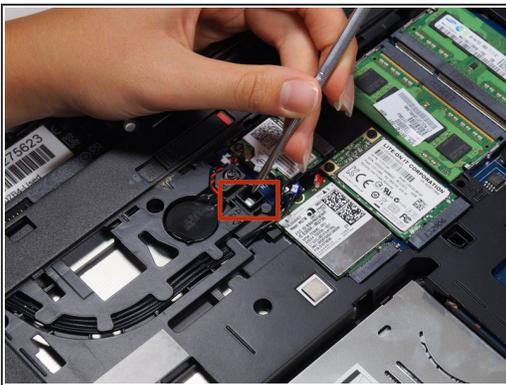

- Push outward on the metal optical drive tab with a metal spudger to unlock the drive from its position in the case.
- Once the drive is protruding from the side of the computer, pull it the rest of the way out.

To reassemble your device, follow these instructions in reverse order.