 




# Polaroid S7 LCD Replacement

If your screen is black or discolored, follow this guide to replace the LCD.

Written By: Thiago Guedes

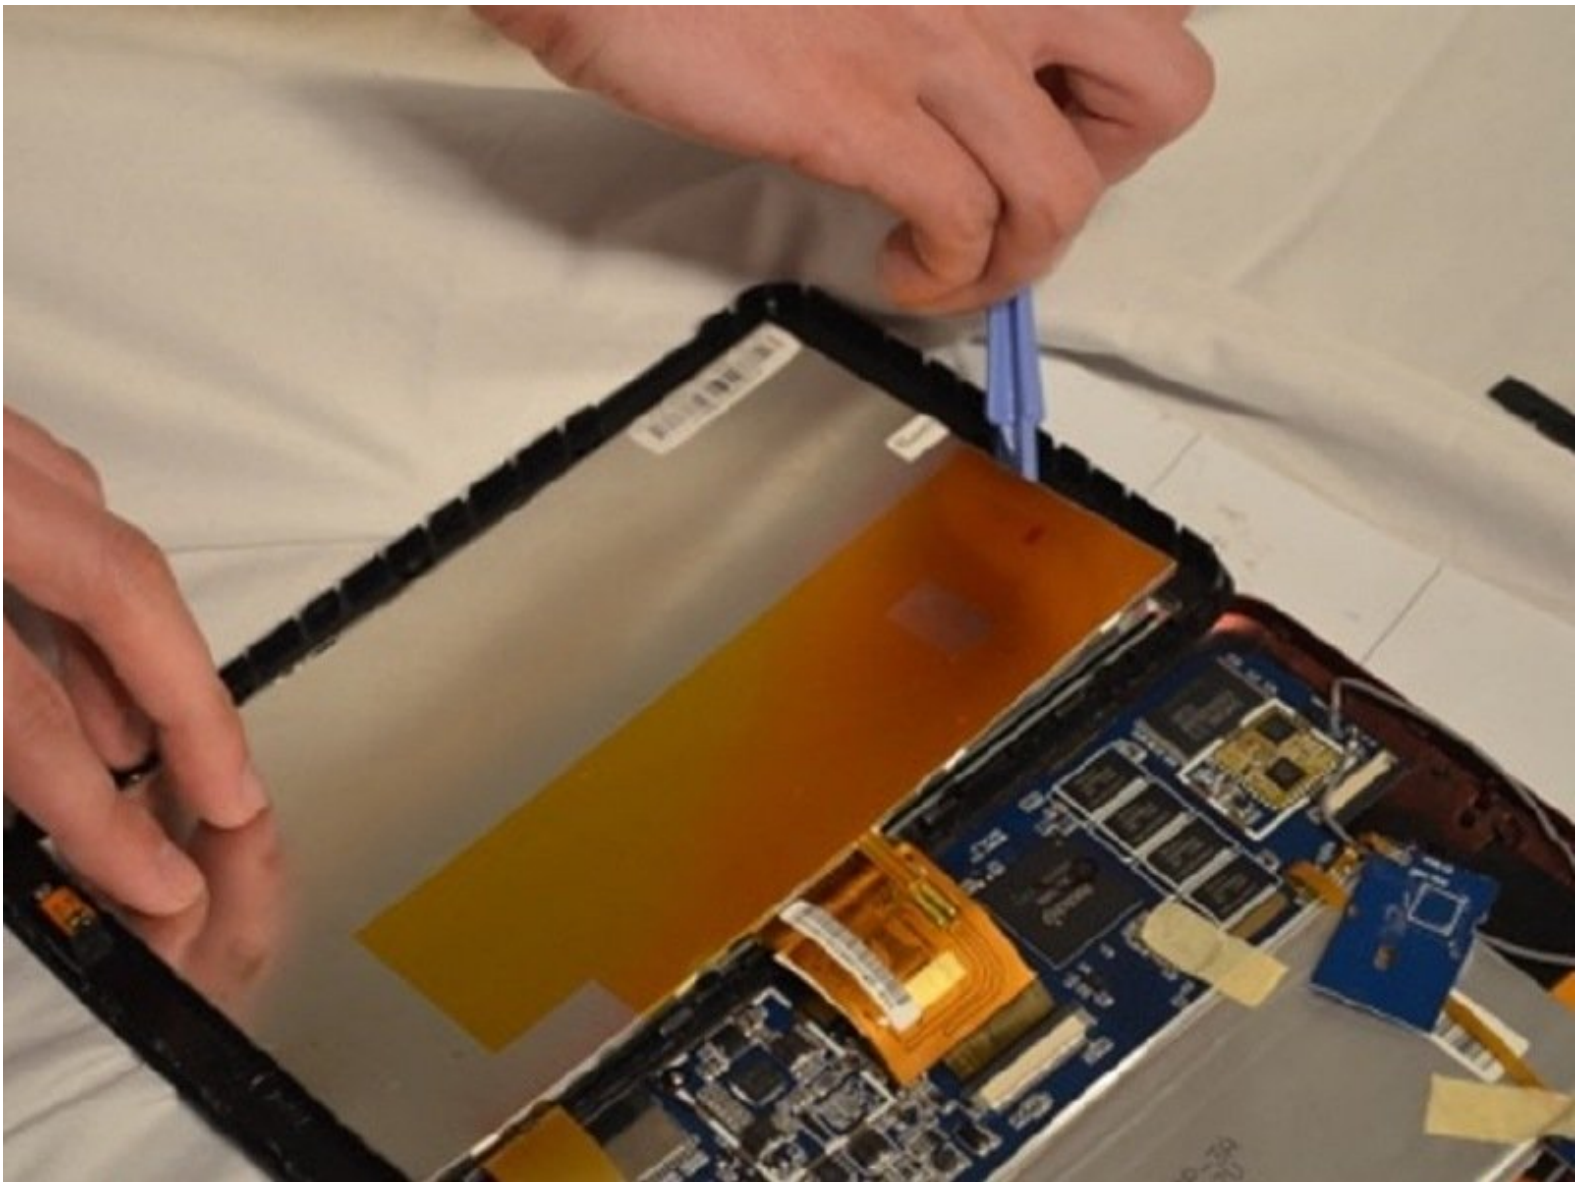

---

## INTRODUCTION

If your screen is black or discolored, follow this guide to replace the LCD.



### TOOLS:

 
- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Remove the back



- Insert the flat end of one of the plastic opening tools between the screen and the colored back cover. Gently pry apart the pieces.
- Carefully separate the screen from the back, taking care not to rip the ribbons connecting them.

## Step 2

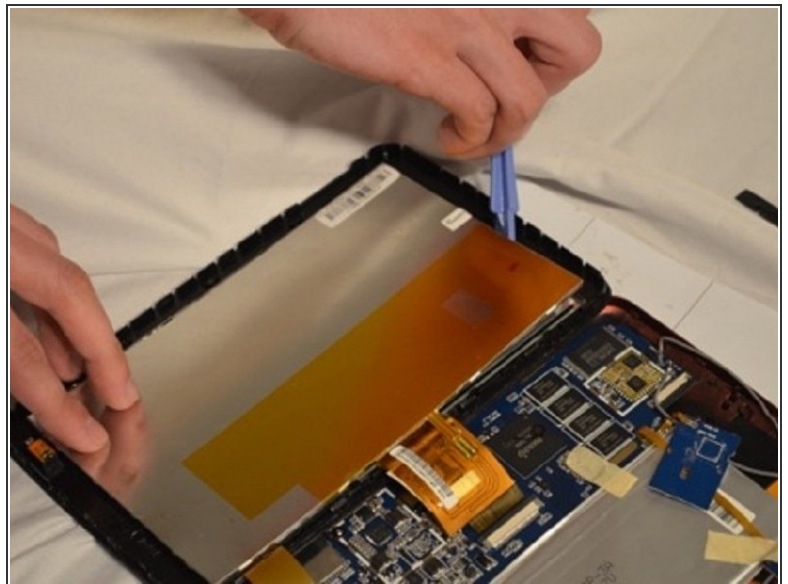

- Insert the plastic opening tool into the wedge and pry it open.

## Step 3



- Open the latch and pull to remove the LCD.

To reassemble your device, follow these instructions in reverse order.