


Kurio Touch 4S Power Button Replacement

Written By: Moin Khan

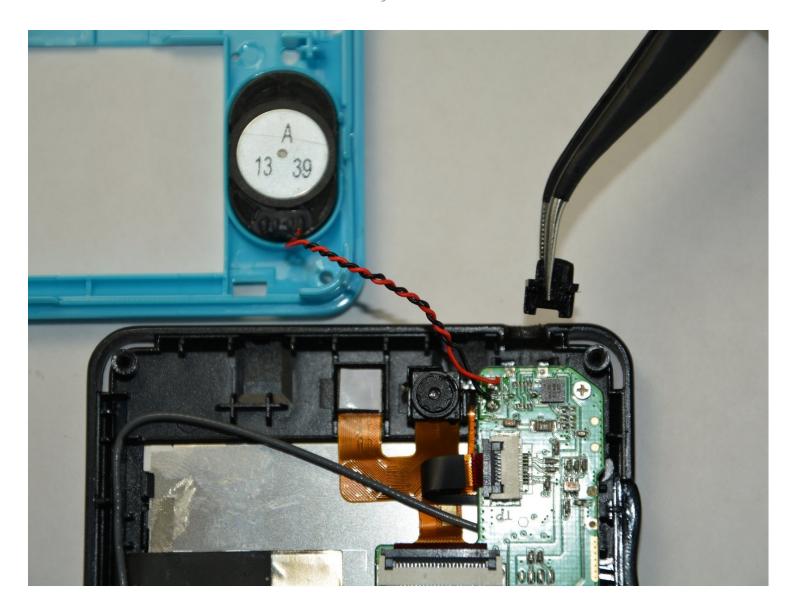

TOOLS:

iFixit Opening Tool (1)
Phillips #1 Screwdriver (1)
Tweezers (1)

Step 1 — Power Button



 Make sure to open the back cover easily using the plastic opening tool.







- Remove back cover by prying away from the device.
- (i) The easiest place to remove the cover is from the bottom and top; try to open it from the right and left sides.
- ⚠ Open it gently. Do not open it with too much pressure, so that the plastic back cover do not break.

Step 3





- To remove the battery, make sure the four 5mm Phillips screws on each side of your device is open using the Phillips #1 Screwdriver
- After you remove your four 5mm Phillips screws, use your plastic opening tool to help you open the plastic cover of your device.



 After you remove your four 5mm Philips screws use your plastic opening tool to help you open the plastic cover of your device.

Step 5



 Separate the two halves of your Kurio Touch 4S and lay them besides each other.



 Gently remove the plastic cover that is covering the camera.

Step 7




- Use Phillips # 1 screw to open the four 5mm Philips screws on the motherboard.
- ⚠ Open the screws gently and do not apply too much force as you could damage the motherboard.




• Use the plastic opener to remove the battery.

Step 9

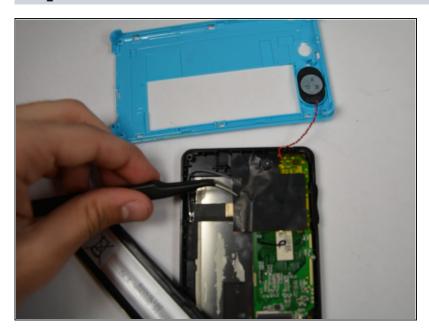

 Use <u>tweezers</u> to remove the black tape that is attached to the motherboard.

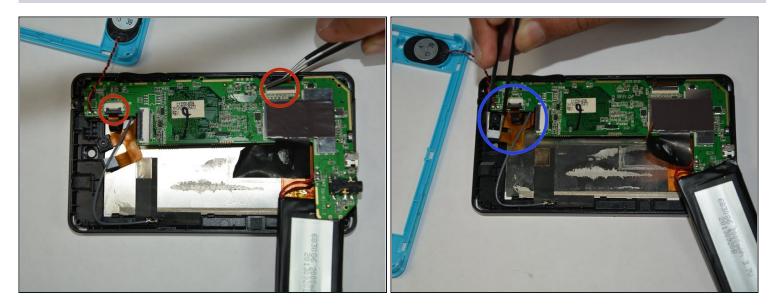


- Detach all the wire that are connected to the motherboard.
- Detach the camera module and other components that are attached to the motherboard.

Step 11



- Remove the motherboard with the help of plastic opener.
- *i* Detach the power plug before you remove the motherboard.

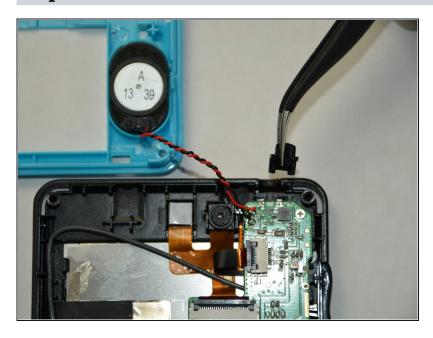

- Use tweezers to hold the power button and gently lift it up.
- Replace the old power button with the new one.

To reassemble your device, follow these instructions in reverse order.