


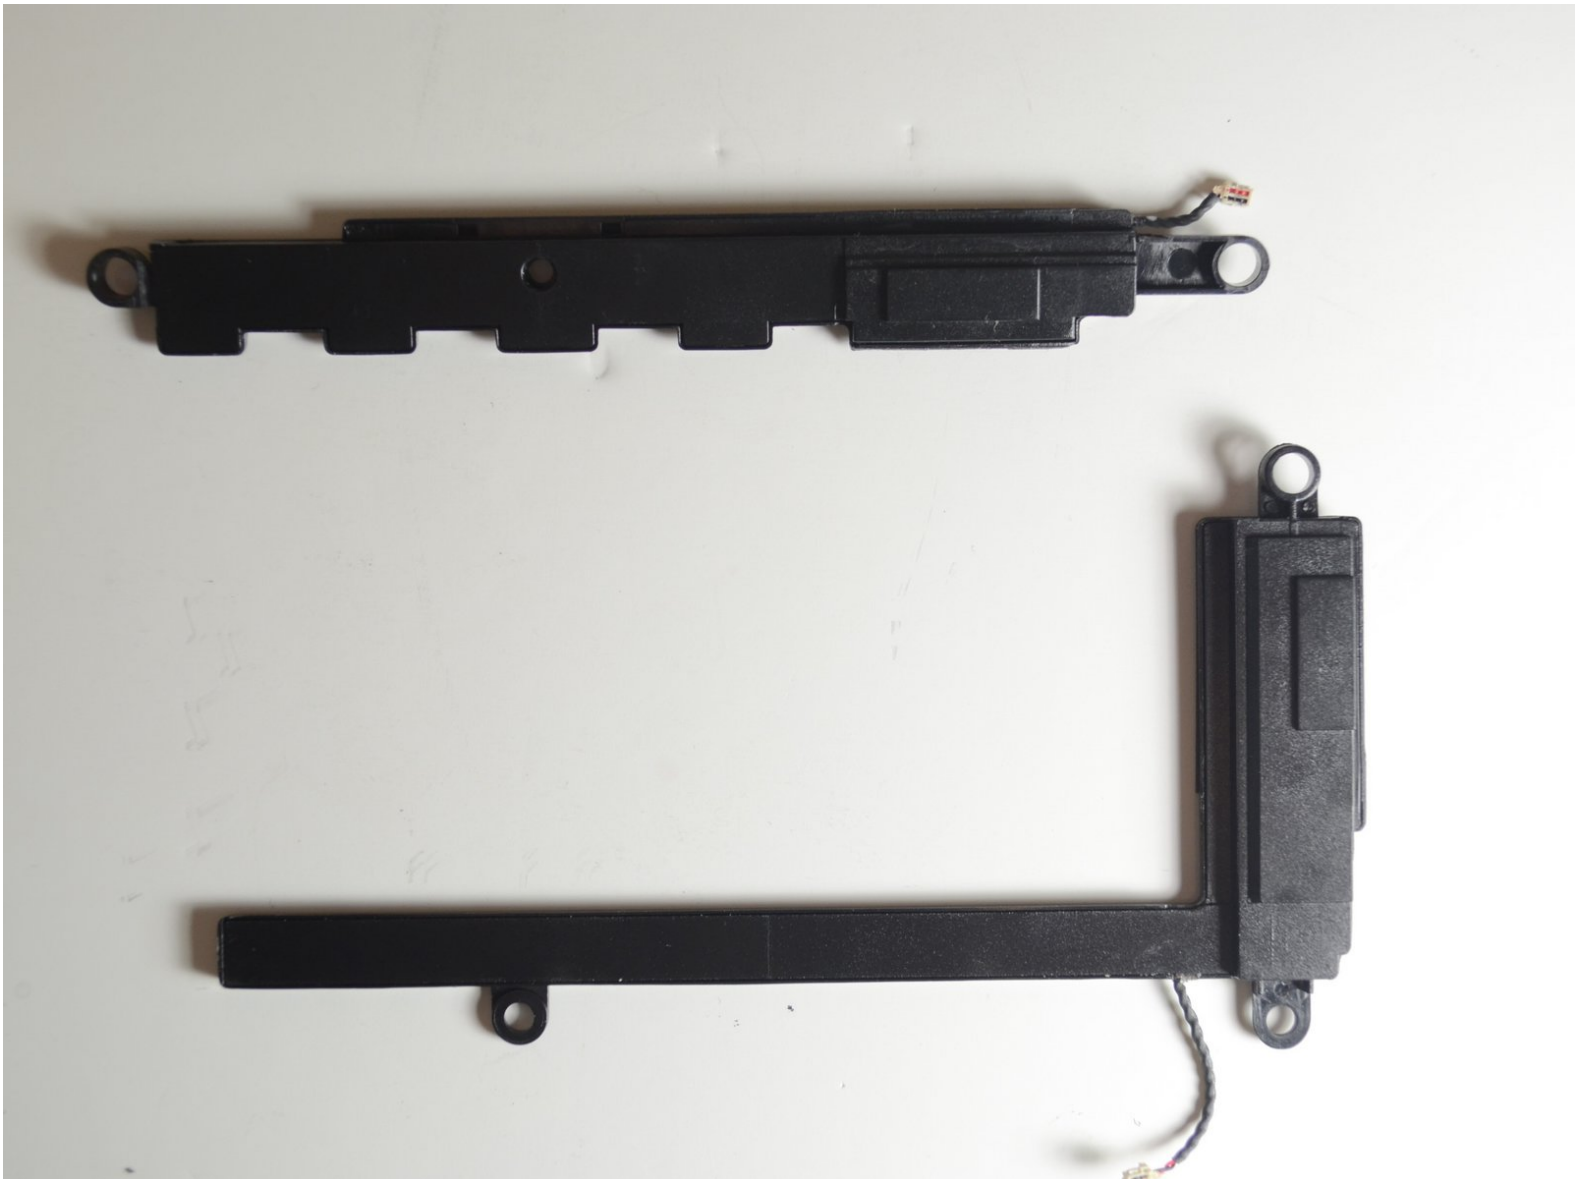

ASUS MeMo Pad FHD10 Speakers Replacement

If your speakers on ASUS Memo Pad FHD tablet...

Written By: Al Muatasim





INTRODUCTION

If your speakers on ASUS Memo Pad FHD tablet isn't working properly, then you can use this guide to replace the speakers.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Tweezers](#) (1)
-



Step 1 — Battery

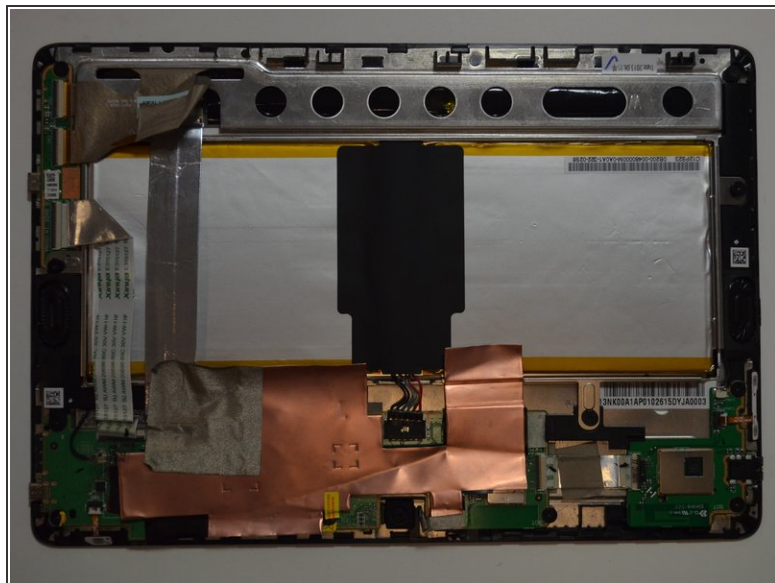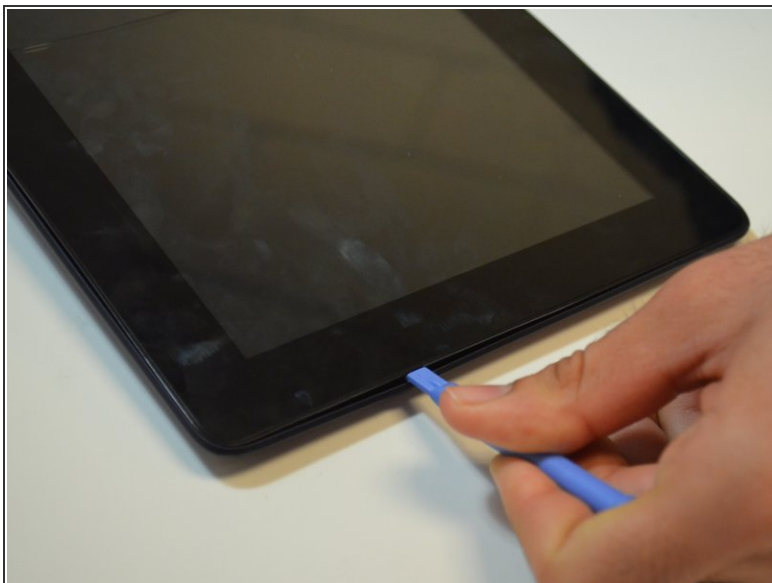

⚠ Make sure that the device is turned off as a precaution.



- Unplug the charger and remove any memory card you may have in the device.
- Wedge the plastic opening tool between the front and back cover on every side.
- Slide the plastic opening tool back and forth to make sure that the back cover is disconnected.
- Once disconnected, remove the back cover from the device screen.

Step 2

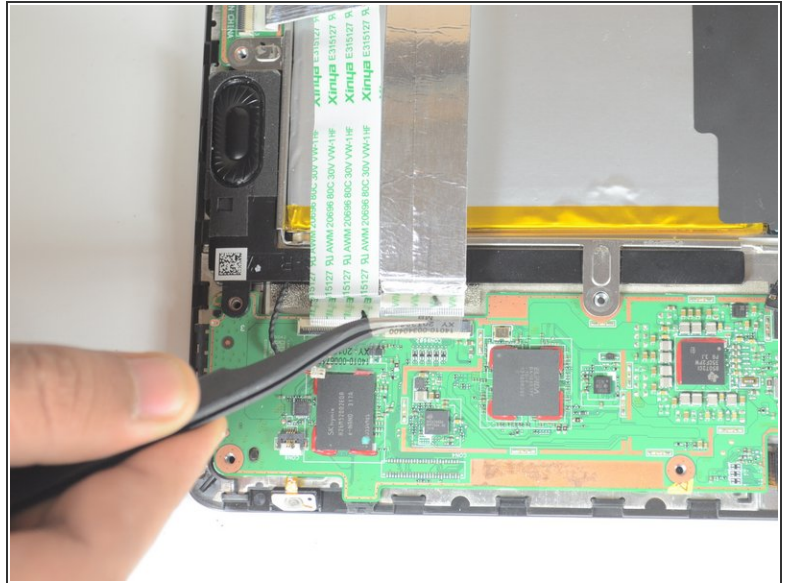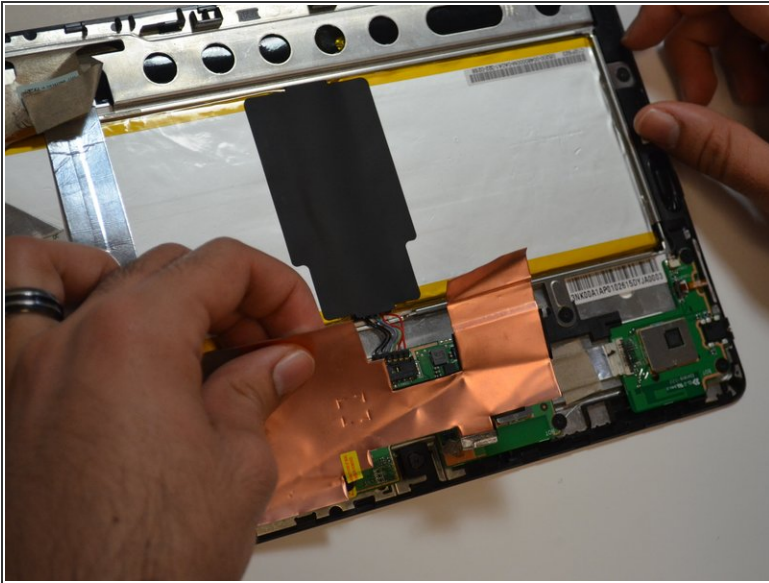

- Remove the protective copper sticker and all tape fixed on the device.
 - Using tweezers, remove the ribbon cable from their connections attached to the motherboard.
- ⚠ While using the tweezers, make sure to use minimum force and precision to avoid damaging any components.


Step 3

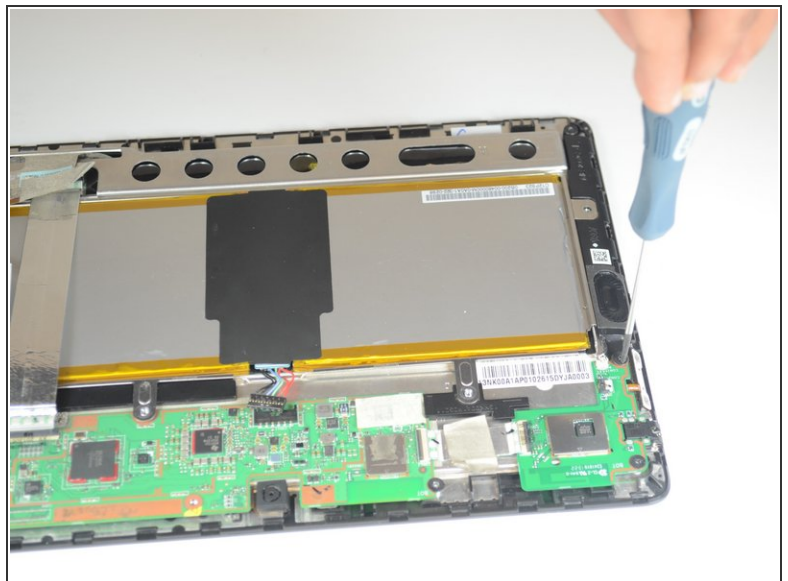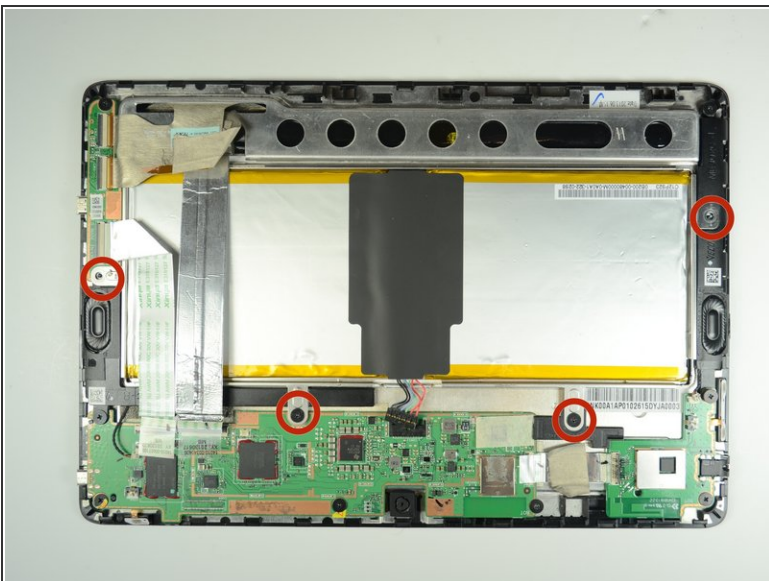

- Remove the four 2 mm Phillips #00 screws holding the battery tray in place.


This document was generated on 2023-01-05 09:53:14 AM (MST).

Step 4

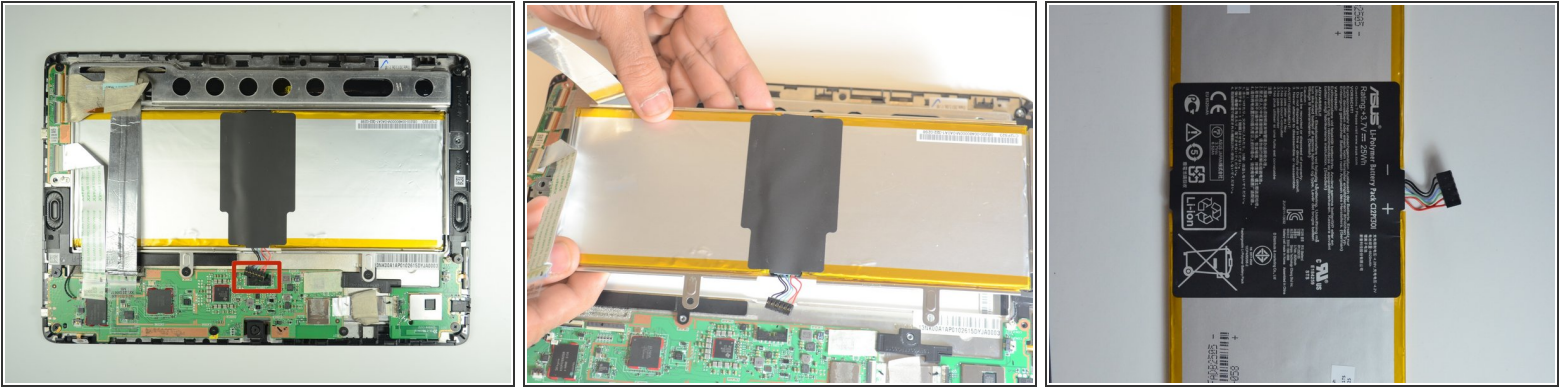


- Locate the battery cable attached to the motherboard. Using the same technique used on the ribbons, do the same with the battery.
- Remove the battery from the device. Once removed, use the plastic tool to separate the metal frame from the battery.
- i* When separating the metal frame, be sure to hold on in the center as the battery is two separate cells.

Step 5 — Speakers

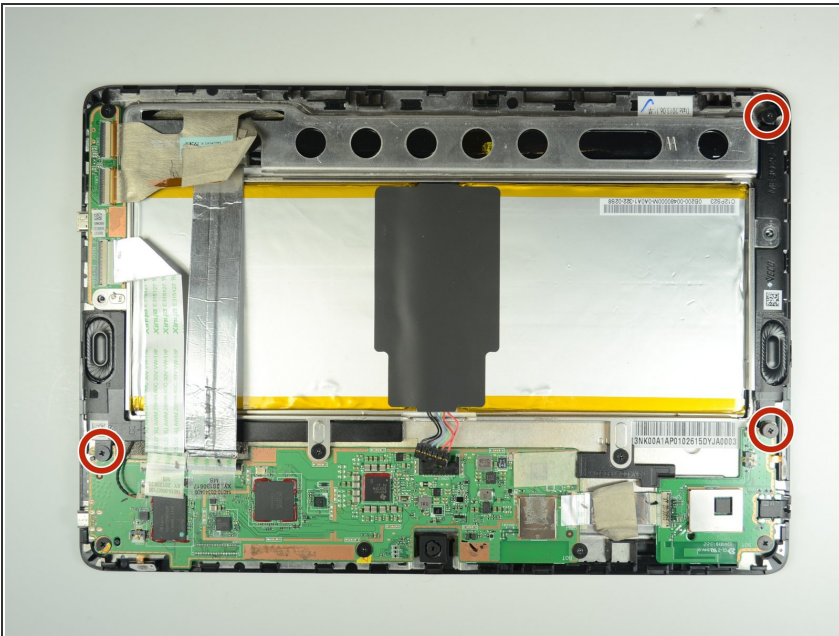


- Remove three screws using a Phillips #00 screwdriver.

Step 6

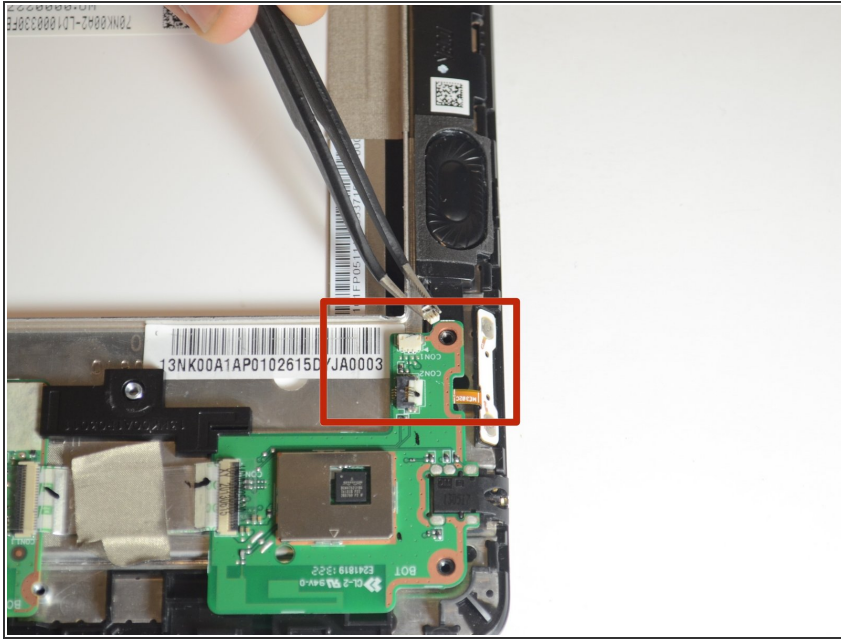

- i The two speakers are located on opposite sides of the device. Both are long black pieces with connections to the motherboard.
- Unplug the speaker cables from their connections on the motherboard gently by using tweezers.

Step 7

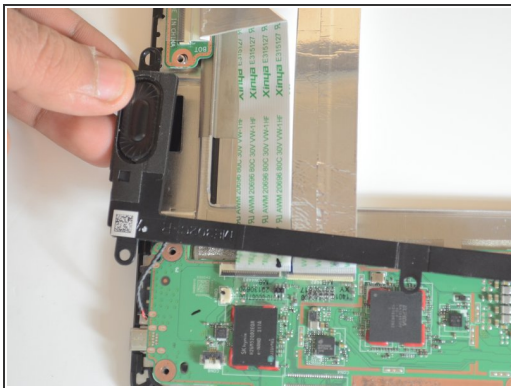

- Gently use your hands to remove the speakers.

To reassemble your device, follow these instructions in reverse order.