



LG Thrill 4G Speaker Replacement

This guide will show you how to remove and replace the speaker for the LG Thrill 4G.

Written By: Kenny Richmond



INTRODUCTION


Make sure your phone is turned off.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Back Cover Removal

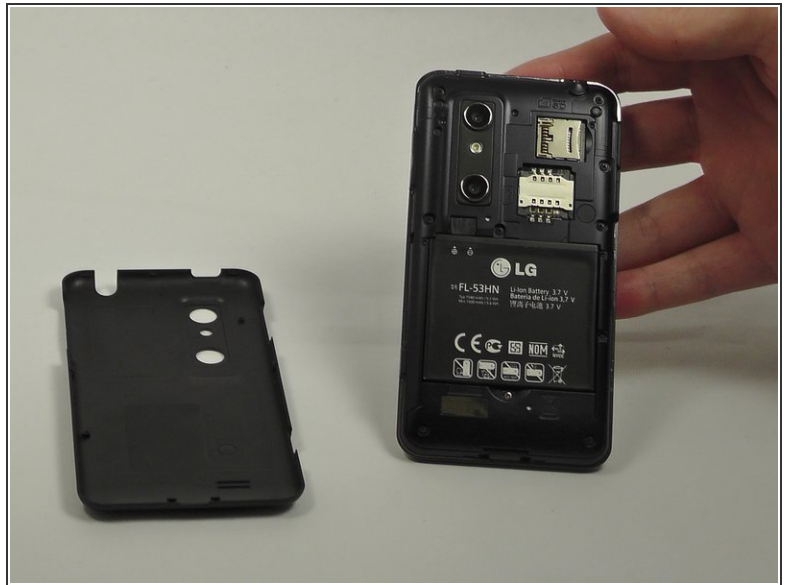

- Pry open the back cover by using a fingernail or a plastic opening tool.
- ⓘ There is a small notch at the bottom of the cover for easy removal.

Step 2 — Battery Removal



- Remove the battery from the phone.
- ⓘ There is a small ledge located at the bottom of the battery for easy removal.

Step 3 — Screw Removal



- Remove the three Philips #00 screws from the bottom of the phone.
 - Two 5.5 mm screws
 - One 4 mm screw

Step 4 — Speaker Removal



- Use your finger or opening tool to wedge the speaker out starting at the small notch at the bottom of the phone.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2022-05-29 11:51:57 PM (MST).

