



# Nikon COOLPIX P500 Screen Replacement

Details the location of the screen and how to replace it.

Written By: Carmen Dang






## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



 Electric shock is a huge risk if the battery is not removed while taking the camera apart.

- Press down and forward on the battery cover latch.
- Push the orange latch, in the direction of the arrow on it, to release the battery.

## Step 2 — Screen



- Lift up the screen so you can access the back of the screen.

### Step 3



- Remove the four Phillips #0 screws.

To reassemble your device, follow these instructions in reverse order.