


Replacing Creative Zen X-Fi Button Input Chip

Separate the button input chip from the midsection plate and then unsolder it from the motherboard.

Written By: Westley Courchene

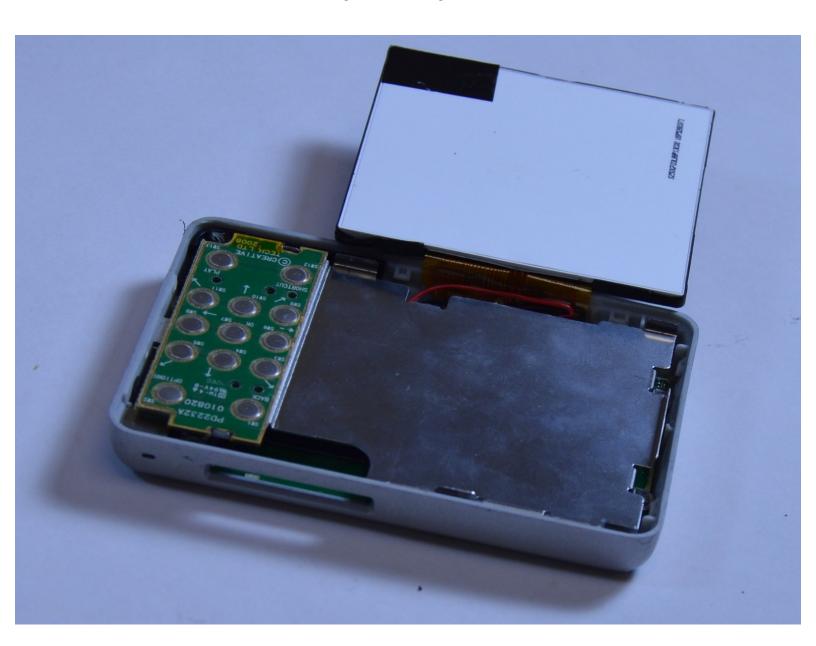

INTRODUCTION

This chip allows the user to input information to the device and to navigate the MP3 player's menus.



TOOLS:

- Phillips #00 Screwdriver (1)
- Spudger (1)
- Soldering Iron (1)

Step 1 — **Detaching Front Case**








- Using a spudger, wedge the tip between the front and back case to pry them apart.
- Be careful to not apply excessive force since there are six fasteners on the screen's side that holds the cases firmly together.

Step 2 — Rubber Button Cover

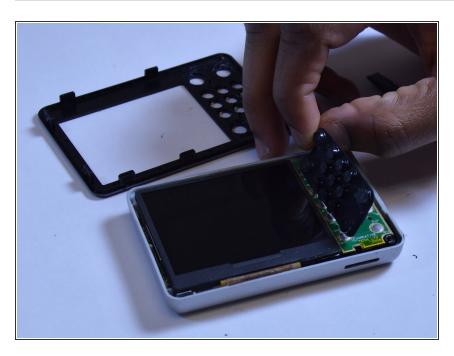

 The black rubber button pad can be removed by simply picking it up.

Step 3 — Button Input Chip Part 1



 Flip the LCD screen off the midsection plate to gain access to the space around the input button chip.

Step 4 — Button Input Chip



 Using a spudger, pry off the button input chip from the mid-section of the device. To gain best leverage,

- start at the bottom right corner and level your way up the side of the chip.
- is glued to the mid-section, so some extra force may be required.

Step 5 — Access Midsection Plate




 Lift open the LCD screen and button input chip to access the entire midsection plate.

Step 6 — Unscrew below Button Chip



 Use a Phillips Head screwdriver to unscrew the three 3/16 inch screws that were underneath the button input chip.

Step 7 — Unscrew below LCD Screen

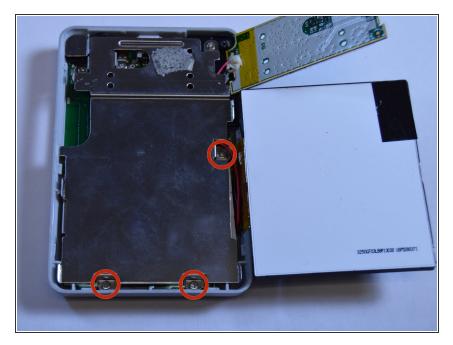

 Use a Phillips Head screwdriver to unscrew the three 3/16 inch screws that were underneath the LCD screen.

Step 8 — Unsolder the Button Input Chip



- Locate the soldering joints connecting the button input pad to the motherboard.
- Hold the wires in place for easier access to the soldering joints.
- When using a soldering iron, keep your hands and fingers as far as possible from the iron's tip to avoid burning your skin.
- Using a soldering iron, melt the solder connecting the red wire to the motherboard. Do the same action to the black wire.

To reassemble your device, follow these instructions in reverse order.