


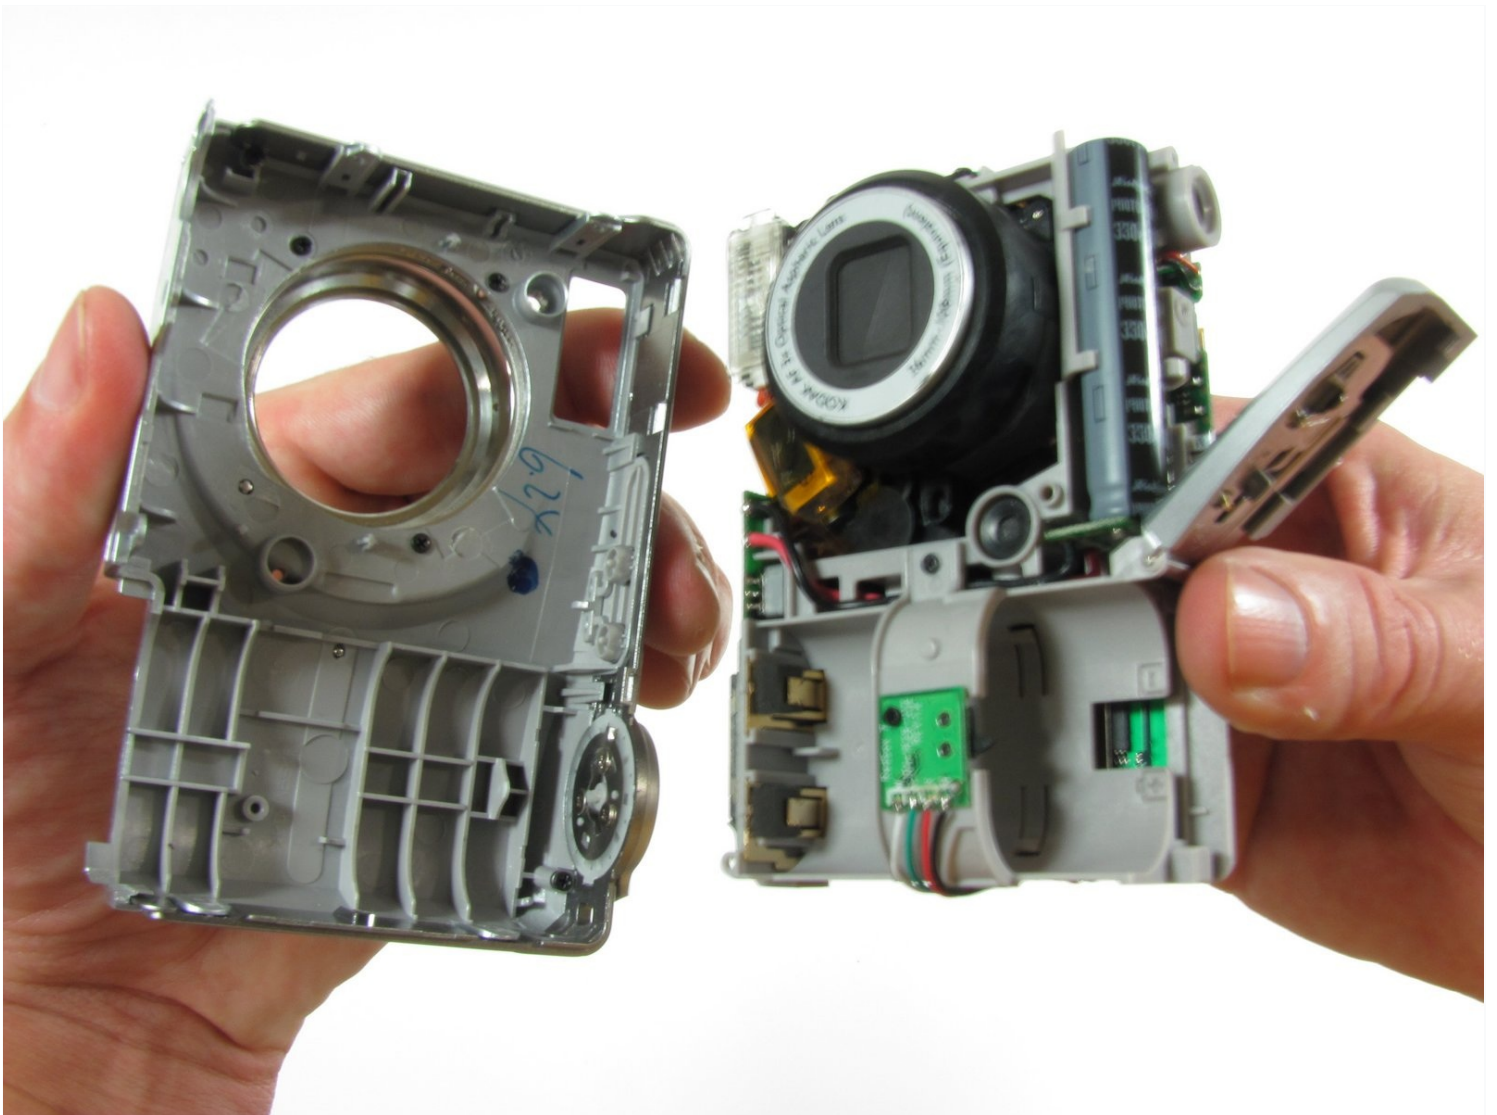

Kodak EasyShare C913 Front Case Replacement

Use this guide to remove and install the front...

Written By: Dustin Rodgers



INTRODUCTION

Use this guide to remove and install the front case.

TOOLS:


Phillips #00 Screwdriver (1)

Step 1 — Batteries



- Position the camera with the bottom facing up.
- Slide the battery cover in the direction of the arrow with your finger gently.
- Remove the batteries

Step 2 — Back Case

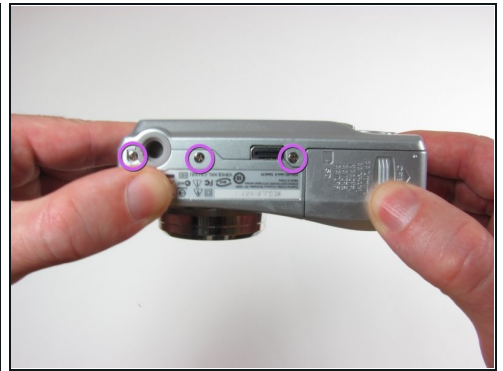




- Remove the seven 4.5mm screws with a Phillips #00 screwdriver.
 - 2 on the left
 - 2 on the right
 - 3 on the bottom

Step 3



- Firmly grasp the back of the camera and pull the away the casing.

Step 4 — Front Case

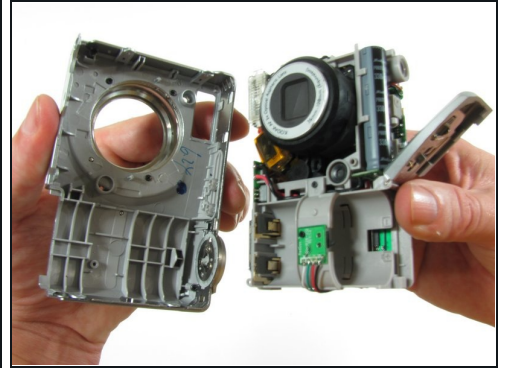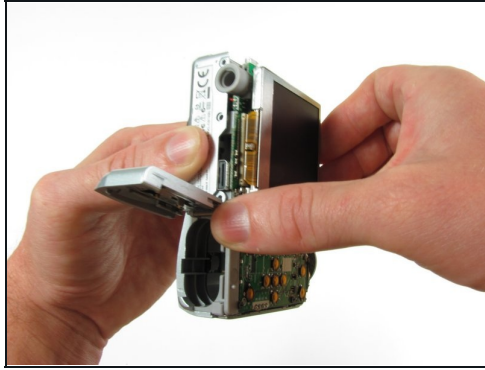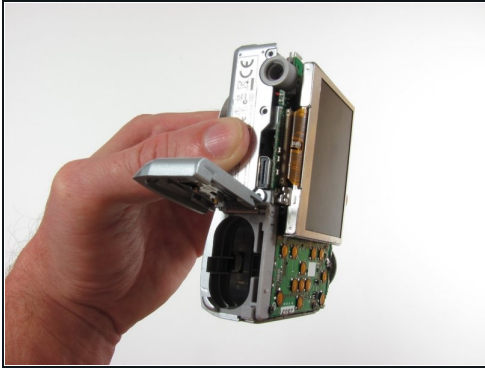

- Keep the battery door open
- Firmly grasp the front casing and pull away from the camera.

To reassemble your device, follow these instructions in reverse order.