



Sony Cyber-shot DSC-WX100 Outer Casing Replacement

Removing the outer casing of the DSC-WX100.

Written By: Matthew



INTRODUCTION

This guide will allow one to be able to remove the outer casing of the camera as to allow them to get to the internal parts of the DSC-WX100.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Battery



- Open the flap indicated to allow access to the battery slot.
- ⓘ The gray switch indicated has to be moved to the right in order to release the flap.

Step 2




- ⓘ If the old battery is still in the slot, then make sure the camera is turned off prior to removal.
- If there is a battery currently in the slot, remove by first pulling downwards on the blue component. This will allow you to remove the battery from the slot.

Step 3 — Outer Casing





- Remove all of the 1mm screws using a Philips #000 Screwdriver.
- Remove the rest of the screws (2mm) from the camera covers using a Phillips #000 Screwdriver.

Step 4

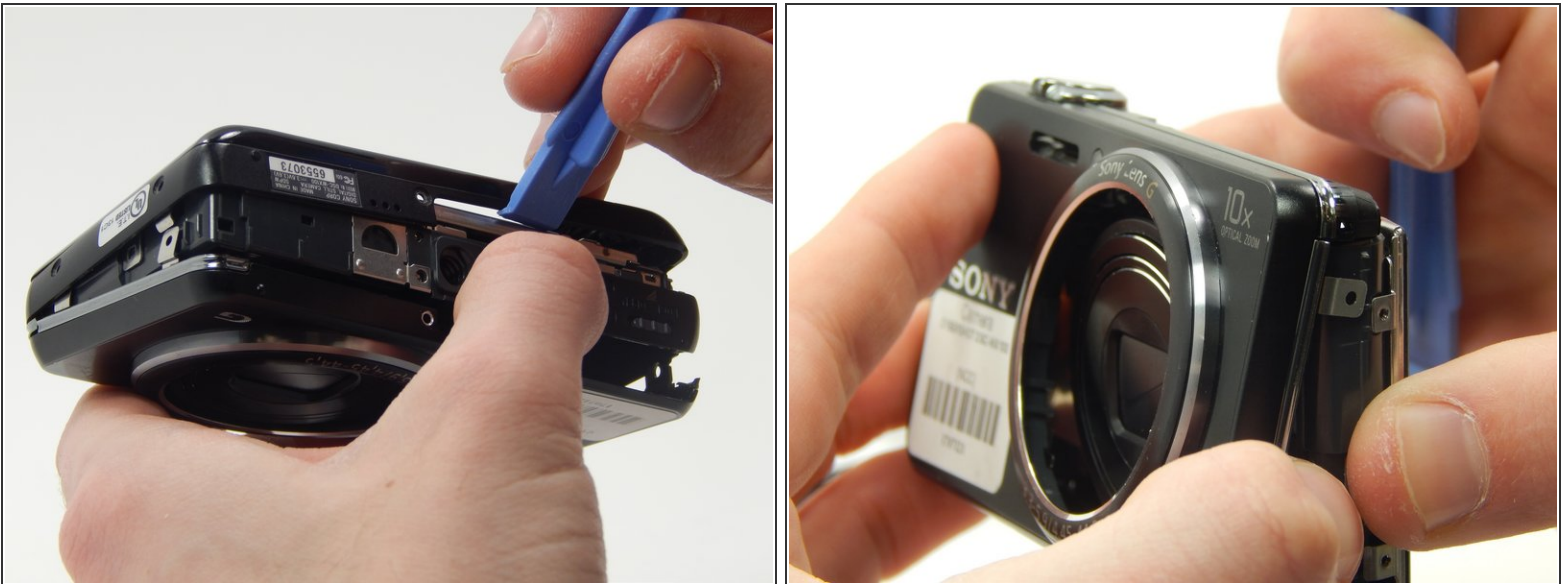

- Use the plastic opening tool to gently remove the front and back plates of the camera.

Step 5

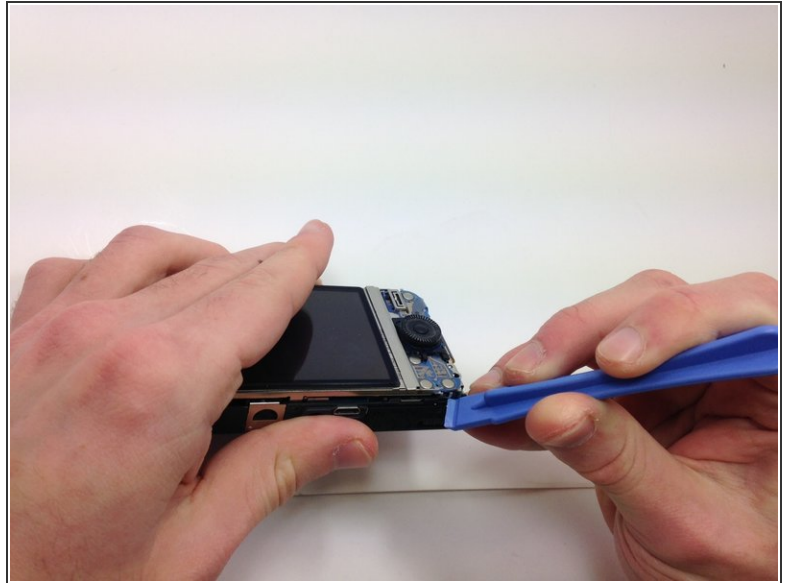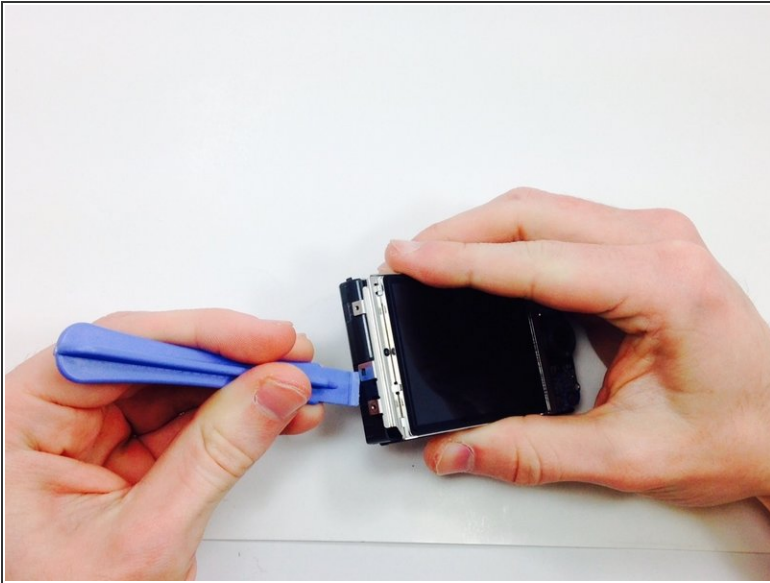

- Use a plastic opening tool to gently release the two indicated tabs.

To reassemble your device, follow these instructions in reverse order.