



# Nerf N-Strike Elite Strongarm Main Spring Replacement

This guide is for replacing the large spring for the air plunger in the firing mechanism.

Written By: Robert



 **TOOLS:**

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Main Spring




- Remove the outside cover of the Nerf gun (cover and charging slide, 12 Phillips #0 screws).

## Step 2






- From the base, lift the action and the trigger.

### Step 3

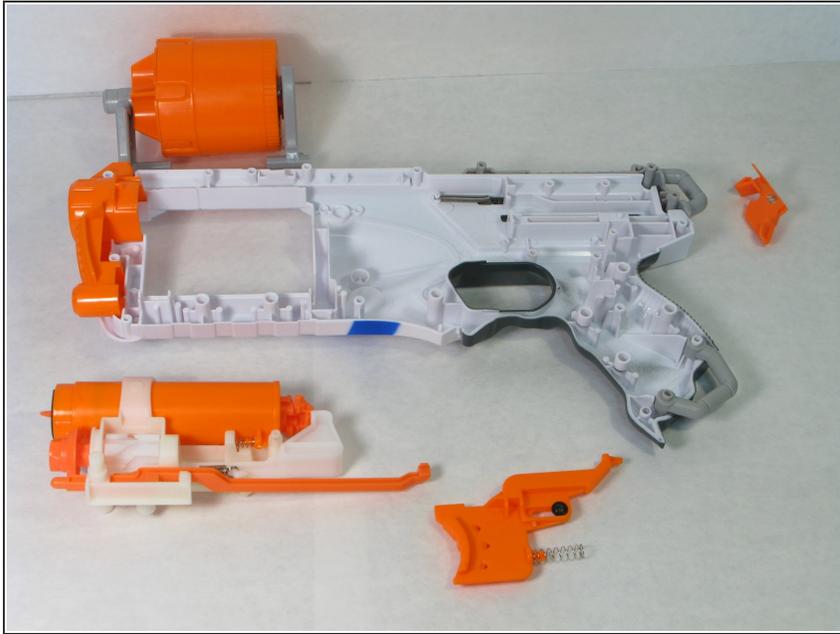


- Lift the Nerf dart cylinder and the firing mechanism (spring chamber).

### Step 4

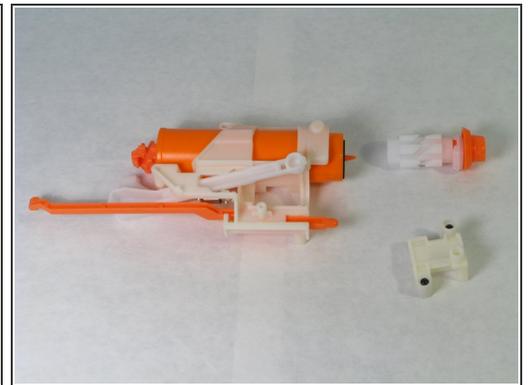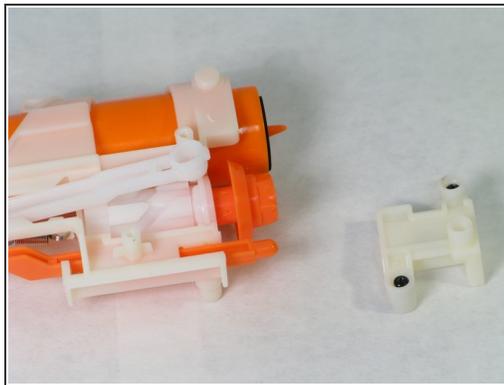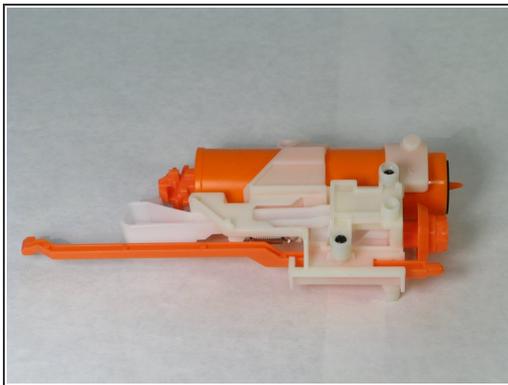




- Unscrew screws (2) from the cylinder rotator mechanism.

## Step 5

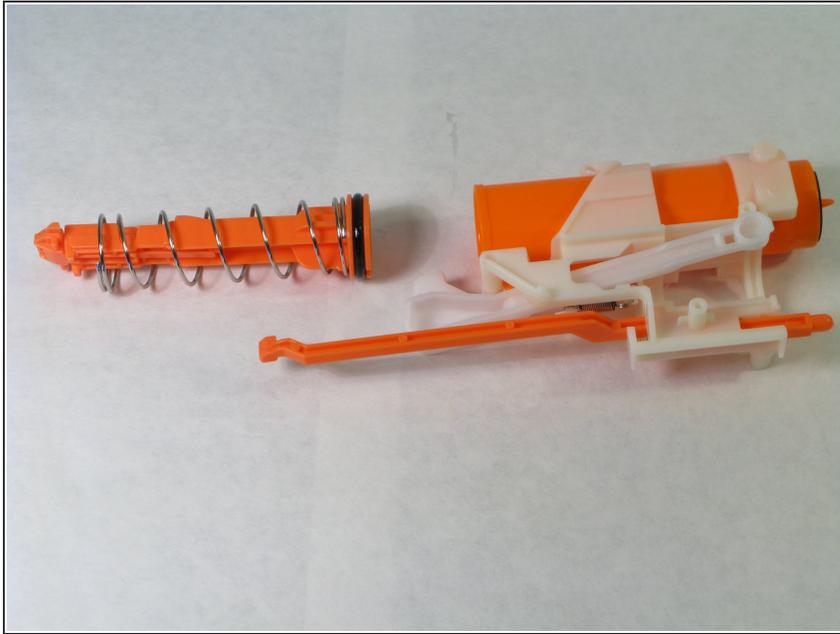

- Remove the air plunger and the spring from inside the chamber.

## Step 6

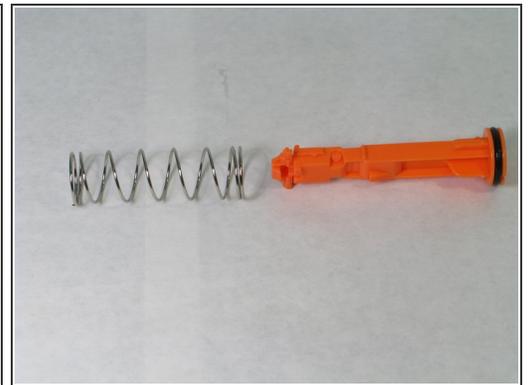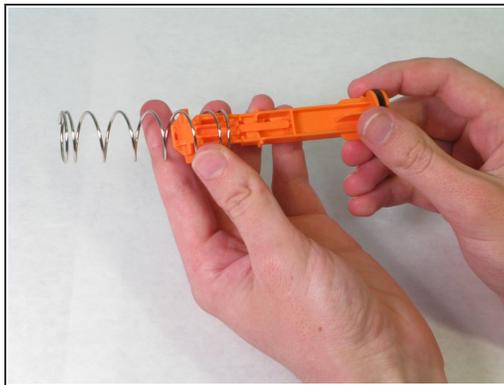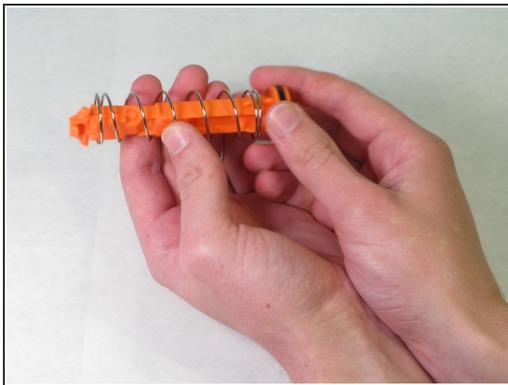


- Turn the spring counter-clockwise to free the spring. Be careful at the beginning and the end of the process.

## Step 7




- Replace the spring.
- The spring will be greasy. Don't be alarmed. Be careful at the beginning and the end of the process because it is like getting a key ring on at the notches, particularly at the top of the chamber.
- ⓘ Tip: If dry, use a little vegetable oil on the O-ring before putting it back.

## Step 8

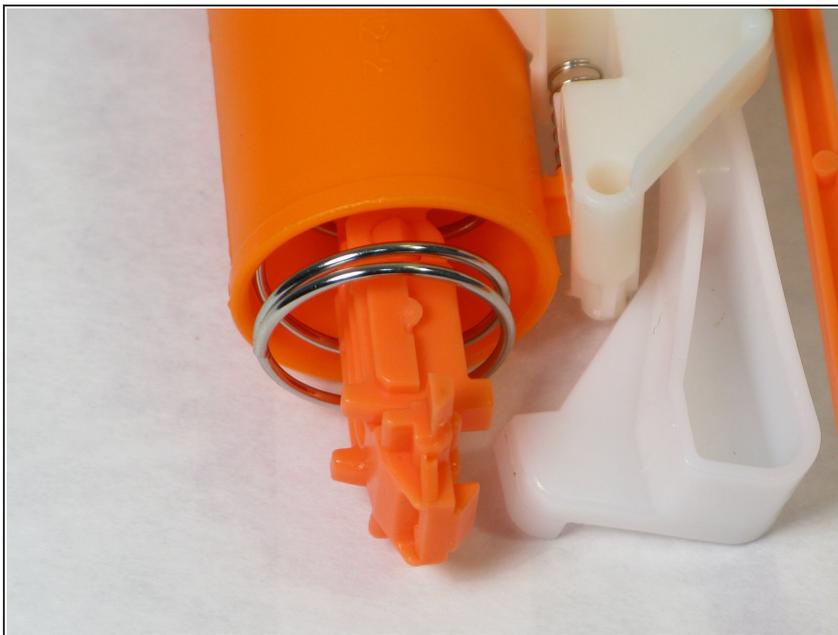


- Return the plunger to the spring chamber.

## Step 9

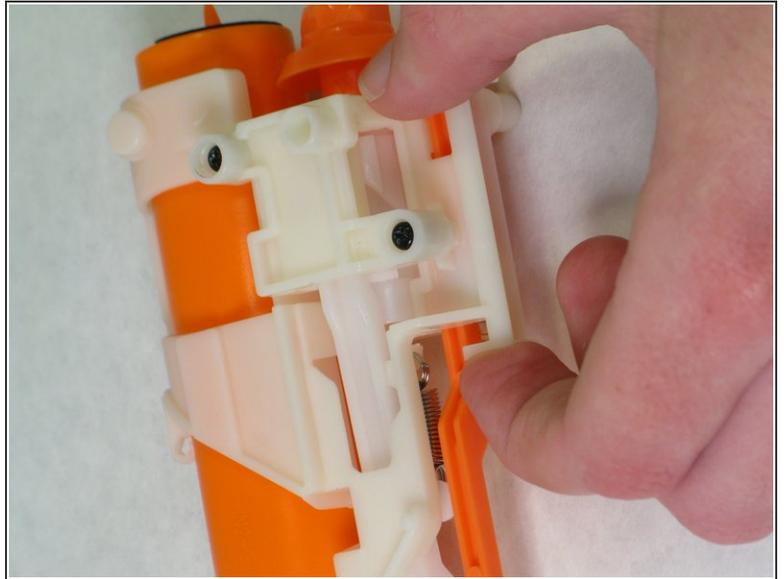


- Screw the cover back onto the cylinder rotator.

## Step 10

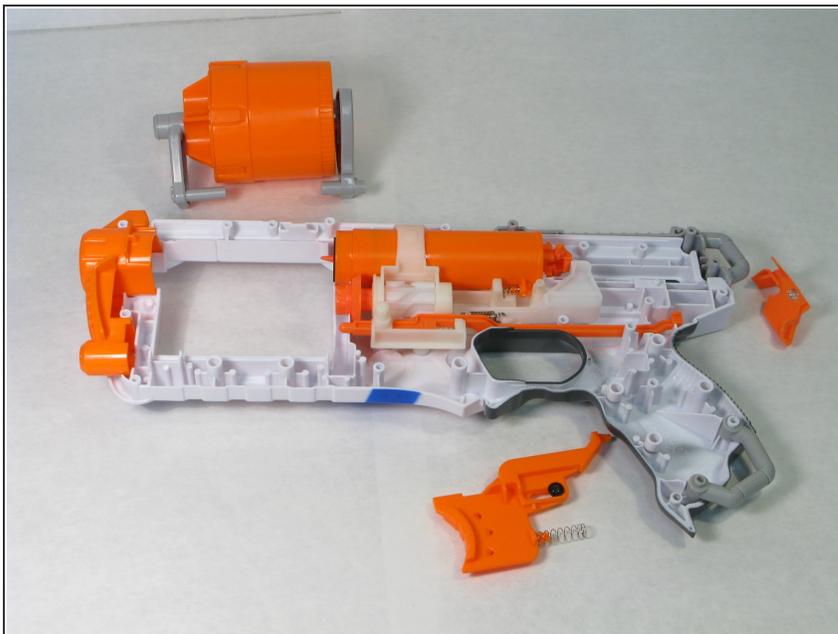

- Place the spring chamber and the Nerf bullet cylinder back into the base.

## Step 11

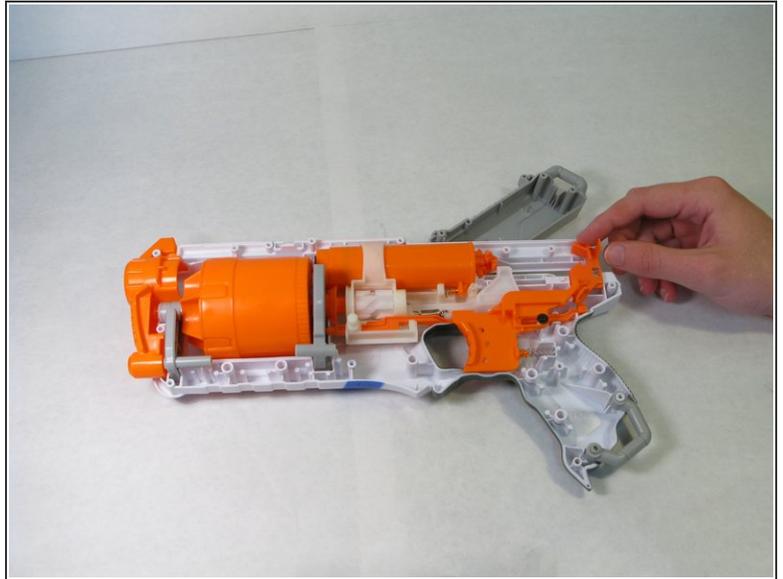

- Screw the trigger and the action back in. Swing the gray gun charging slide out when putting the action back in.

## Step 12



- Secure the cover and the charging slide with the 12 screws.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-14 05:21:34 PM (MST).

