



# Nintendo 3DS XL 2015 Battery Replacement

Removing the battery is essential to the...

Written By: Kobbe Farwick



# INTRODUCTION

Removing the battery is essential to the removal of other components on the Nintendo 3DS XL. Please remember to have the device powered off when following this guide.



## TOOLS:

- [JIS Driver Set](#) (1)
  - [Tweezers](#) (1)
- ESD Safe
- [iFixit Opening Tool](#) (1)



## PARTS:

- [Nintendo 3DS XL \(2012 or 2015\) Battery](#) (1)
- [Nintendo 3DS XL \(2015\) Rear Panel](#) (1)

## Step 1 — Battery



**⚠** Ensure your device is powered off before proceeding. Failure to do so may result in electrical shock or damage to the device.

- Place the 3DS upside down. Remove the game card, headphones, charging cable, stylus, or anything else that may be connected to the device.

## Step 2



- Using a JIS #0 screwdriver, loosen the two black screws on the back.
- i** The screws are held in place by captive washers and should not be completely removed.

## Step 3



- Once the screws are loosened, pry open the back cover.

## Step 4



- The battery is located on the left hand side of the 3DS - to remove, use the small gap located at the top-middle and pull up with a non metal pointed tool.

To reassemble your device, follow these instructions in reverse order.