


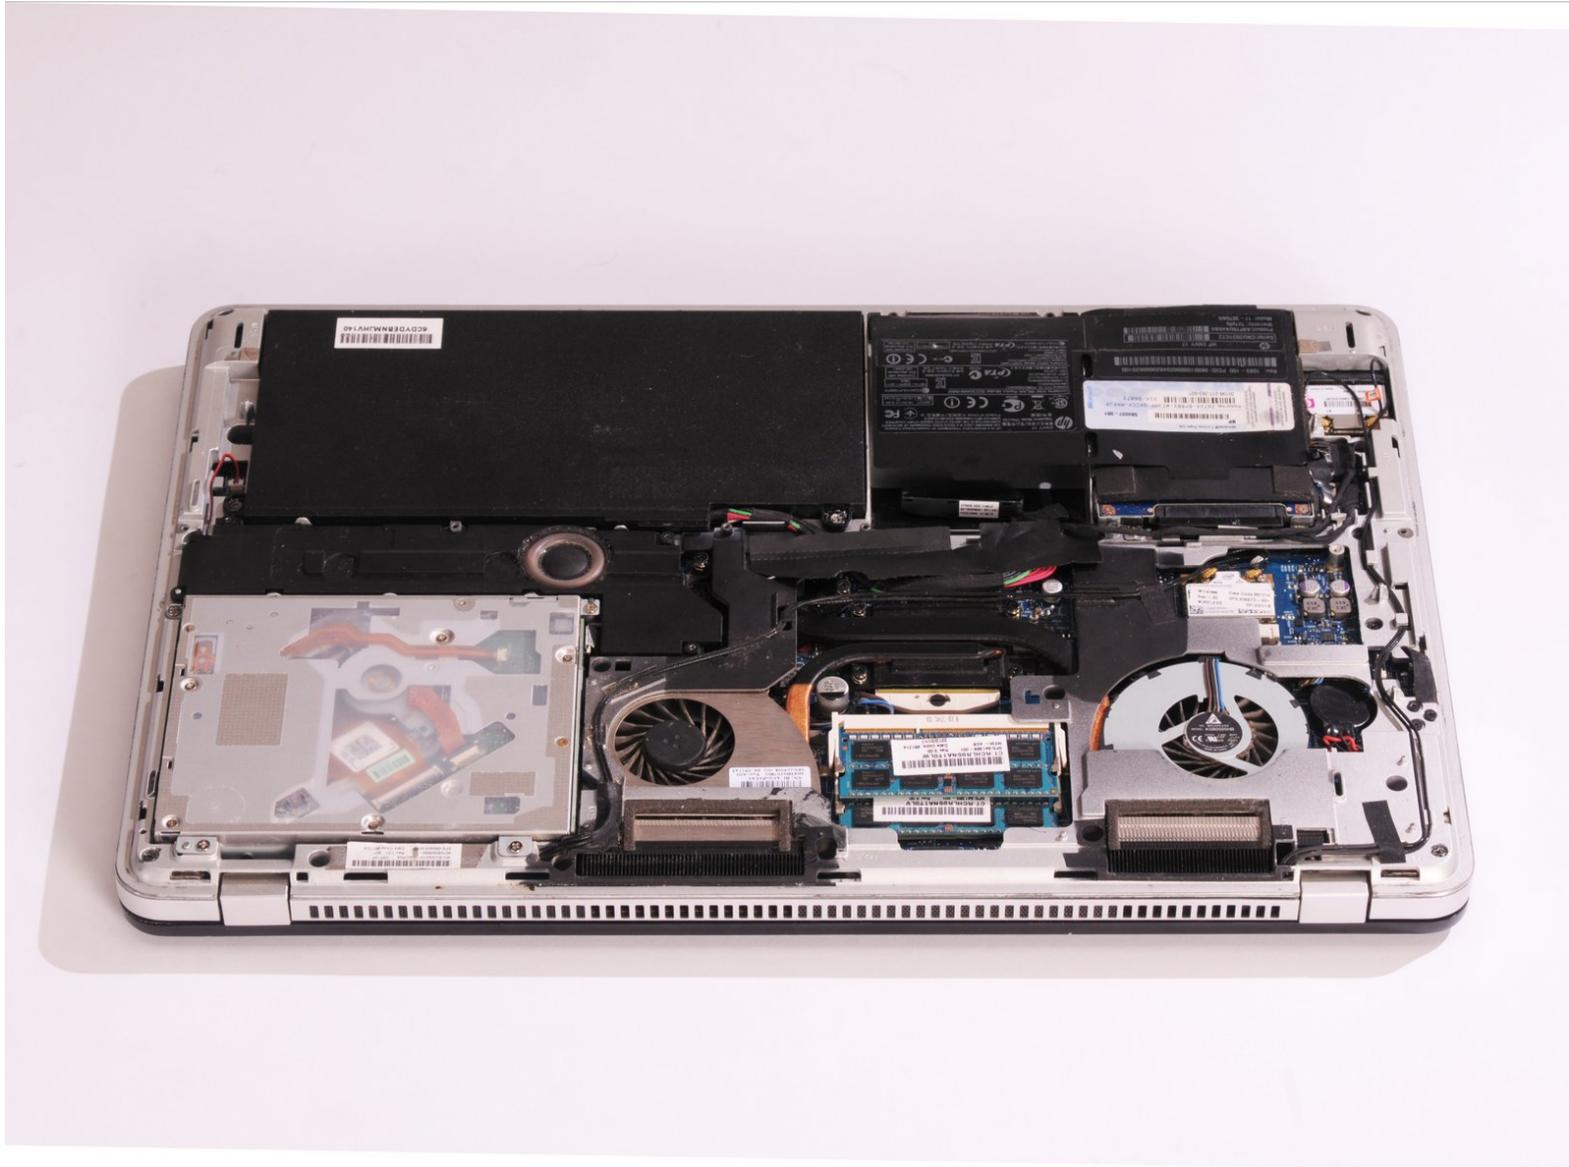

# HP Envy 17-3070NR Back Cover Replacement

Follow this guide if you want to replace the back cover of your HP Envy 17-3070NR.

Written By: Abby Lentz



---

## INTRODUCTION

This 2-step instruction guides the users to replace the back cover of HP Envy 17-3070NR. In order to fix the hardware inside the laptop, it is very important to remove its back cover first. The instruction can be further used for [RAM replacement](#), [subwoofer replacement](#), and [battery replacement](#) for this computer model.

Before taking apart the computer, make sure to power off your computer completely and disconnect from any external power source. In step two of this guide, you will need a Phillips #2 screwdriver to remove six 3.7mm screws.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-




## Step 1 — Back Cover



**!** Before you begin taking apart the computer, make sure that it is completely powered off.

- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

## Step 2

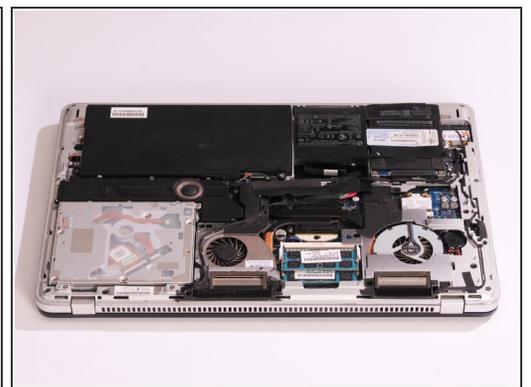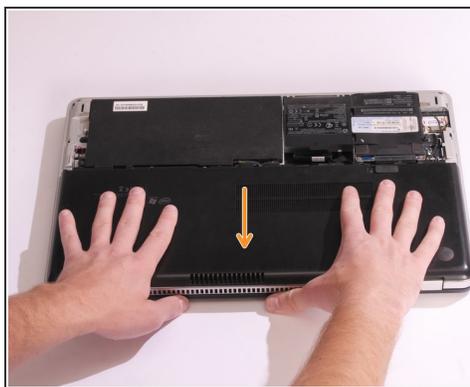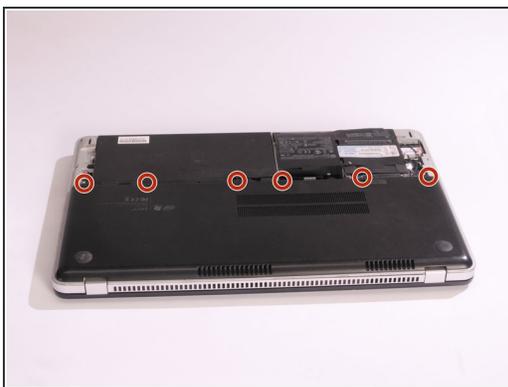

- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2021-01-04 05:14:55 PM (MST).

