


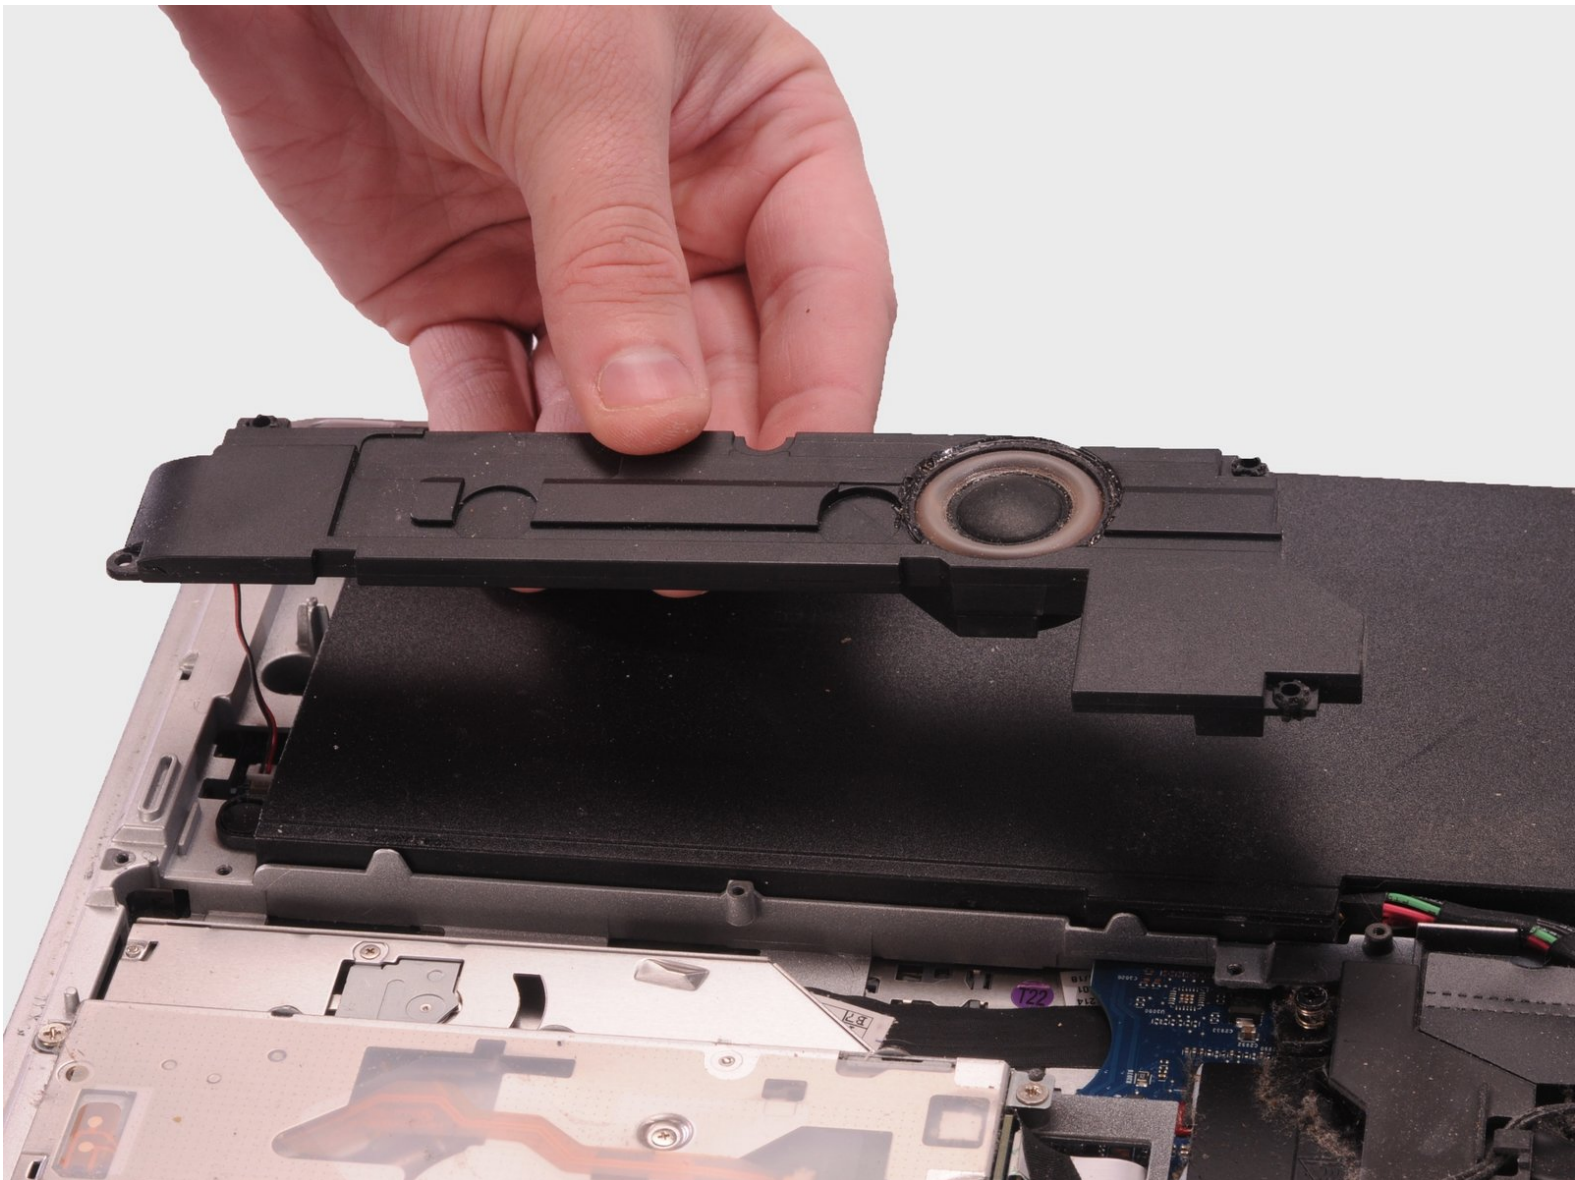

# HP Envy 17-3070NR Subwoofer Replacement

In this guide, we will show you how to replace subwoofer on your HP Envy 17-3070NR.

Written By: Abby Lentz



---

## INTRODUCTION


The subwoofer gives this laptop a much deeper sound compared to other ones. This guide will show you how to replace it, should the original fail in your HP Envy 17-3070NR.


---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-




## Step 1 — Back Cover

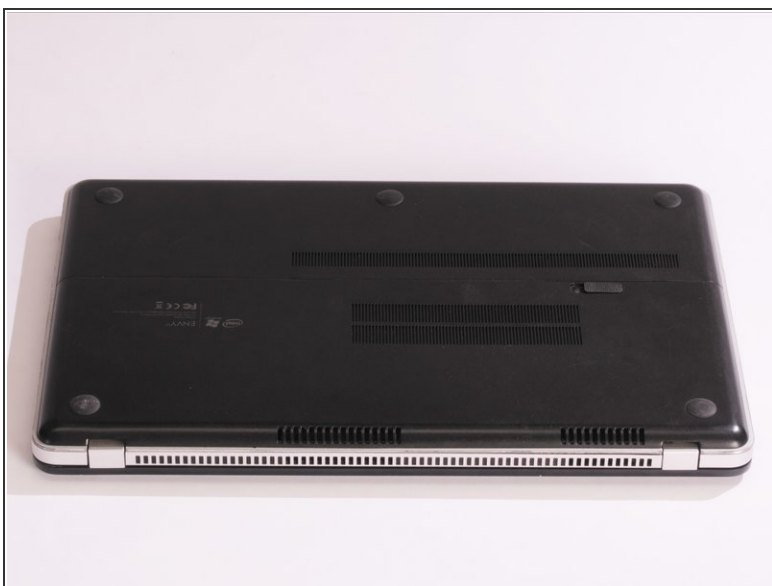

 Before you begin taking apart the computer, make sure that it is completely powered off.



- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

## Step 2

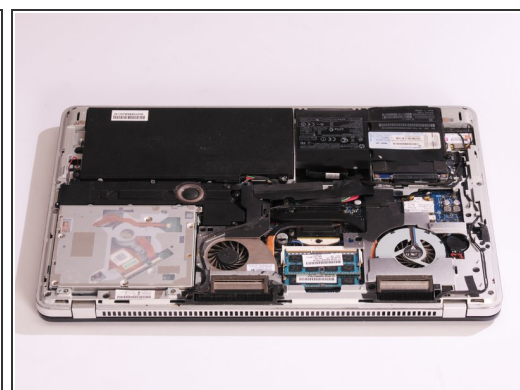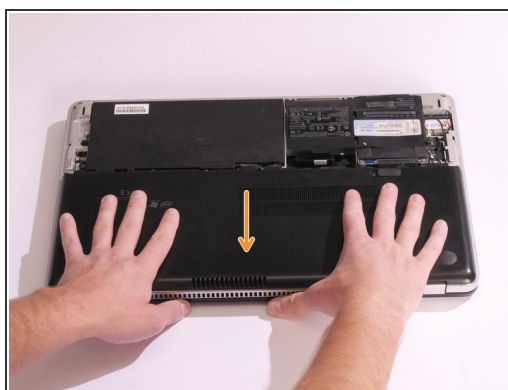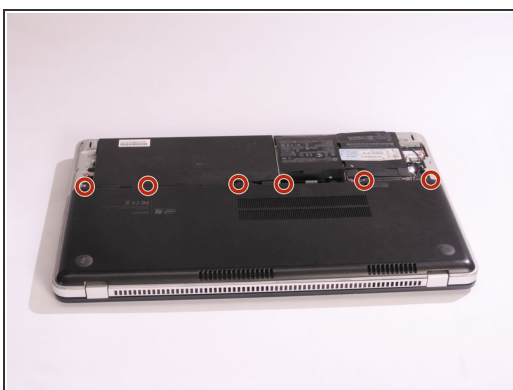

- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

## Step 3 — Subwoofer

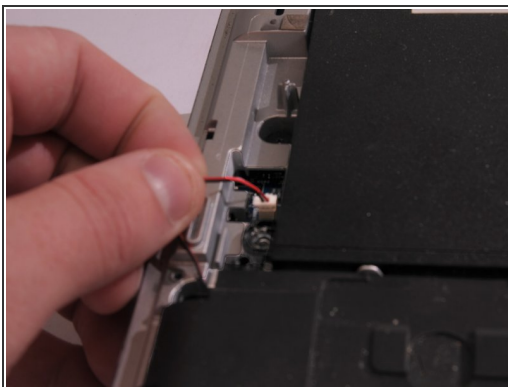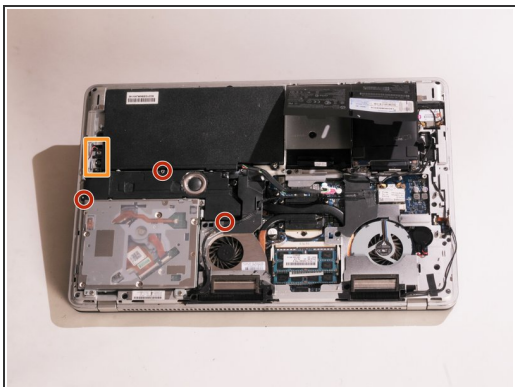

- Unscrew the three 6.5mm Phillips shoulder screws that connect the subwoofer to the computer.
- Disconnect the red and black subwoofer cable from the system board by pulling it upwards.
- Remove the subwoofer by pulling straight up from the main assembly.

To reassemble your device, follow these instructions in reverse order.