


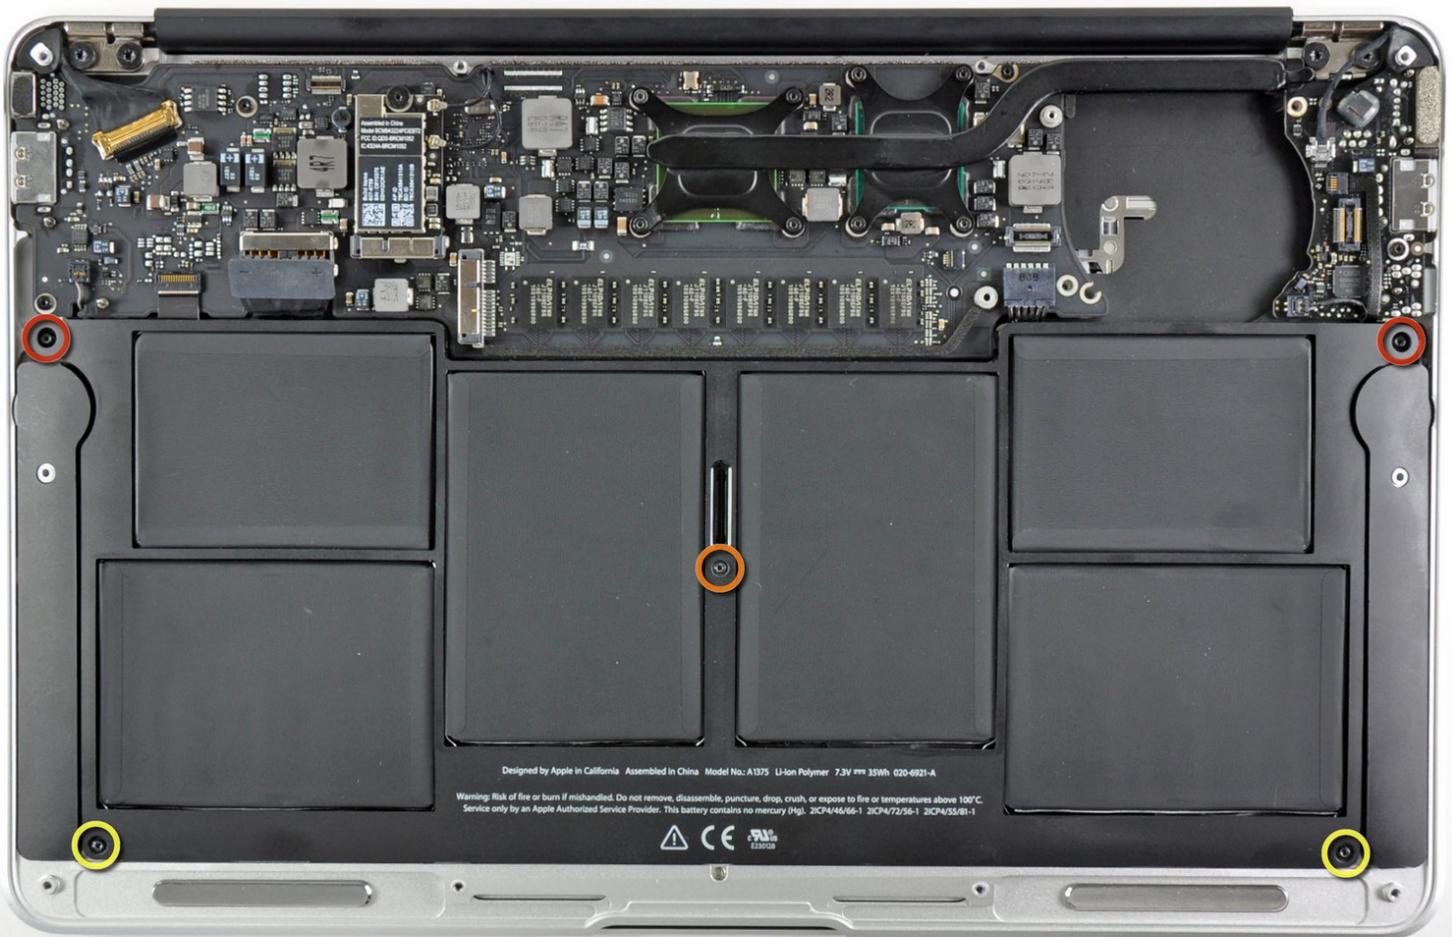

MacBook Air 11" Late 2010 Battery Replacement

Internal Prereq for battery removal when fan is out.

Written By: Andrew Bookholt



INTRODUCTION

Internal Prereq for battery removal when fan is out.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the following five screws securing the battery to the upper case:
 - Two 5.2 mm T5 Torx screws
 - One 6 mm T5 Torx screw
 - Two 2.6 mm T5 Torx screws

Step 2



- ⚠ Do not touch or squeeze the six lithium polymer cells when handling the battery.
- Lift the battery from its edge nearest the logic board and remove it from the upper case.

To reassemble your device, follow these instructions in reverse order.