




Nokia Lumia 720 Audio Jack Connector, Wireless Charging Flex and Camera Flash Replacement

Nokia Lumia 720 Audio Jack Connector, Wireless Charging Flex and Camera Flash Replacement

Written By: ZFix

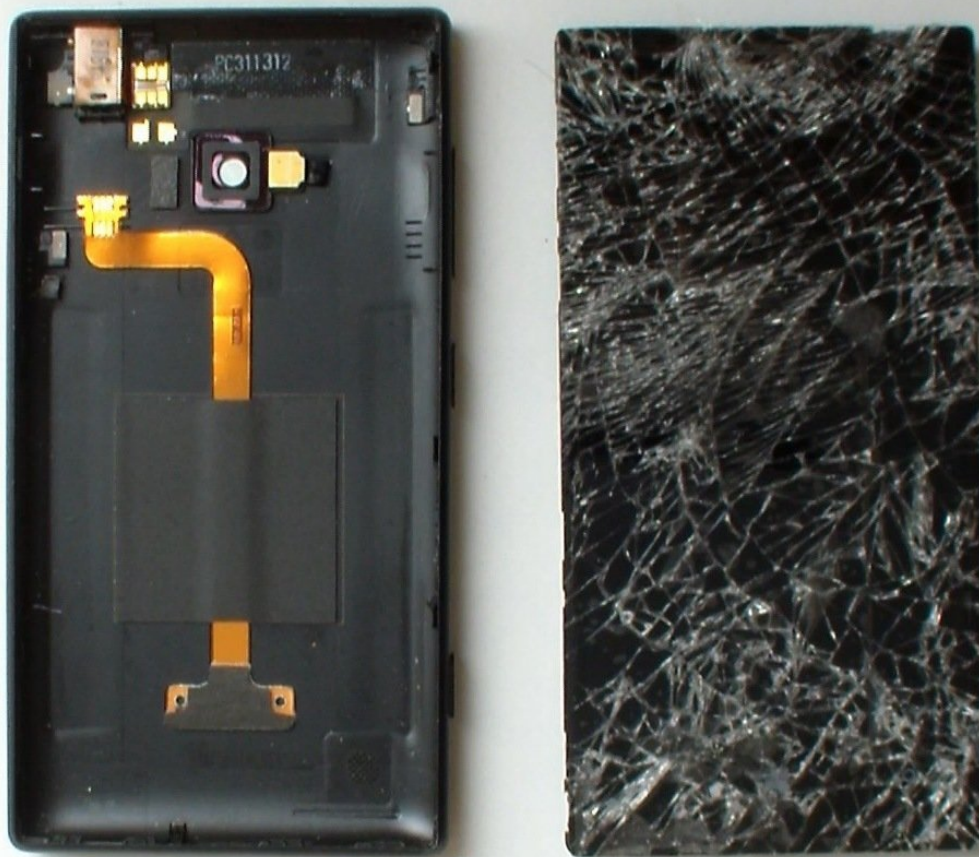

INTRODUCTION

Nokia Lumia 720 - How to replace Audio Jack Connector, Wireless Charging Flex or Camera Flash.

[video: https://www.youtube.com/watch?v=wseNxvPm_po]



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T2 Torx Screwdriver](#) (1)
-

Step 1 — BATTERY COVER - PART 1




- Remove the SIM card tray and the memory card try.
- Use a screwdriver Torx T2 and remove the screw under the SIM card tray.
- Use plastic tools and start the separating the back cover from the top side.

Step 2 — BATTERY COVER - PART 2

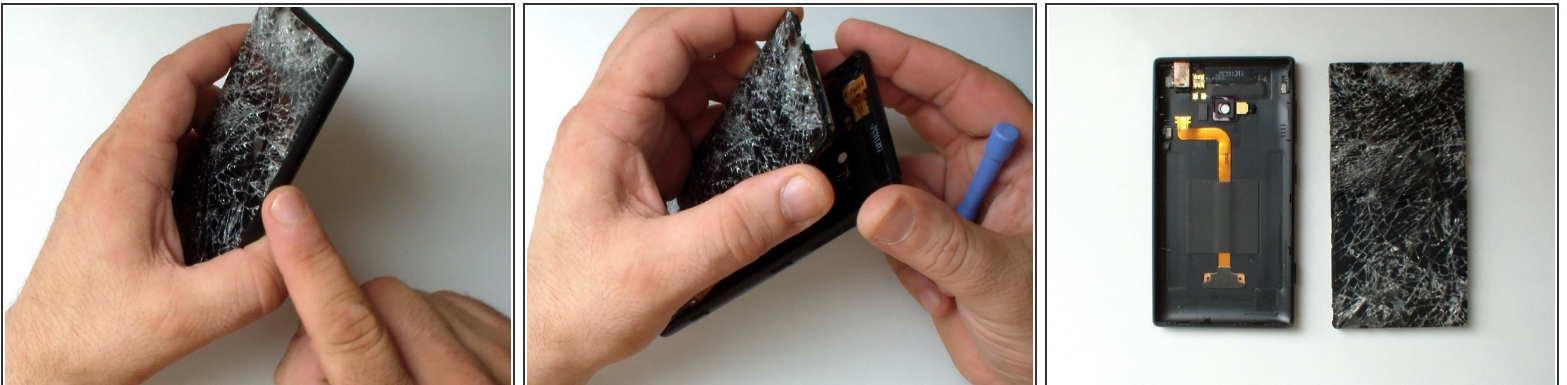

Be careful with the volume buttons.

Step 3 — Audio Jack Connector, Charging Flex and Camera Flash

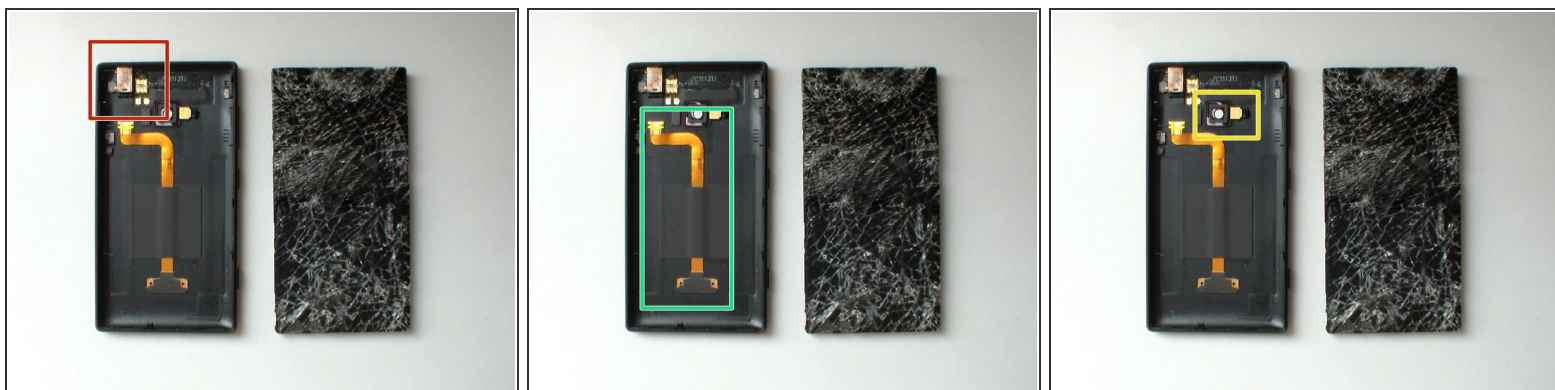

- Headphones Jack Connector.
- Wireless Charging Flex cable
- Camera Flash

To reassemble your device, follow these instructions in reverse order.