



How to Replace the Wiper Arm(s) of a 2005 Toyota Corolla

Replace the windshield wiper arm of a 2005 Toyota Corolla.

Written By: Nicholas Imbriale



INTRODUCTION

Replacing your wiper arms is necessary if you have experienced windshield streaks even after replacing your wiper blades. Furthermore, it's a good idea to replace your wiper arms if they have been exposed to harsh weather for a significant amount of time. This guide will take you step by step through the process of removing your wiper arm and replacing it with a new one.



TOOLS:

- [14 mm socket](#) (1)
- [Socket Wrench](#) (1)
- [Flathead Screwdriver](#) (1)



PARTS:

- [windshield wiper arms](#) (1)

Step 1 — Wiper Arm



- Take the tip of your flathead screwdriver, and wedge it underneath the wiper cap.
- Firmly pry the wiper cap upwards until it's completely off.

Step 2



- Place the head of your ratchet on the exposed nut.
- Loosen the nut by turning your ratchet counter clockwise.

Step 3



- Once the nut is loose enough, you may grab it and place it to the side.

Step 4



- Firmly grip the lower end of the wiper arm.
- Pull it towards you, so that the wiper arm is extended in the upward position.

Step 5



- While holding the lower end of the wiper arm, tug the wiper arm upwards until completely detached.
- ⓘ Don't be discouraged if the wiper arm isn't detached right away. You may have to tug upwards a few times to detach it.

Step 6



- Have your new wiper arm extended in the upward position (just how your old wiper arm was extended at the end of Step 4).
- Take your wiper arm, and center its hole on the exposed metal threading.

Step 7



- Once the wiper arm has been placed onto the metal threading, firmly grip the lower end of the wiper arm.
 - Slowly push the wiper arm downwards and away from you, so that it's flat with the windshield.
- ⚠ Make sure to do this slowly so that your fingers are not compressed by the wiper arm and the windshield.

Step 8



- Place the same nut from earlier onto the exposed threaded metal.
- Place the head of your ratchet onto the nut.
- Tighten the nut by turning your ratchet clockwise, until it can no longer be tightened.

Step 9



- Firmly press the wiper cap upon the exposed nut.
- Once the wiper cap is secure, you may repeat steps 1-9 to the other wiper arm.

Once you have replaced one of your wiper arms, repeat the same process for the remaining wiper arm.