




# Kodak S100 EF Front Cover Replacement

This will guide in taking off the front cover to get inside the Kodak S100 EF.

Written By: Michelle

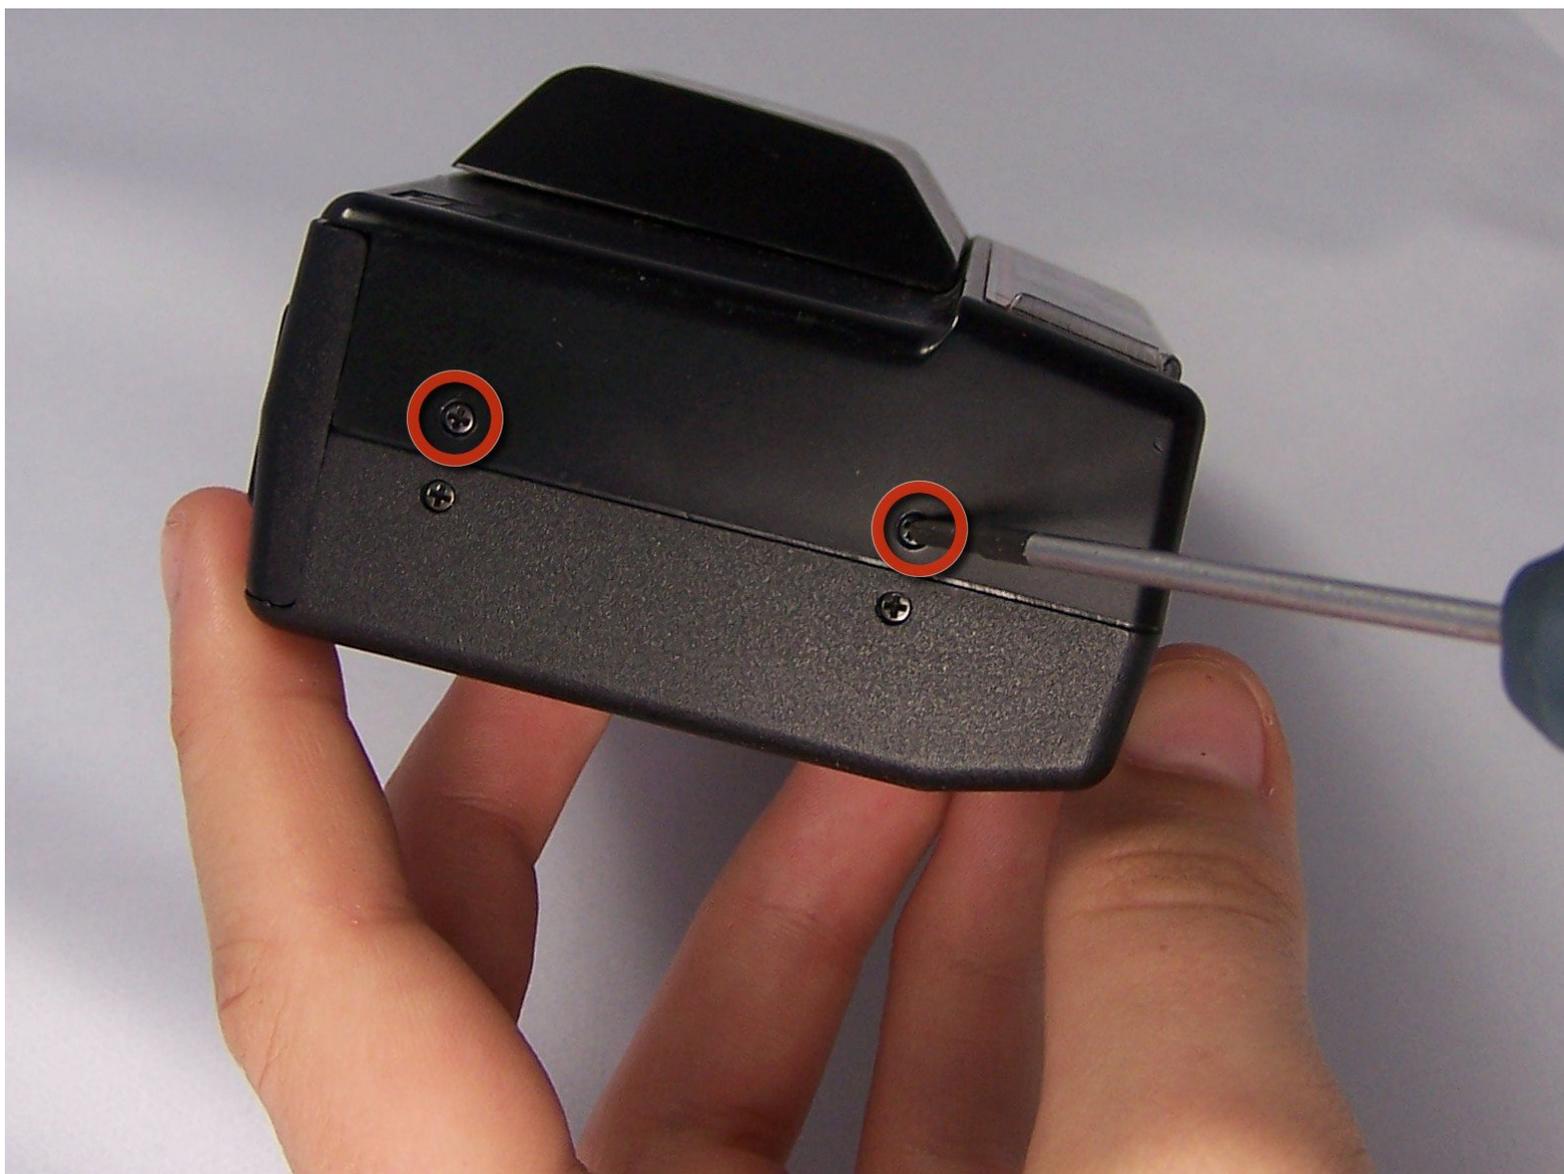

---

## INTRODUCTION


Use this guide to replace the front cover.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Front Cover

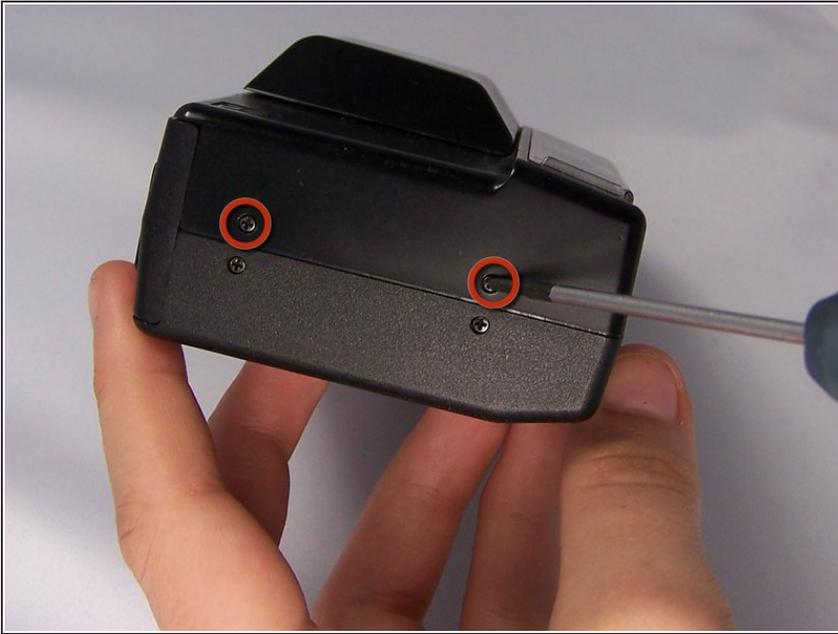

- ⓘ Have the camera facing upwards and the flash closest to you.
- Unscrew the two 6.2 mm Phillips screws on the top half of the camera.

## Step 2



- ⓘ Flip the camera over to the other side-with flash farthest from you.
- Unscrew top two 6.2mm Phillips screws on this side.

### Step 3



- ① Turn the camera so the bottom is facing up with the front-facing away.
- Unscrew the 6.2mm Phillips screw on the top right.
- The front cover is now unscrewed and should be lifted evenly and removed.

To reassemble your device, follow these instructions in reverse order.