



Nikon Coolpix S5200 Plastic Back Cover Replacement

Use this guide to help take off the back cover of your Nikon Coolpix S5200 so you can get back to taking pictures of the people and things you love.

Written By: Andy Powers





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Plastic Back Cover



- Locate the left side of the camera

Step 2



- Remove the two 0.1 mm screws using a Phillips Head screwdriver in order to properly open the camera

Step 3



- Carefully lift the plastic back cover away from the camera
- Remove the plastic cover from the camera

Step 4



- Carefully push the rubber button cover up and out of the plastic cover
- The plastic cover has been properly removed and is ready to be replaced

To reassemble your device, follow these instructions in reverse order.