




Asus Transformer Pad Infinity Battery Replacement

This guide will demonstrate how to replace the battery of the device.

Written By: Allison Poh

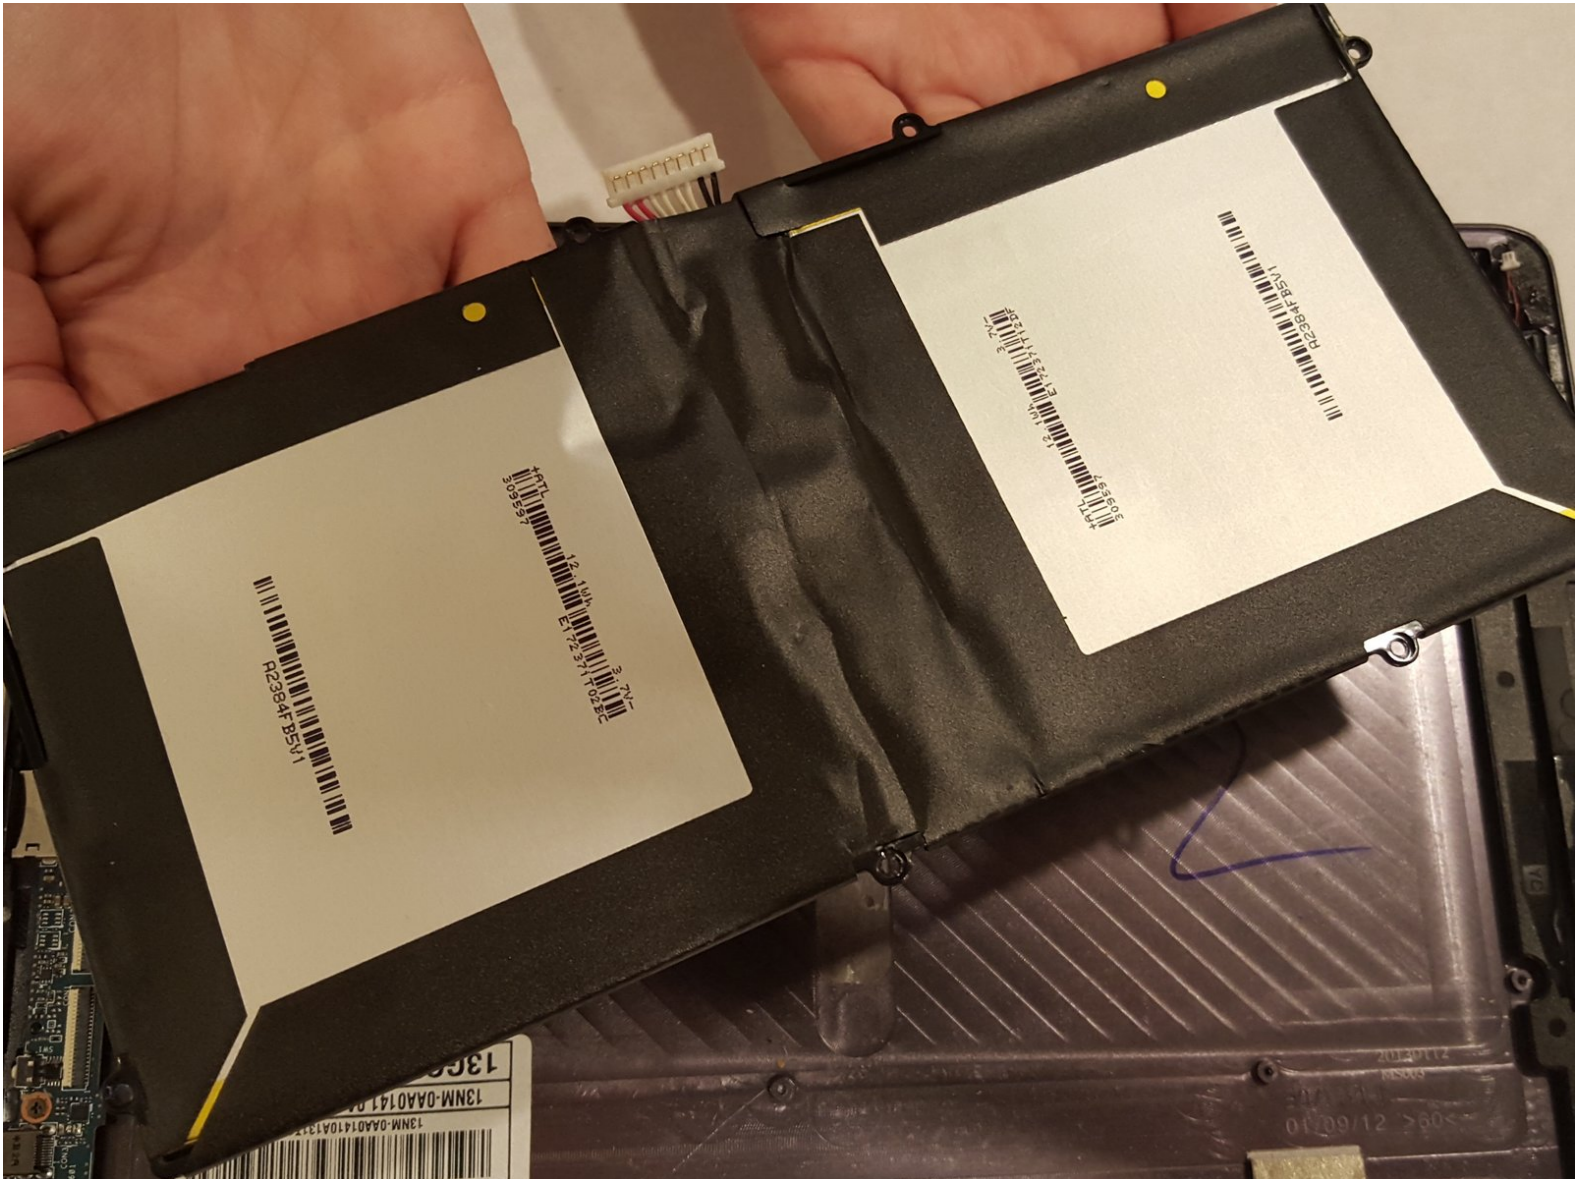

INTRODUCTION

Replacing the battery involves opening up the device. Prerequisites; follow the [Asus Transformer Pad Infinity Teardown](#) link up to step 6 to remove the screen.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Tweezers - Pro/ESD/Angled](#) (1)
- [Spudger Plastic opening tool screwdriver](#) (1)
- [Anti-Static Wrist Strap](#) (1)




optional



PARTS:


- [ASUS Transformer Pad Infinity \(TF700T\) Battery](#) (1)

Step 1 — Battery

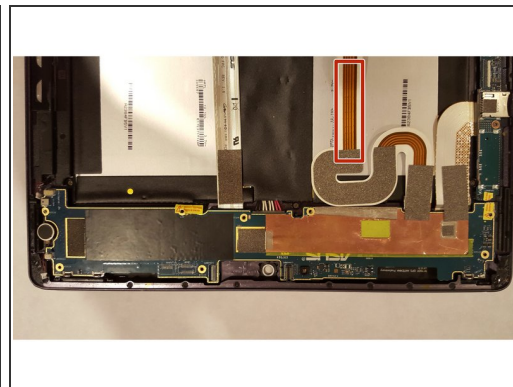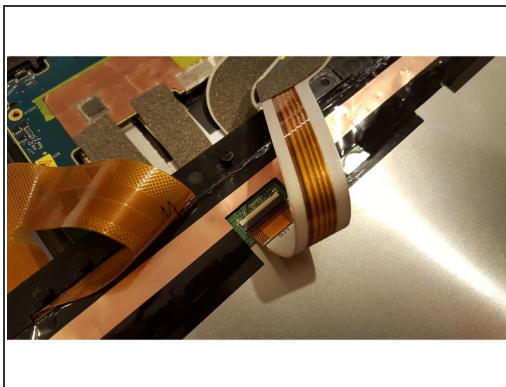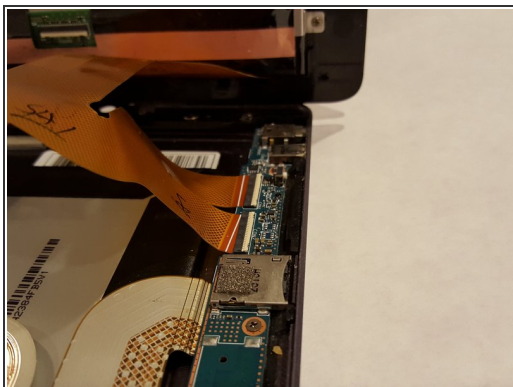


- Disconnect the long silver ribbon connector from the screen.
- Remove the orange ribbon connector with the two connections.

Step 2

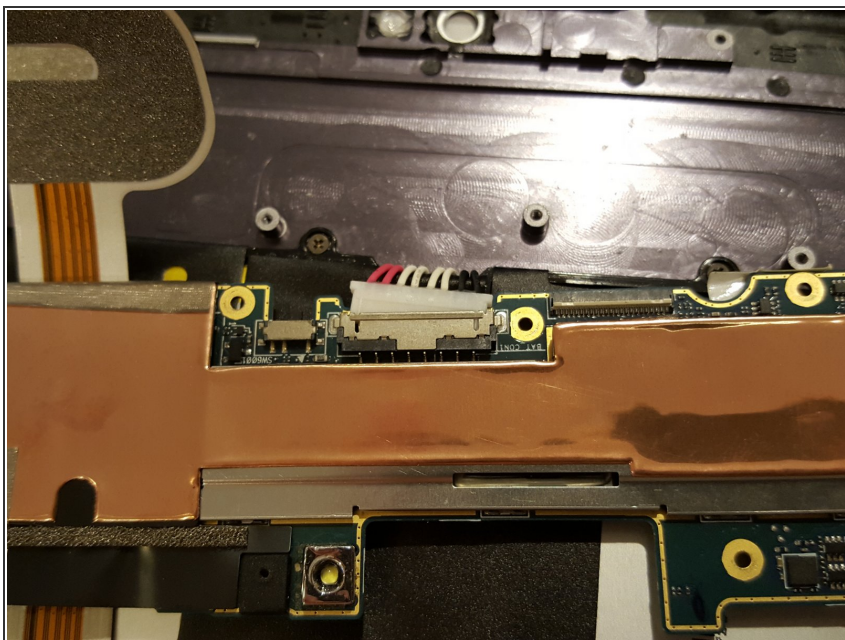


- Disconnect the battery from the big motherboard.

Step 3

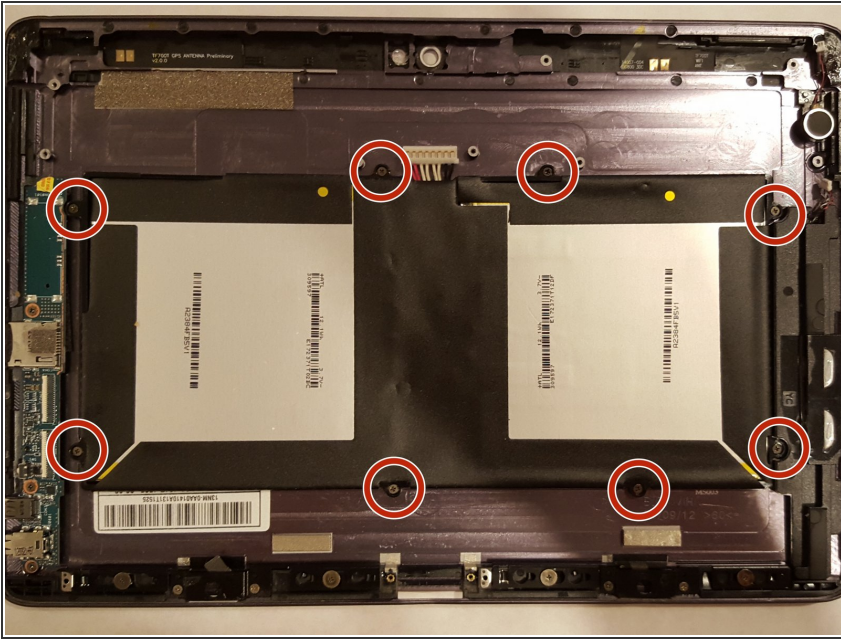

- Unscrew all eight screws connecting the battery to the case.
- Remove the battery.

Step 4

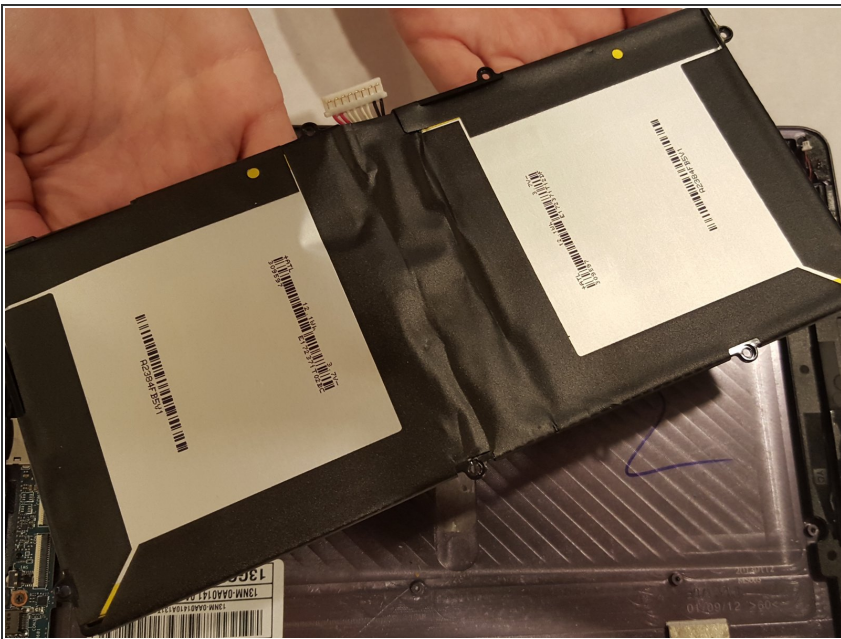

- Place the new battery in the same spot as the old battery.
- Screw the eight screws back in place to connect the new battery to the case.

To reassemble your device, follow these instructions in reverse order.