



Macintosh PowerBook 1400 Series CD-ROM Drive Replacement

In order to repair any part of the Macintosh PowerBook 1400c, you must first take out the battery and then take out the CD-ROM Drive.

Written By: Corinne Schnieders



INTRODUCTION

This repair guide will show you how to replace the CD-ROM Drive.

Step 1 — Battery



- Turn the device upside down and then locate the battery latch near the front of the device.

Step 2



- Slide the latch to the left to release the battery.

Step 3



- Continue holding the latch then gently pull the battery out of the device.
- ⓘ Place the battery in a safe location.

Step 4 — CD-ROM Drive



- Locate the CD-ROM Drive latch.

Step 5



- Slide the latch to the right to release the CD ROM drive.

Step 6



- Continue holding the latch then gently pull the CD-ROM Drive out of the device.
- ⓘ Place the CD ROM drive in a safe location.

To reassemble your device, follow these instructions in reverse order.