



Canon PowerShot SD700 E18 Error Replacement

If you experience the E18 error, go to this...

Written By: Aaron Lee

INTRODUCTION

If you experience the E18 error, go to this [site](#) and try their solutions.

If you still experience the error, you can follow this guide to disassemble the camera and manually clean the inside of the camera and the lens.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[Soft Brush](#) (1)

[Tweezers](#) (1)

[Spudger](#) (1)

[Dust Blower](#) (1)

Step 1 — Outside Case



- Turn off the camera by pressing the power button above the LCD screen.

Step 2



- Remove the two, small screws on the bottom of the camera using a Phillip's #00 screwdriver.

Step 3



- Use a Phillips #00 screwdriver to remove the two, small screws on the right side of the camera.

Step 4



- Use a Phillips #00 screwdriver to remove the screw on the left of the camera under the A/V out Digital label.

Step 5




- Use a Phillips #00 screwdriver, remove the screw on the bottom of the camera near the battery and memory card slots.
- ① This screw will be longer than the rest of the screws.

Step 6



- Remove the front, back, and side casings from the camera and set to the side.

Step 7 — E18 Error

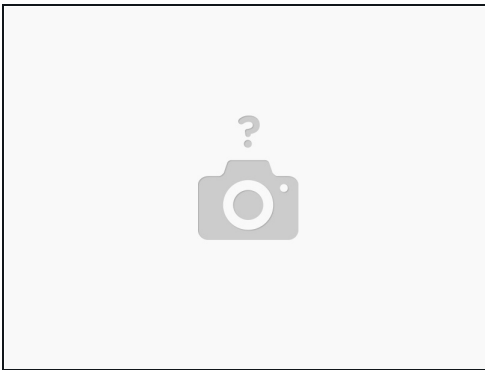

- Clean the lens and the area surrounding the lens with a soft brush and [dust blower](#).
- ① Tweezers can be helpful when removing sand.
- ☒ Reassemble the camera and if the E18 error persists, further disassembly of the camera may be required.

To reassemble your device, follow steps 1-6 instructions in reverse order.